



use & care guide

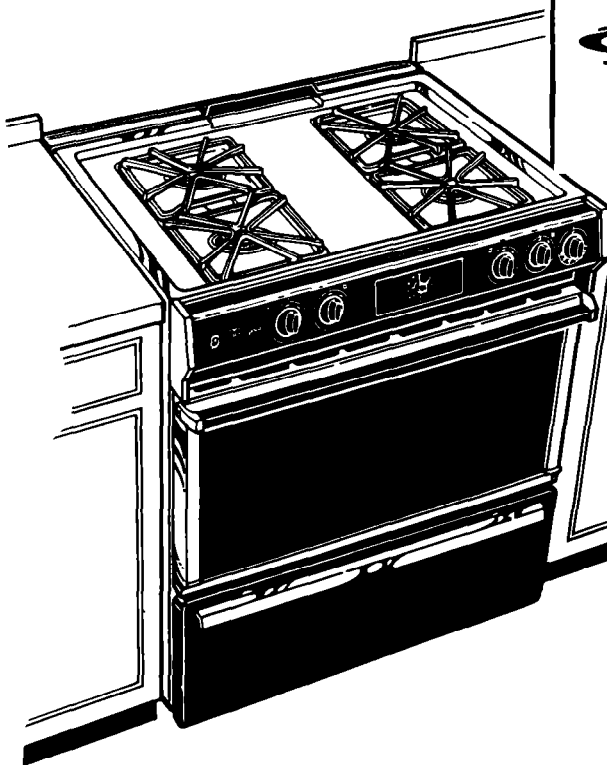

SLIDE-IN GAS RANGE

**Continuous-Cleaning
Model SS333PET/PST
and
Model SS313PET/PST**

Washers, Clothes Dryers, Freezers, Refrigerator-Freezers, Ice Makers, Dishwashers, Built-In Ovens and Surface Units, Ranges, Microwave Ovens, Trash Compactors

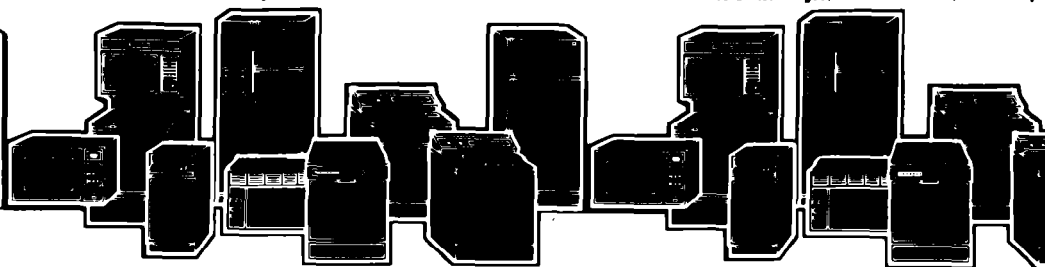

Contents

	Page		Page
BEFORE YOU USE YOUR RANGE.	2	Surface Burner Grates and Reflector Pans	12
IMPORTANT SAFETY		Removable Cooktop	13
INSTRUCTIONS	3	Surface Burners	14
PARTS AND FEATURES	5	Oven Door	14
USING YOUR RANGE.	6	Continuous-Cleaning Oven ..	15
Using the Surface Burners ...	6	Standard Oven Cleaning ...	16
Setting the Clock	7	Cleaning Chart	17
Using the Minute Timer	8	Oven Light	19
Using the Oven Temp Control ..	8	Optional Trim Kit	19
Baking	8	IF YOU NEED SERVICE OR	
Broiling	9	ASSISTANCE	20
Oven Vent	10	WHIRLPOOL RANGE	
Lighting Standing Pilots	11	WARRANTY	24
CARING FOR YOUR RANGE	12		
Control Panel	12		

*Tmk.

©1988 Whirlpool Corporation

Before you use your range

Read and carefully follow the "INSTALLATION INSTRUCTIONS" packed with your range.

Read this Use & Care Guide and the Cooking Guide for important safety information.

• **FOR YOUR SAFETY •**
TO PREVENT FIRE AND EXPLOSION, DO NOT STORE OR USE GASOLINE OR OTHER FLAMMABLE VAPORS AND LIQUIDS IN THE VICINITY OF THIS OR ANY OTHER APPLIANCE.

• **FOR YOUR SAFETY •**
IF YOU SMELL GAS:
1. OPEN WINDOWS.
2. DON'T TOUCH ELECTRICAL SWITCHES.
3. EXTINGUISH ANY OPEN FLAMES.
4. IMMEDIATELY CALL YOUR GAS SUPPLIER.

• **FOR YOUR SAFETY •**
DO NOT OBSTRUCT THE FLOW OF COMBUSTION AND VENTILATION AIR.

You are personally responsible for:

- Reading and following all safety precautions in this Use & Care Guide and the Cooking Guide.
- Having your range installed by a qualified installer.
- Installing the range where it is protected from the elements, and on a level floor strong enough to hold its weight.
- Having your range properly connected to electrical supply and grounded. (See "Installation Instructions".)
- Having your range properly connected to the proper gas supply and checked for leaks. (See "Installation Instructions".)
- Making sure the range is not used by children or anyone unable to operate it properly.
- Properly maintaining your range.
- Using the range only for jobs expected of a home range.

See "Cooking Guide" for important safety and use information.

IMPORTANT SAFETY INSTRUCTIONS



WARNING: When using your range, follow basic precautions, including the following:

- 1. DO NOT** allow children to use or play with any part of the range, or leave them unattended near it. They could be burned or injured.
- 2. DO NOT** store things children might want above the range. Children could be burned or injured while climbing on it.
- 3. DO NOT** allow anyone to touch a hot surface burner, oven burner or areas around them. They could be hot enough to burn severely.
- 4. KEEP** children away from the range when it is on. The cooktop, oven walls, racks and door can be hot enough to cause burns.
- 5. DO NOT** use a range to heat a room. Persons in the room could be burned or injured, or a fire could start.
- 6. KEEP** pan handles turned in, but not over another surface burner to prevent burns, injury and to help prevent the utensil from being pushed off the cooktop.
- 7. DO NOT** use water on grease fires. The fire will spread. Cover fire with large lid or smother with baking soda or salt.
- 8. DO NOT** wear loose or hanging garments when using the range. Garments could ignite if they touch a hot burner or surrounding area and you could be burned.
- 9. DO NOT** heat unopened containers. They could explode. The hot contents could burn and container particles could cause injury.
- 10.** When adding or removing food, **MAKE SURE** to open the oven door all the way to prevent burns.

continued on next page

- 11. DO NOT** use a wet pot holder. Steam burns can result. **DO NOT** use a towel or bulky cloth as a pot holder. They could catch fire and burn you.
- 12. MAKE SURE** the utensils you use are large enough to contain food and avoid boil-overs and spill-overs. This will help prevent hazardous build-ups of food. Heavy splattering or spill-overs left on a range can ignite and burn you. Pan size is especially important in deep fat frying.
- 13. DO NOT** leave surface burners on high heat settings. Boil-overs and greasy spill-overs could cause steam, smoke and could ignite and burn you.
- 14. GREASE** is flammable and should be handled carefully. Let fat cool before attempting to handle it. **Do not allow grease to collect around range or in vents.** Wipe spill-overs immediately.
- 15. NEVER** use a match or other flame to look for a gas leak. Explosion and injury could result.
- 16. DO NOT** repair or replace any parts unless specifically recommended in this manual. All other servicing should be referred to a qualified service technician.
- 17. DO NOT** use oven for storage. Stored items and range could be damaged if oven is turned on accidentally.

• FOR YOUR SAFETY •

DO NOT STORE OR USE GASOLINE OR OTHER FLAMMABLE VAPORS AND LIQUIDS IN THE VICINITY OF THIS OR ANY OTHER APPLIANCE. THEY COULD IGNITE CAUSING EXPLOSION AND/OR FIRE.

— SAVE THESE INSTRUCTIONS —

Copy your Model and Serial Numbers here

If you need service, or call with a question, have this information ready:

- 1. Complete** Model and Serial Numbers (from the plate located as shown).

Model Number

- 2.** Purchase date from sales slip.

Serial Number

Copy this information in these spaces. Keep this book and your sales slip together in a handy place.


Purchase Date

Thank you for purchasing a Whirlpool product. Please complete and mail the Owners Registration Card furnished with this product.


Service Company Phone Number

Parts and features

Models SS333PET/PST and SS313PET/PST

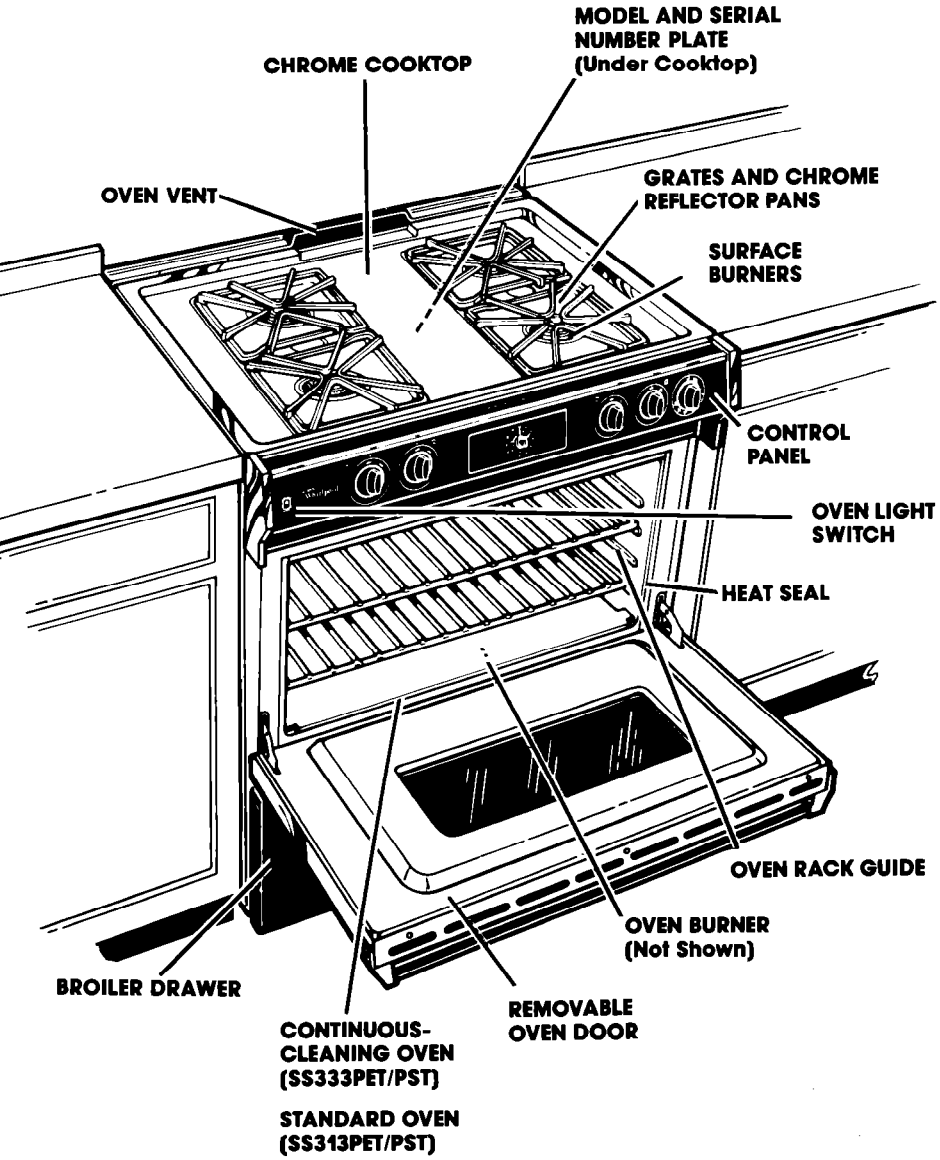


Using your range

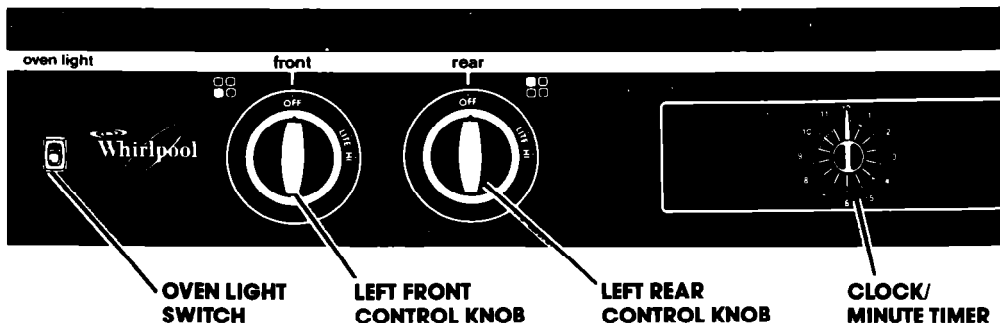

Using the Surface Burners

These ranges are equipped with either standing pilots or electronic ignitors. Standing pilots must be lit initially with a match following the directions on page 12. The pilot light will remain lit when the burners are turned off. To turn a burner on again, just push in and turn the control knob to LITE and the burner will light. Electronic ignitors automatically light the burners each time they are used.

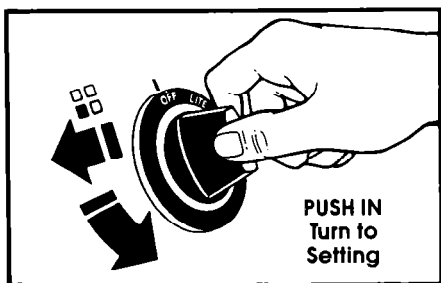

Control knobs must be pushed in, then turned to LITE position. On electronic ignitor models, the clicking sound is the ignitor sparking.

After the burner lights, turn the control knob back to a desired setting. The control knob can be set anywhere between HI and OFF. **Do not cook with the control in the LITE position.**

In Case of a Prolonged Power Failure

Surface burners with electronic ignitors can be manually lighted. Hold a lit match near the burner and turn the control to the LITE position. After the burner lights, turn the control to the desired setting. Power failures will not affect Standing Pilots.


Surface Burner Indicators

The solid square in the surface burner indicator shows which surface burner is turned on by that knob.

WARNING: If the flame should go out while cooking, or if there is a strong gas odor, turn the burners OFF. Wait five minutes for the gas odor to disappear before relighting burner. **IF GAS ODOR IS STILL PRESENT, SEE SAFETY NOTE ON PAGE 2.**



WARNING: Do not attempt to light the oven burner during a power failure. Personal injury could result.

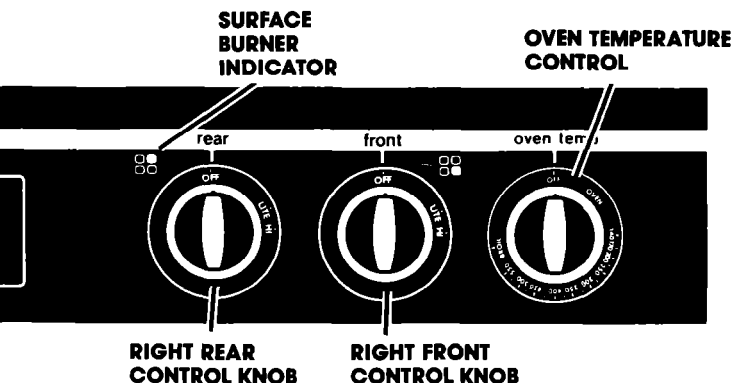

WARNING: Burner flame should not extend beyond the edge of the cooking utensil. The flame can burn you and cause poor cooking results.

See the "Cooking Guide" for important utensil information. Until you get used to the settings, use the following as a guide.

Use LITE to light the burner. After the burner lights, turn control back to a desired setting to stop the clicking of the ignition. **Do not cook with the control in the LITE position.**


Use HI to start foods cooking or to bring liquids to a boil.

Use a medium setting to start cooking or to fry chicken or pancakes; for gravy, puddings and icing or to cook large amounts of vegetables.


Use a low setting to keep foods warm until ready to serve.

Setting the Clock

Push in and turn the Minute Timer Knob to set the Clock.

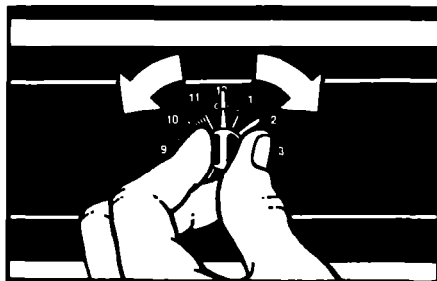

1. Push in Minute Timer Knob and turn in either direction until clock shows the right time of day.

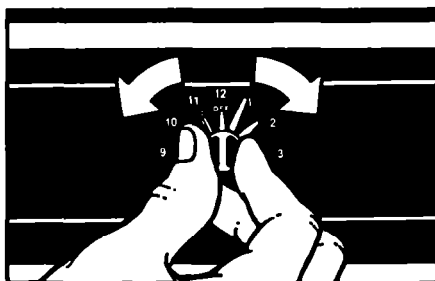


2. Let the Minute Timer Knob pop out. Turn in either direction until Minute Timer hand points to OFF. **The clock setting will change if you push in the knob when turning.**


Using the Minute Timer

The Minute Timer does not start or stop the oven. It works like a kitchen timer. Set it in minutes up to an hour. You will hear a buzzer when the set time is up.

DO NOT PUSH IN THE KNOB when setting the Minute Timer.

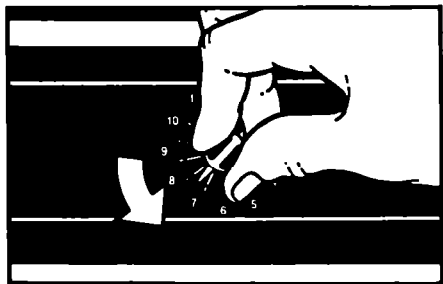

1. **Without pushing it in**, turn the Minute Timer Knob until the hand passes the setting you want.

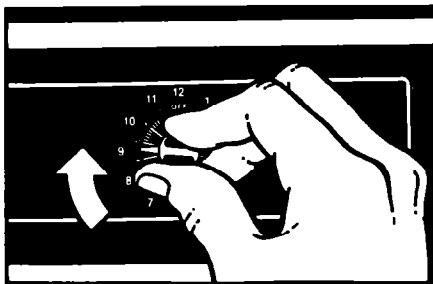


2. **Without pushing in**, turn the knob back to the setting you want.

When the time is up, a buzzer will sound. To stop the buzzer, turn the Minute Timer hand to OFF.

PUSHING IN AND TURNING THE MINUTE TIMER KNOB CHANGES THE CLOCK SETTING.


Using the Oven Temp Control

Baking

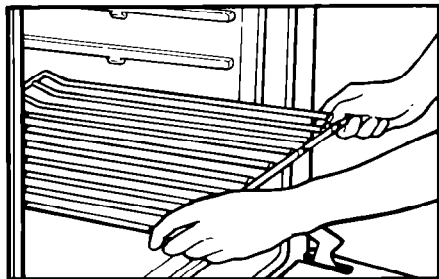


1. Position the racks properly **before** turning on the oven. **To change rack position**, pull rack out to stop, raise front edge and lift out.



The racks should be placed so the top of the food will be centered in the oven. Always leave at least 1½ to 2 inches (4-5 cm) between the sides of the pan and the oven walls and other pans. For more information, see the "Cooking Guide."

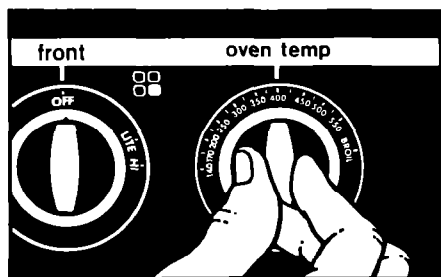

- Set the Oven Temp control knob to the baking temperature you want. The oven burner will automatically light in 50-60 seconds

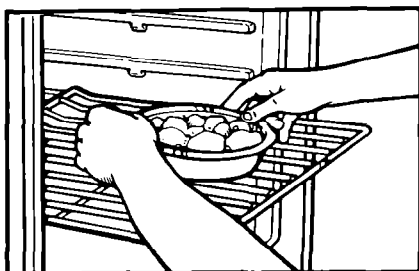


- Preheat the oven for 10 minutes before adding food. **NOTE: Oven racks, walls and door will be hot. Do not place food directly on oven bottom.**

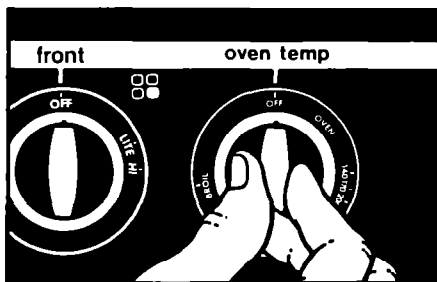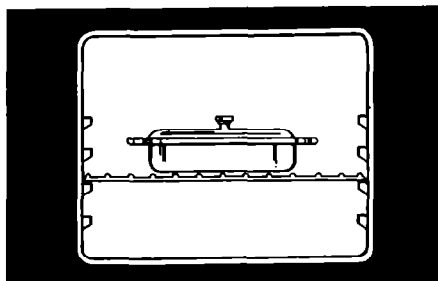


- During baking, the oven burner will turn on and off to maintain the temperature setting.
- When baking is done, turn the Oven Temp control knob to OFF.

Broiling

The Broiler Drawer is located below the oven door. **Always broil with the drawer and oven door completely closed.**

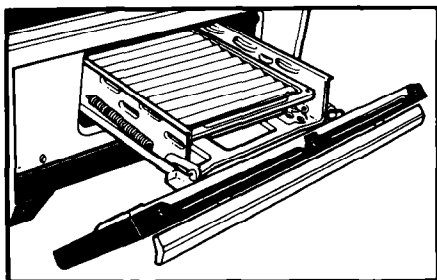


- Pull the broiler drawer open and tilt the door panel down.

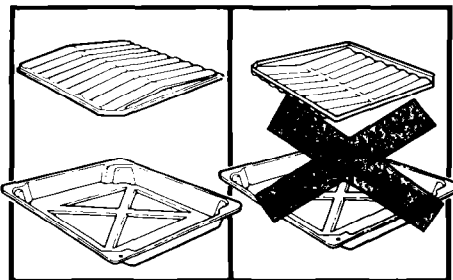


- Place broiler pan grid so grease can drain down sides into lower part of broiler pan. See picture.

continued on next page

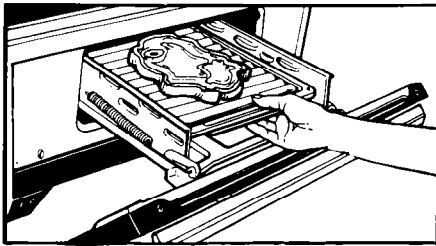

3. Place food on broiler pan and position the broiler pan **before** turning on the broiler. See pan placement chart in the "Cooking Guide" for recommended pan positions.

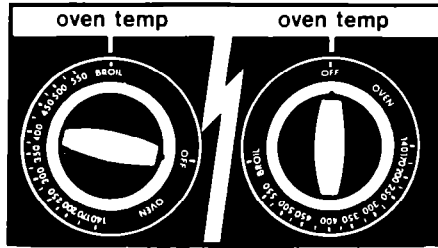


4. Set the Oven Temp control knob to BROIL. The broiler will automatically light in 50-60 seconds.
5. When broiling is done, turn the Oven Temp control knob to OFF.

DO NOT PREHEAT THE BROILER BEFORE USING. COMPLETELY CLOSE THE BROILER DRAWER DURING BROILING.


The Oven Vent

Hot air and moisture escape from the oven through a vent located at the back of the cooktop. **Do not block vent.** Poor baking will result.

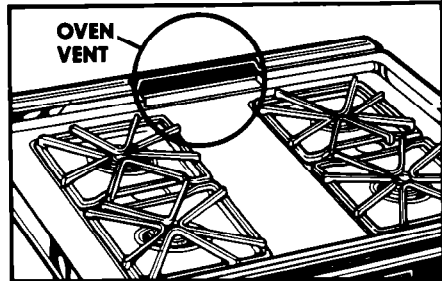


Lighting Standing Pilots

To Light Cooktop Pilots:

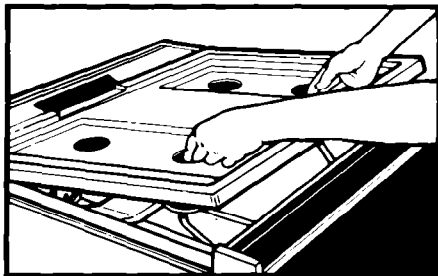


1. Remove the grates and reflector pans from cooktop. Remove the cooktop. (See page 13.)
2. Make sure all controls are OFF.

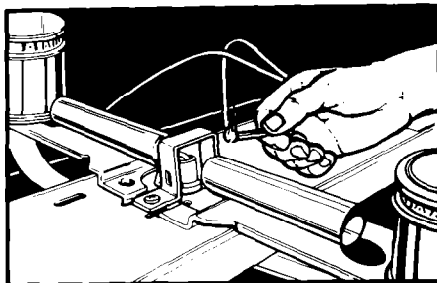


3. To light, hold a lit match over the pilot light located between the front and back burners. The pilot flame should be $\frac{1}{4}$ to $\frac{3}{8}$ in (.635-.953 cm) high.
4. If the pilot flame needs adjustment, turn the pilot adjustment screw on the manifold pipe.
5. Replace the cooktop and replace the grates before using the surface burners.

To Light Oven Burner Pilot:

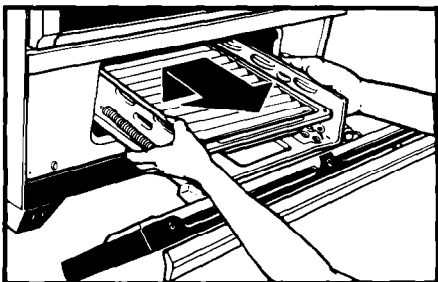

1. Make sure the Oven Temp control knob is OFF.
2. Remove the broiler drawer. Slide drawer out to stops, lift both sides, then slide the rest of the way out.

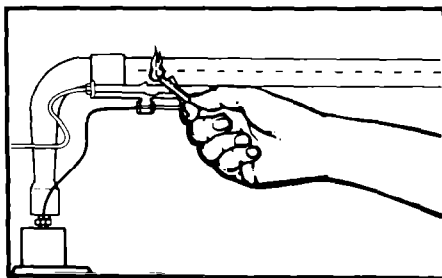



3. Hold a lit match over the oven burner pilot located at the rear of the burner.
4. After the oven burner pilot is burning steady, check burner lighting by turning the Oven Temp control knob to a temperature above 140°F (60°C). The burner will take 50-60 seconds to light.
5. Replace the broiler drawer.

Caring for your range

Control Panel



WARNING: To avoid burns, first make sure all controls are OFF and the range is COOL.

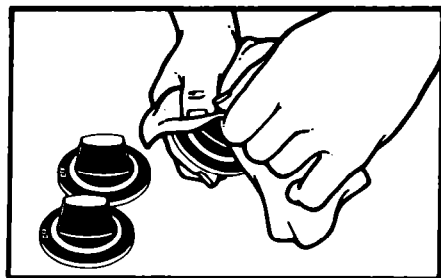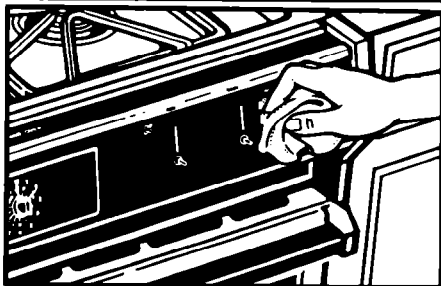



1. Pull knobs straight off.
2. Use warm soapy water or glass cleaner and a soft cloth to wipe the control panel. Rinse and wipe dry.


3. Wash knobs with warm soapy water and a soft cloth. Rinse well and dry.

CAUTION: Do not use abrasive cleansers. They could rub off the markings.


4. Push the knobs straight back on. Make sure they point to OFF.

Surface Burner Grates and Reflector Pans

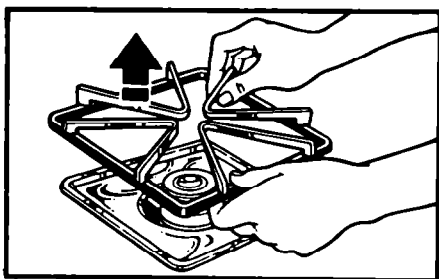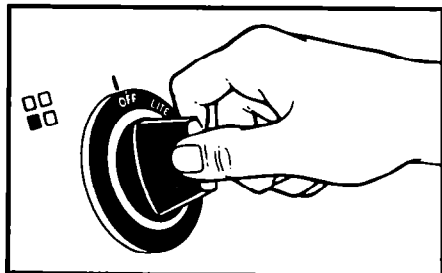


1.  **WARNING:** To avoid burns, be sure the surface burners are OFF and the surrounding parts are COOL.

2. Lift off grates and remove the reflector pans.

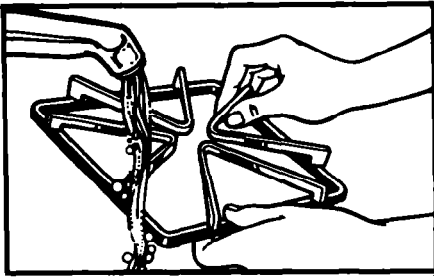


- 3.** Wash the grates and reflector pans in automatic dishwasher or use warm soapy water and plastic scrub pad. Rinse and dry well.

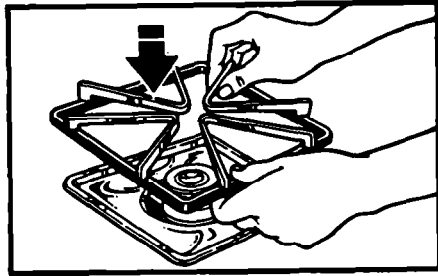


- 4.** Replace reflector pans and grates.


Removable Cooktop

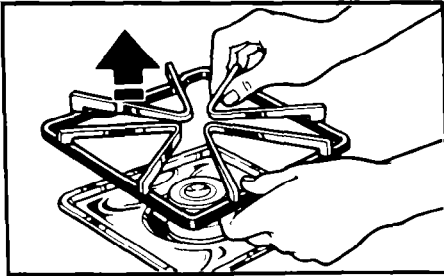

- 1.** Remove Surface Burner Grates and Reflector Pans.

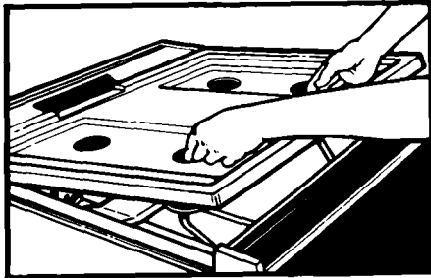



- 2. To remove:** Lift front of cooktop enough to clear front of range. Grasp cool burner openings. Lift and pull forward.

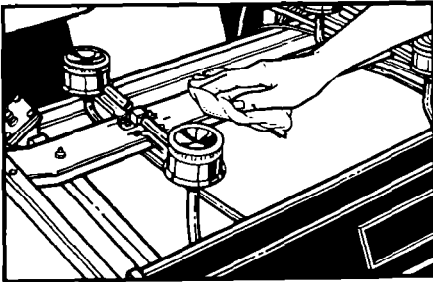

- 3.** Wipe surface under the cooktop with warm soapy water. Use soapy steel wool pad on stubborn spots.

- 4. To replace:** Lower front of cooktop while placing into rear support brackets. Avoid hitting the control panel.

Surface Burners

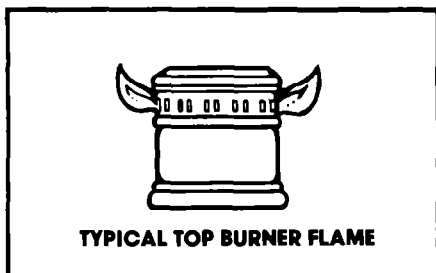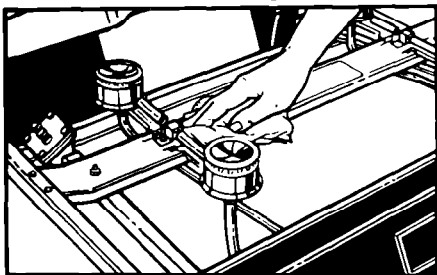

To remove the cooktop, follow the instructions on page 13.

Wipe off surface burners with warm soapy water and a soft cloth after each use.

Occasionally check surface burner flames for size and shape as shown. If flames do not burn properly, you may need to remove the surface burners for cleaning (see page 17), or call a qualified technician for burner adjustments.


To adjust the HI and LO settings on the control knobs:

1. Turn on the surface burners, then set the controls on LO.
2. **Without changing the burner settings**, remove the control knobs.
3. Firmly grasp the control stem and insert a small bladed screwdriver into the end of the stem. Turn the screwdriver in either direction until the flame height is $\frac{1}{8}$ in (.318 cm) or lower in size. **Flame must be large enough to maintain a STABLE FLAME on all burner ports.**

NEVER ADJUST THE FLAME SIZE AT THE MEDIUM SETTING.

The Oven Door


Removing the oven door will make it easier to clean the oven.

1.  **WARNING: To avoid burns, be sure the oven is OFF and COOL.**

Open the door to the first stop position.



2. Hold the door at both sides and lift off of hinges at bottom corners of door.
3. **To replace**, fit the bottom corners of the door over the ends of the hinges.

Push the door down evenly. The door will close only when it is on the hinges correctly.

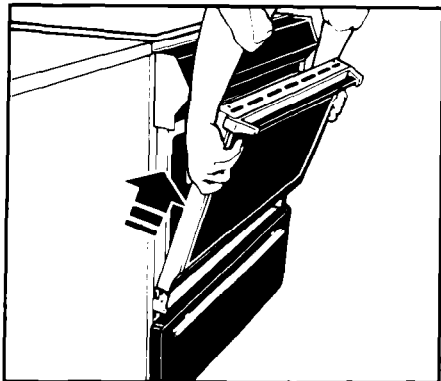


The Continuous-Cleaning Oven (Model SS333PET/PST)

Standard oven walls are coated with smooth porcelain. Your continuous-cleaning oven walls are coated with a special, rougher porcelain. A fat spatter beads up on the smooth surface, but spreads out on the rougher surface. The bead of fat on the smooth surface chars and turns black. The spread-out fat on the rough surface **gradually** burns away at **medium to high baking temperatures** so the oven can return to a presentably clean condition.

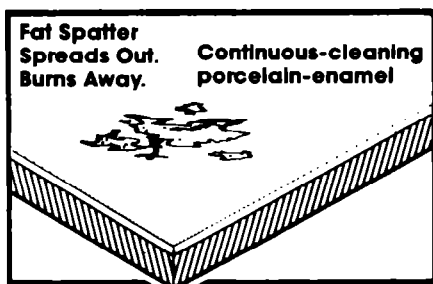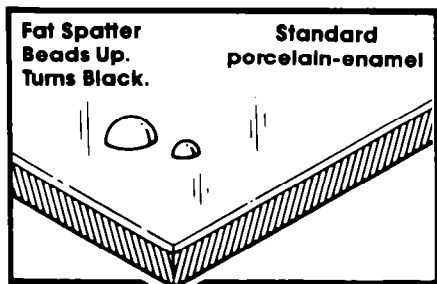

Using Foil

To catch sugar or starchy spills from pies and casseroles, use a piece of heavy-duty aluminum foil or a shallow pan on the lower rack, slightly larger than the cooking container.


-  **WARNING: To avoid burns, be sure the oven is OFF and COOL.**
- 2. Position foil or pan under the cooking container.** Make sure the foil is centered and large enough to catch any spillovers.

CAUTION: Do not use foil to cover oven floor or to completely cover a rack. Good air circulation is needed for the oven to operate properly. Poor cooking results and damage to the oven could occur.


Cleaning Tips

- 1.** The oven window and racks are not coated. Clean them by hand.
- 2.** The oven door does not get as hot as the walls. Some hand cleaning may be needed.
- 3.** Use aluminum foil or a shallow pan according to instructions. Spill-overs do not burn away and may stain the bottom.

Hand Cleaning the Oven

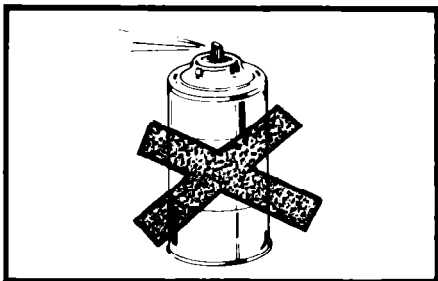


WARNING: DO NOT USE OVEN CLEANING PRODUCTS. Some can become trapped in the porcelain-enamel surface and give off harmful fumes.

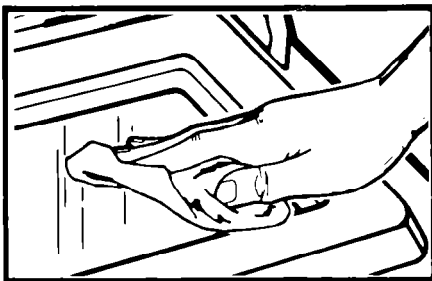


WINDOW – Keep clean with hot sudsy water. Use a plastic scrubbing pad for stubborn spots. Rinse well.

Do not use steel wool or abrasive cleansers.

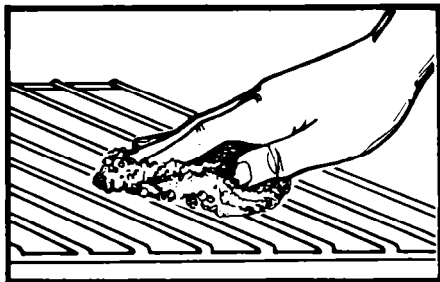

RACKS – Use soapy steel wool pad for best cleaning results. Rinse well.

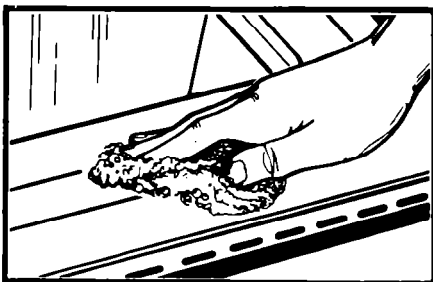

WALL AND DOORS – Wash with hot soapy water. Use a steel wool pad or plastic scrubbing pad for stubborn spots. Rinse well.

Standard Oven Cleaning (Model SS313PET/PST)

The Standard Oven has to be hand cleaned. Use warm soapy water and steel wool pads or a commercial oven cleaner. See "Cleaning Chart" for further instructions.

Do not allow commercial oven cleaner to contact the oven seals, thermostat or exterior surfaces of the range. Damage will occur.

Cleaning Chart



WARNING: To avoid burns, be sure all controls are OFF and the range is COOL.

PART	WHAT TO USE	HOW TO CLEAN
Exterior surfaces	Warm soapy water and a soft cloth. Plastic scrubbing pad for stubborn spots.	<ul style="list-style-type: none"> Wipe off regularly when cooktop and range are cool. Do not allow food containing acids (such as vinegar, tomato, lemon juice or milk) to remain on surface. Acids will remove the glossy finish. Do not use abrasive or harsh cleansers.
Surface burner grates	Warm soapy water and a plastic scrubbing pad.	<ul style="list-style-type: none"> Wash, rinse and dry well. Do not use abrasive or harsh cleansers.
Chrome reflector pans	Warm soapy water and a plastic scrubbing pad.	<ul style="list-style-type: none"> Wash, rinse and dry well. Do not place in Self-Cleaning Oven.
Surface burners	Warm soapy water and a plastic scrubbing pad, or a solution of 1 quart of boiling hot water and 2 tablespoons of DIP IT.®	<ul style="list-style-type: none"> Remove cooktop, see page 13. Wipe off spills, immediately after burner has cooled. In case of stubborn stains: Remove burner from manifold with phillips screwdriver. Soak in warm soapy water and wipe with a plastic scrubbing pad. If stain is still there, soak 20 minutes in boiling water and DIP IT.® solution. Be sure the solution covers the whole burner. Rinse and dry well. If ports are clogged, clean with a straight pin. Do not enlarge or distort ports. Do not use a wooden toothpick. Do not clean surface burner in dishwasher.
Broiler drawer, pan and grid	Warm soapy water or a soapy steel wool pad.	<ul style="list-style-type: none"> Clean after each use. After broiler is cool, wipe interior with warm damp cloth. For stubborn spots, use a soapy steel wool pad.
Control knobs	Warm soapy water and a soft cloth.	<ul style="list-style-type: none"> Wash, rinse and dry well. Do not soak.


continued on next page

PART	WHAT TO USE	HOW TO CLEAN
Control panel	Warm soapy water or spray glass cleaner and a soft cloth.	<ul style="list-style-type: none"> • Wash, rinse and dry well. • Follow directions provided with the cleaner.
Oven racks	Warm soapy water or a soapy steel wool pad.	<ul style="list-style-type: none"> • Wash, rinse and dry well. Use a soapy steel wool pad for stubborn areas.
Oven door glass	Spray glass cleaner or warm soapy water and a plastic scrubbing pad.	<ul style="list-style-type: none"> • Make sure oven is cool. • Follow directions provided with the cleaner. • Wash, rinse and dry well.
Continuous-Cleaning oven	Warm soapy water or a soapy steel wool pad. Heavy-duty aluminum foil or shallow pan.	<ul style="list-style-type: none"> • Most fat spatters on oven walls and floor will gradually reduce to a presentably clean condition during baking. • Clean stubborn spots or stains. Rinse well with water. • Place piece of foil or shallow pan, slightly larger than the cooking container, on lower rack to catch spill-overs. • Do not use commercial oven cleaners.
Standard oven	Warm soapy water or a soapy steel wool pad. Commercial oven cleaners.	<ul style="list-style-type: none"> • Remove door for easier access. • Place newspaper on floor to protect floor surface. • Follow directions provided with the oven cleaner. • Rinse well with clear water. • Use in well ventilated room. • Do not allow commercial oven cleaner to contact the oven seals, thermostat or exterior surfaces of the range. Damage will occur.


The Oven Light

The oven light will **only** come on when you push the Oven Light switch on the control panel. Push it again to turn off the light.


Changing the Oven Light

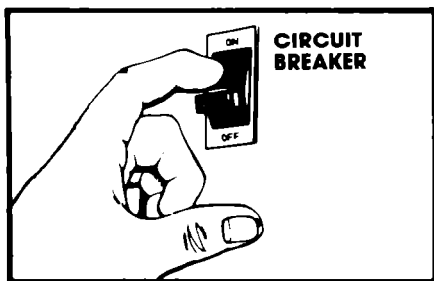


- 1.**  **WARNING:** To avoid possible shock hazard, turn off the electric power at the main power supply.

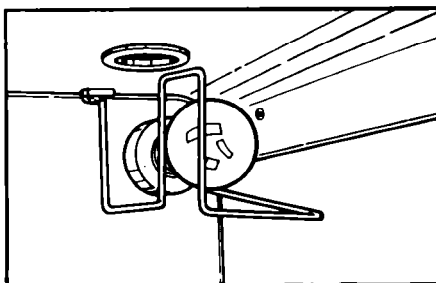

- 2.** Remove the light bulb from its socket.

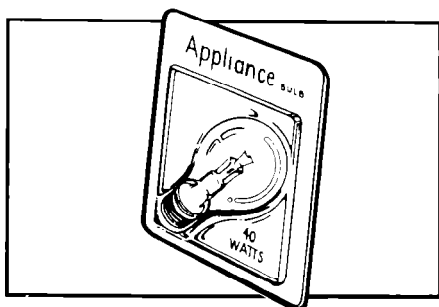

- 3.** Replace bulb with a 40-watt appliance bulb.

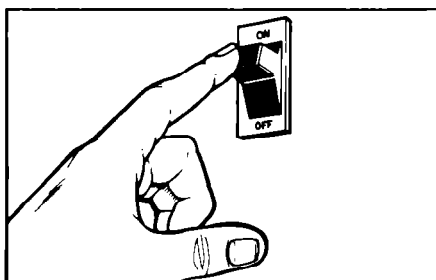

- 4.** Turn the power back on at the main power supply.

Optional Trim Kit (Part No. 4314884)

A trim kit is available for the unfinished edges of your counters. Order the kit from your Whirlpool Dealer or TECH-CARE® service company.

If you need service or assistance, we suggest you follow these five steps:

1. Before calling for assistance...

Performance problems often result from little things you can find and fix without tools of any kind.

If nothing operates:

- Is the range properly connected to gas and electrical supplies? (See "Installation Instructions.")
- Have you checked your home's main fuses or circuit breaker box?
- Is the flow of combustion and/or ventilation air to the range blocked? **Do not block the air flow to and around the range.**
- Is the Oven Temp control knob turned to a temperature setting or BROIL?

If burner fails to light:

- Is the range connected to electrical power?
- Have you checked your home's main fuses or circuit breaker box?
- Are burner ports clogged? (See page 17.)

If burner flames are uneven:

- Are burner ports clogged? (See page 17.)

If burner flames lift off ports, are yellow, or are noisy when turned off:

- The air/gas mixture may be incorrect. (Call for service.)

If burner makes a popping noise when ON:

- Is the burner wet from washing? Let dry.

If control knob(s) will not turn:

- Did you push in before trying to turn?

If soil is visible on Continuous-Cleaning oven finish:

- The special finish is designed to **gradually reduce oven soil** during normal baking or roasting. It is not designed to keep your oven spotless, only presentably clean.
- The door is cooler than the oven walls. Soil will be more visible on the door than other areas in the oven. See page 16 for how to clean.
- Sugar and starchy spills may leave stains. See page 16 for hand cleaning tips. **Use foil on lower rack to catch these spills.**

If cooking results aren't what you expected:

- Is the range level?
- Are you using pans recommended in the "**Cooking Guide**"?
- If baking, have you allowed 1½ to 2 inches (4-5 cm) on all sides of the pans for air circulation?
- Have you preheated the oven as the recipe calls for?
- Are the pans the size called for in the recipe?
- Are you following a tested recipe from a reliable source?
- Do the cooking utensils have smooth, flat bottoms and fit the surface burners?

See the **Cooking Guide** for more information on cooking problems and how to solve them.

2. If you need assistance*...

Call Whirlpool COOL-LINE® service assistance telephone number. Dial free from anywhere in the U.S.: 1-800-253-1304

and talk with one of our trained Consultants. The Consultants can instruct you in how to obtain satisfactory operation from your appliance or, if service is necessary, recommend a qualified service company in your area.

3. If you need service*...



Whirlpool has a nationwide network of franchised TECH-CARE® Service Companies. TECH-CARE service technicians

are trained to fulfill the product warranty and provide after-warranty service, anywhere in the United States. To locate TECH-CARE service in your area, call our COOL-LINE service assistance telephone number (see Step 2) or look in your telephone directory Yellow Pages under:

APPLIANCES - HOUSEHOLD -
MAJOR - SERVICE & REPAIR

OR

ELECTRICAL APPLIANCES -
MAJOR - REPAIRING & PARTS

WHIRLPOOL APPLIANCES
FRANCHISED TECH-CARE SERVICE

WHIRLPOOL APPLIANCES
FRANCHISED TECH-CARE SERVICE

SERVICE COMPANIES
XYZ SERVICE CO
123 Maple 999-9999

SERVICE COMPANIES
XYZ SERVICE CO
123 Maple 999-9999

OR

WASHING MACHINES, DRYERS
& IRONERS - SERVICING

WHIRLPOOL APPLIANCES
FRANCHISED TECH-CARE SERVICE

SERVICE COMPANIES
XYZ SERVICE CO
123 Maple 999-9999

4. If you have a problem*...

Call our COOL-LINE service assistance telephone number (see Step 2) and talk with one of our Consultants, or if you prefer, write to:

Mr. Robert Stanley
Division Vice President
Whirlpool Corporation
2000 M-63
Benton Harbor, MI 49022

5. If you need FSP® replacement parts*...

FSP is a registered trademark of Whirlpool Corporation for quality parts. Look for this symbol of quality whenever you need a replacement part for your Whirlpool appliance. FSP replacement parts will fit right and work right, because they are made to the same exacting specifications used to build every new Whirlpool appliance.

To locate FSP replacement parts in your area, refer to Step 3 above or call the Whirlpool COOL-LINE service assistance number in Step 2.

*If you must call or write, please provide: model number, serial number, date of purchase, and a complete description of the problem. This information is needed in order to better respond to your request for assistance.

Notes

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

Notes

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

WHIRLPOOL® MICROWAVE OVEN/ RANGE PRODUCT WARRANTY

GR001

LENGTH OF WARRANTY	WHIRLPOOL WILL PAY FOR
FULL ONE-YEAR WARRANTY From Date of Purchase	FSP® replacement parts and repair labor to correct defects in materials or workmanship. Service must be provided by a franchised TECH-CARE® service company.
LIMITED FOUR-YEAR WARRANTY Second Through Fifth Year From Date of Purchase	FSP® replacement magnetron tube on microwave ovens if defective in materials or workmanship.
WHIRLPOOL WILL NOT PAY FOR	
<p>A. Service calls to:</p> <ol style="list-style-type: none"> 1. Correct the installation of the range product. 2. Instruct you how to use the range product. 3. Replace house fuses or correct house wiring or plumbing. 4. Replace owner accessible light bulbs. <p>B. Repairs when range product is used in other than normal, single-family household use.</p> <p>C. Pick up and delivery. This product is designed to be repaired in the home.</p> <p>D. Damage to range product caused by accident, misuse, fire, flood, acts of God or use of products not approved by Whirlpool.</p> <p>E. Any labor costs during the limited warranty.</p>	

WHIRLPOOL CORPORATION SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES. Some states do not allow the exclusion or limitation of incidental or consequential damages so this limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Outside the United States, a different warranty may apply. For details, please contact your franchised Whirlpool distributor or military exchange.



Part No. 76058-00/4314834
©1988 Whirlpool Corporation

Printed in U.S.A.

• Makers. Dishwashers. Built-In Ovens and Surface Units. Ranges. Microwave Ovens. Trash Compactors. Room Air Conditioners. Dehumidifiers. Automatic

