


For Model: KECS100SWH4, KECS100SAL4, KECS100SOB4, KECS100SBC4
 (White) (Almond) (Onyx Black) (Brushed Chrome)

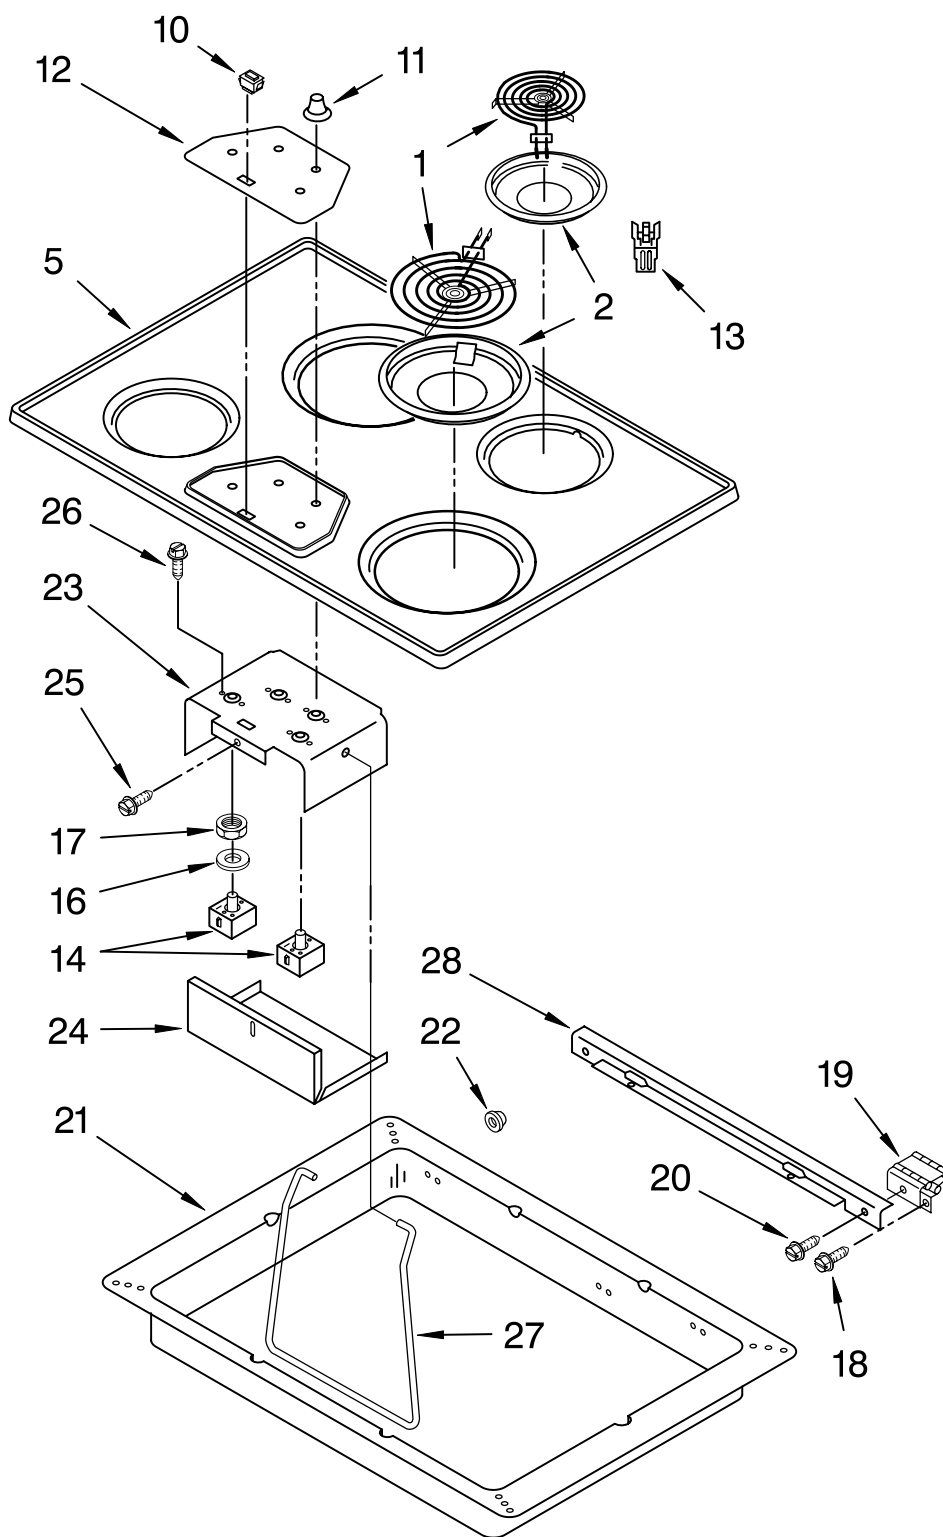

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

COOKTOP PARTS

For Model: KECS100SWH4, KECS100SAL4, KECS100SOB4, KECS100SBC4
(White) (Almond) (Onyx Black) (Brushed Chrome)

Illus. Part			Illus. Part			Illus. Part		
No.	No.	DESCRIPTION	No.	No.	DESCRIPTION	No.	No.	DESCRIPTION
NOTE: The screws and nuts required to attach a part are listed immediately following that part.			12	4164339	Plate, Control	Following Parts Not Illustrated		
			13	4164317	Receptacle, Surface Element			
			14		Switch, Infinite			
				3181690	6" Elmnt (2) 1400W	4164344		Hardware Assy.
				3181691	8" Elmnt (2) 2600W	4169280		Wire Assy. Red
			16	4159607	Washer (4)	4169281		Wire Assy. Black
			17	4159114	Nut, Hex Jam (4)	3180230		Harness, Pilot Light
			18	4159465	Screw (2)	4164353		Harness, Wire Power
			19	4164319	Hinge (2)	LITERATURE PARTS		
			20	4159465	Screw, (2)			
			21	3186731	Burner Box	LIT3178230		Installation Instructions
			22	4159005	Bushing, Fiber	LIT4177813		Use & Care Guide
			23	4164355	Bracket, Switch Mounting	LIT4174147		Repair Parts List
			24	4164341	Cover, Switch Control			
			25	4159465	Screw (2)			
			26	4159431	Screw (2)			
			27	4164354	Rod, Top Support			
			28	4173576	Bracket, Hinge			
1		Surface Element						
	3177638	6" (2)						
	3177567	8" (1)						
	3177565	8" Power Elmnt (1)						
2		Burner Bowl						
	4164315	6" (2)						
	4164314	8" (2)						
5		Cooktop						
	4169282	Brushed Chrome						
	4169283	Almond						
	4169284	White						
	4169285	Onyx Black						
10	4164351	Light, Power On						
11	4164307	Knob, Control (4)						

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST