

# **All Refrigerator**


### PRODUCT MODEL NUMBERS

#### **EL88TRRW**

**Electrical:** A 115-volt, 60-Hz, AC-only, 15-or 20-amp fused, grounded electrical supply is required. It is recommended that a separate circuit serving only your refrigerator be provided. Use an outlet that cannot be turned off by a switch. Do not use an extension cord.


NOTE: Before performing any type of installation, cleaning, or removing a light bulb, turn the control (Thermostat, Refrigerator or Freezer Control depending on the model) to OFF and then disconnect the refrigerator from the electrical source. When you are finished, reconnect the refrigerator to the electrical source and reset the control (Thermostat, Refrigerator or Freezer Control depending on the model) to the desired setting. See "Using the Controls."

## PRODUCT DIMENSIONS

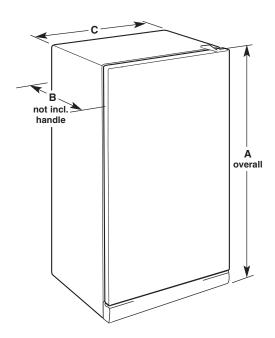

Model Size	Height - Overall "A"	Depth - Without Handles "B"	Width - Cabinet "C"
17.7 cu.ft.	665/8" (169.2 cm)	28½" (72.4 cm)	30" (76.2 cm)

#### **LOCATION REQUIREMENTS**

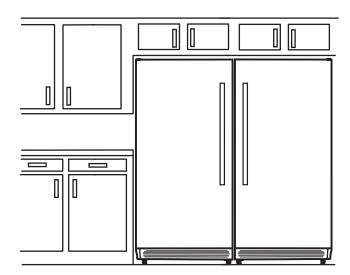

This refrigerator may be installed side by side with another refrigerator or freezer. Allow at least 1" (2.54 cm) between back of cabinet and the wall.

If you are installing your refrigerator next to a fixed wall, leave extra space on the hinge side to allow for the door to swing open.

**NOTE:** It is recommended that you do not install the refrigerator near an oven, radiator, or other heat source, nor in a location where the temperature will fall below 55°F (13°C).