



30" ELECTRIC BUILT-IN COOKTOP


MODELS:

WCE55US0HB01 (Black)

WCE55US0HW01 (White)

WCE55US0HS01 (Stainless)

COOKTOP PARTS

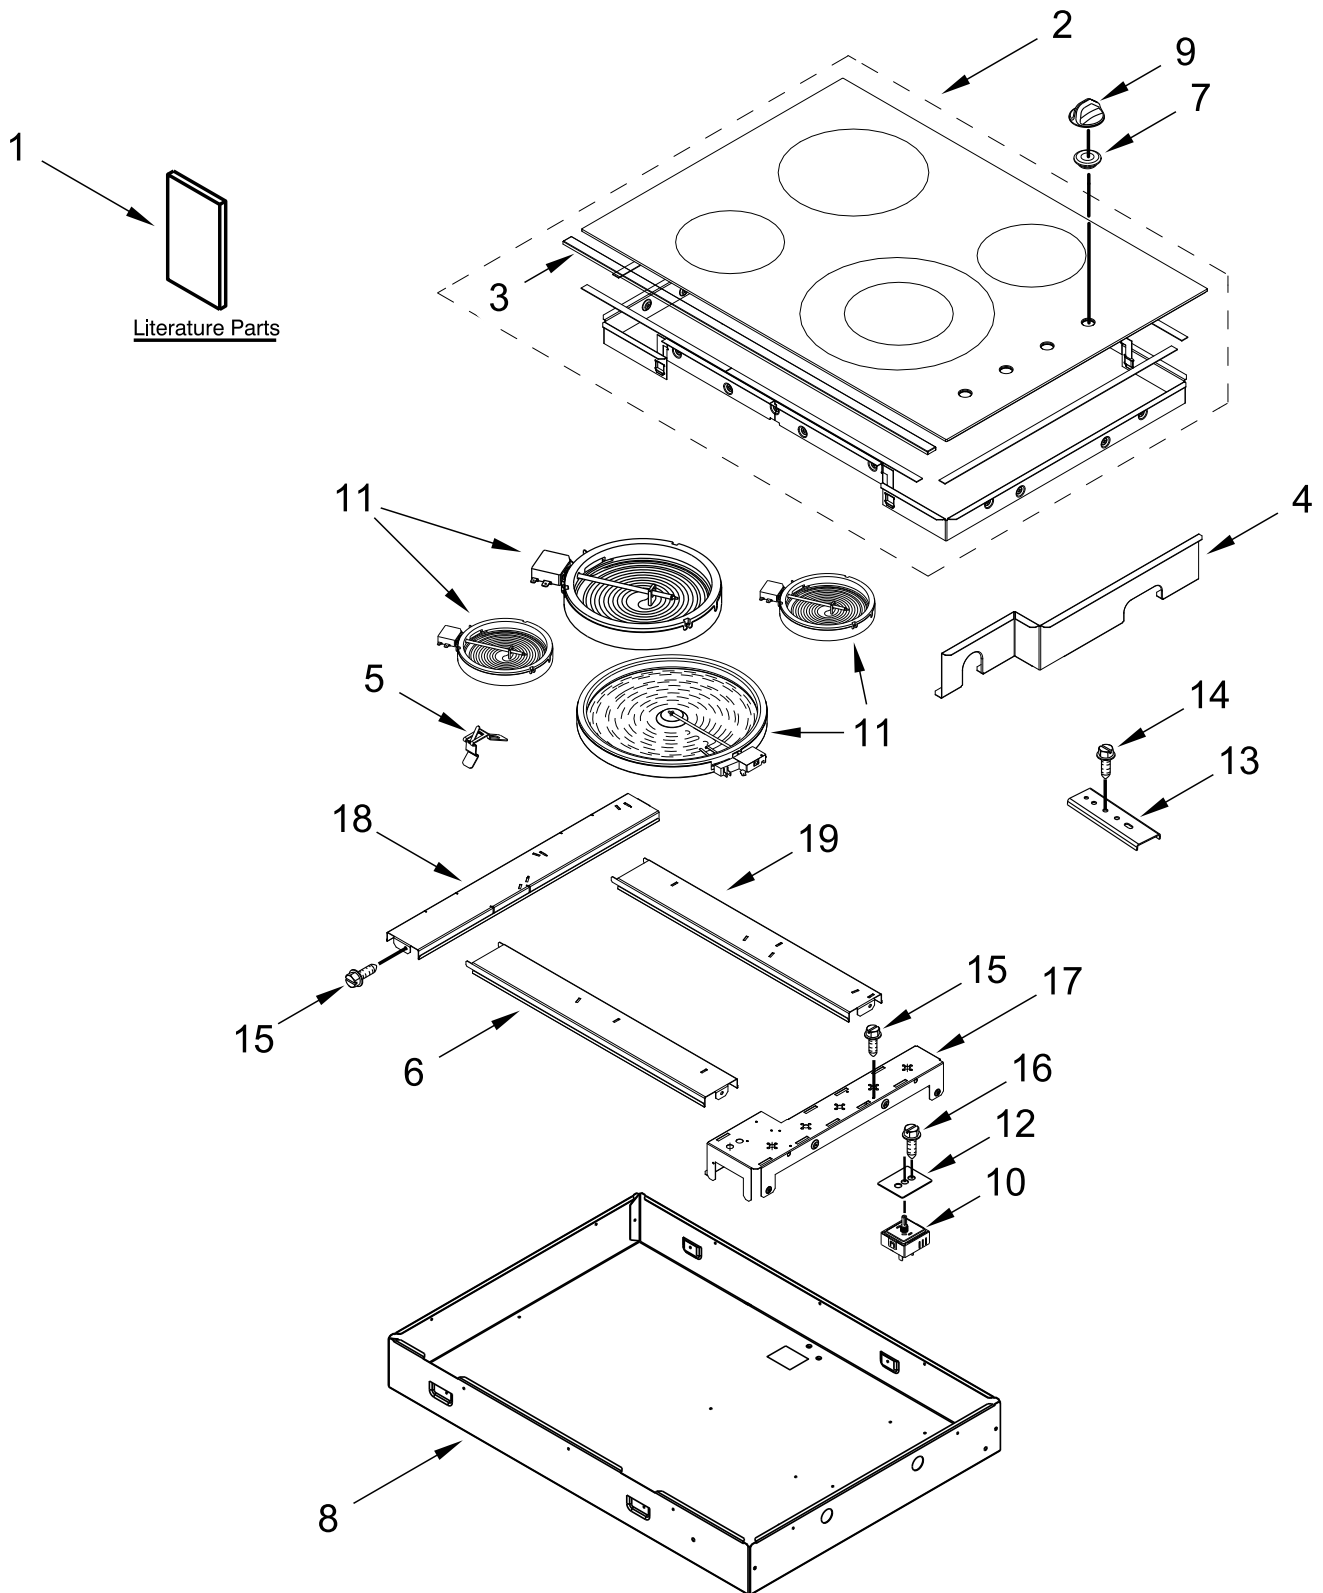

COOKTOP PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	9		Knob, Control	14	3400093	Screw
	W11206696	Instructions, Installation		W11130625	Black	15	7101P426-60	Screw
	W11245478	Instructions, Undercounter Installation		W11130629	White	16	7101P309-60	Screw
	W11206695	Guide, Use & Care	10	W10578768	Switch, Infinite (Left Front & Right Rear)	17	W11215835	Plate, Switch
	W11206669	Diagram, Wire		W10843843	Switch, Infinite (Left Rear)	18	W11102042	Rail, Vertical
2		Cooktop		W10437092	Switch, Infinite (Right Front)	19	W11106009	Rail, Horizontal Rear
	W11120971	Black						FOLLOWING PARTS NOT ILLUSTRATED
	W11120973	White				W11111805		Harness, Main
	W11120972	Stainless	11	8273994	Element (1200W) (Left Front & Right Rear)	3400015		Screw, Grounding
3		Trim, Front Stainless (Not Serviced)				7101P520-60		Screw (For Main Harness)
4	W11110724	Shield, Switch		8273993	Element (1800W) (Left Rear)	7103P027-60		Nut (For Main Harness)
5	W10225448	Spring, Element				3192439		Seal, Limiter
6	W11110714	Rail, Horizontal Front		W10275049	Element (2500/1200W) (Right Front)	8286642		Tape, Foam
7		Grommet						
	W10293874	Black	12	3183956	Seal, Switch Cover			
	W10372006	Grey	13	4455917	Bracket, Cooktop Mounting			
8		Box, Burner (Not Serviced)						

OPTIONAL PARTS (NOT INCLUDED)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		ACCESSORIES
	WA906B	Scraper, Cooktop
	W10355051	Cleaner, Cooktop
	31464	Cleaner, Cooktop
	31463	Protectant, Cooktop
	242905	Kit, Canning Unit
	31605	Kit, Cooktop Care