




30" BUILT-IN ELECTRIC COMBINATION MICROWAVE WALL OVEN

MODELS:

WOC54EC0HB03 (Black)
WOC54EC0HW03 (White)
WOC54EC0HS03 (Stainless)


CONTROL PANEL PARTS

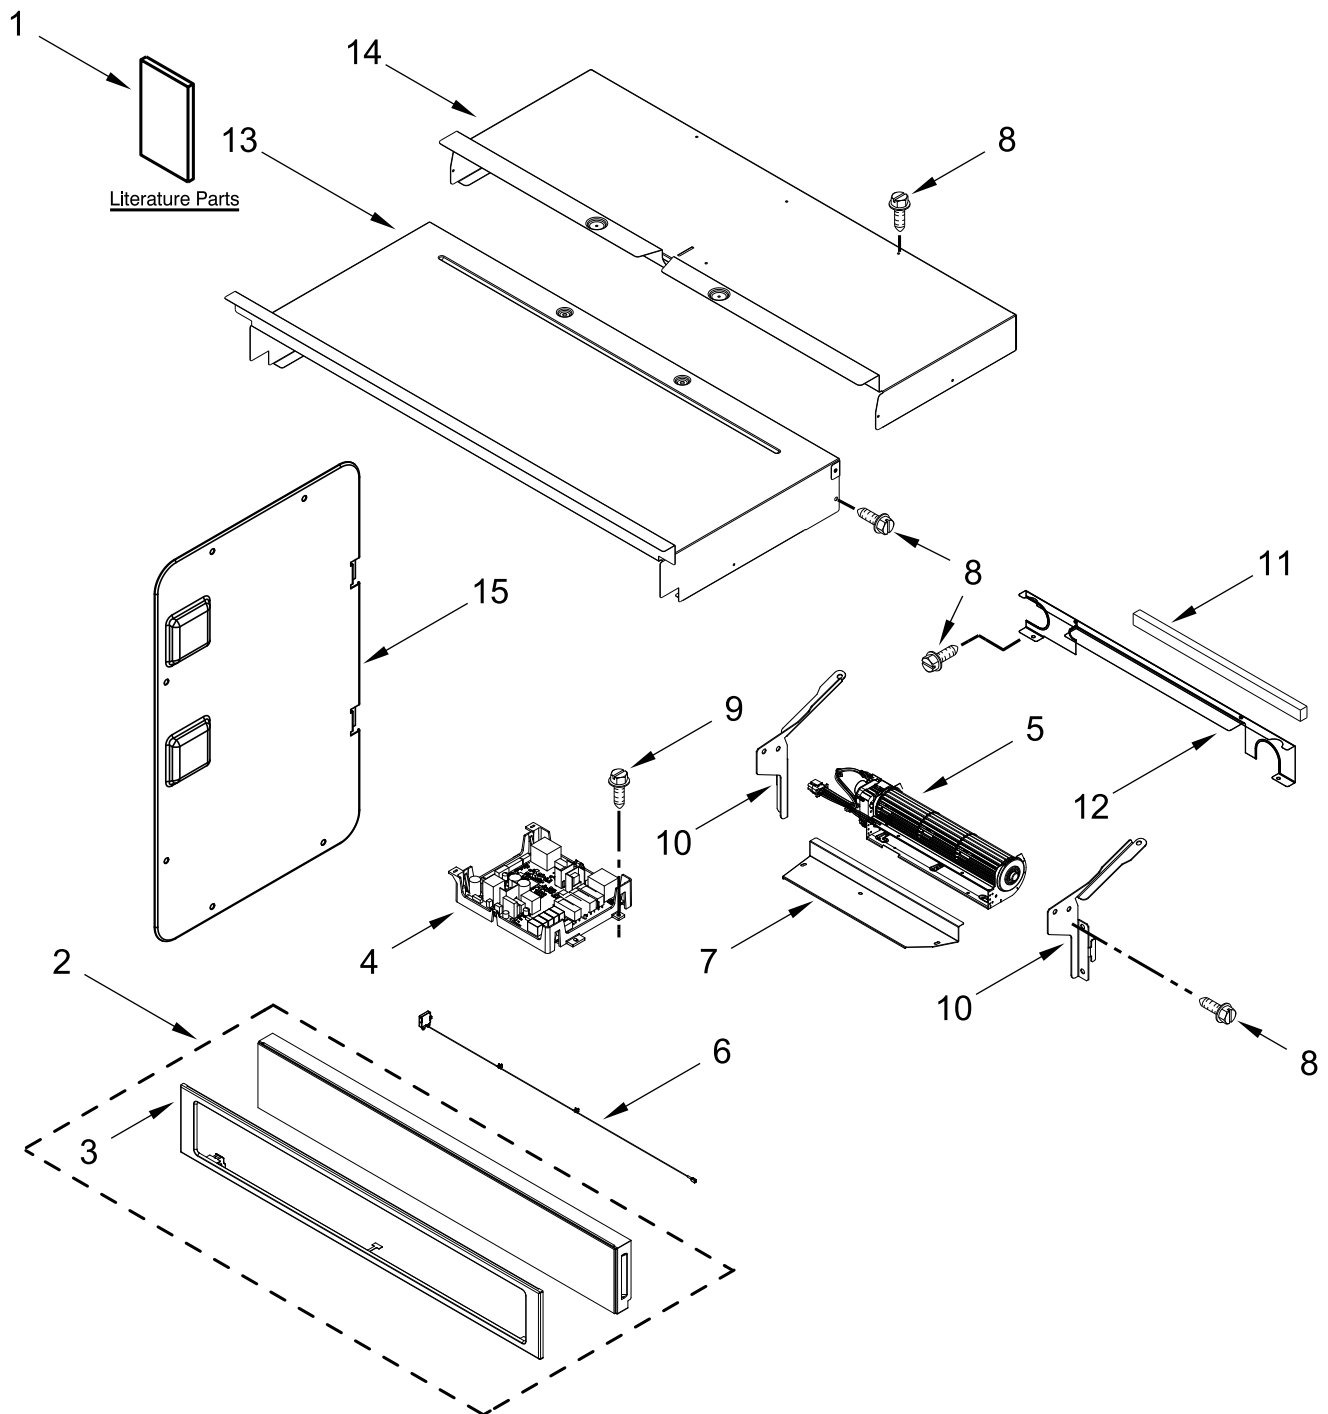

CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	8	7101P426-60	Screw	15	W10655467	Chassis, Combo Side
	W11129957	Instructions, Installation	9	7101P434-60	Screw			FOLLOWING PARTS NOT ILLUSTRATED
	W11220320	Guide, Use & Care (Oven)	10	W10655463	Bracket, Blower (Left)			
	W11108508	Guide, Use & Care (Microwave Oven)		W10655462	Bracket, Blower (Right)		W11316032	Harness, Main
	W11129946	Sheet, Tech	11	4451758	Block, Foam		W11317200	Harness, Signal
	W11097305	Guide, Internet Connectivity	12	W10618126	Chassis, Back Divider		W11356954	Harness, Fan and Turntable
2		Assembly, Control Panel (Includes Overlay)	13	W10318158	Chassis, Cover Top Front 30"		W11356968	Harness, Inverter
	W11105017	Black	14	W10588732	Chassis, Cover Top Back 30"		W11356970	Harness, Interlock
	W11105018	White					W11356990	Harness, Communication
	W11105016	Stainless					W11132989	Harness, Door Latch
3		Skin, Control Panel					W11356977	Harness, Cable Tree Assembly
	W11026970	Black					W11356991	Harness, Ground Console Combo
	W11026969	White					W11356987	Jumper Harness, Communication
	W10899877	Stainless					313438	Clip, Harness
4	W11253187	Appliance Manager, Copernicus					4450800	Screw, Grounding
5	W11200129	Blower					4448664	Clamp, Conduit
6	W11234541	Antenna					W10431303	Bag, Hardware
7	W10681157	Cover, Combo Blower						

OVEN PARTS

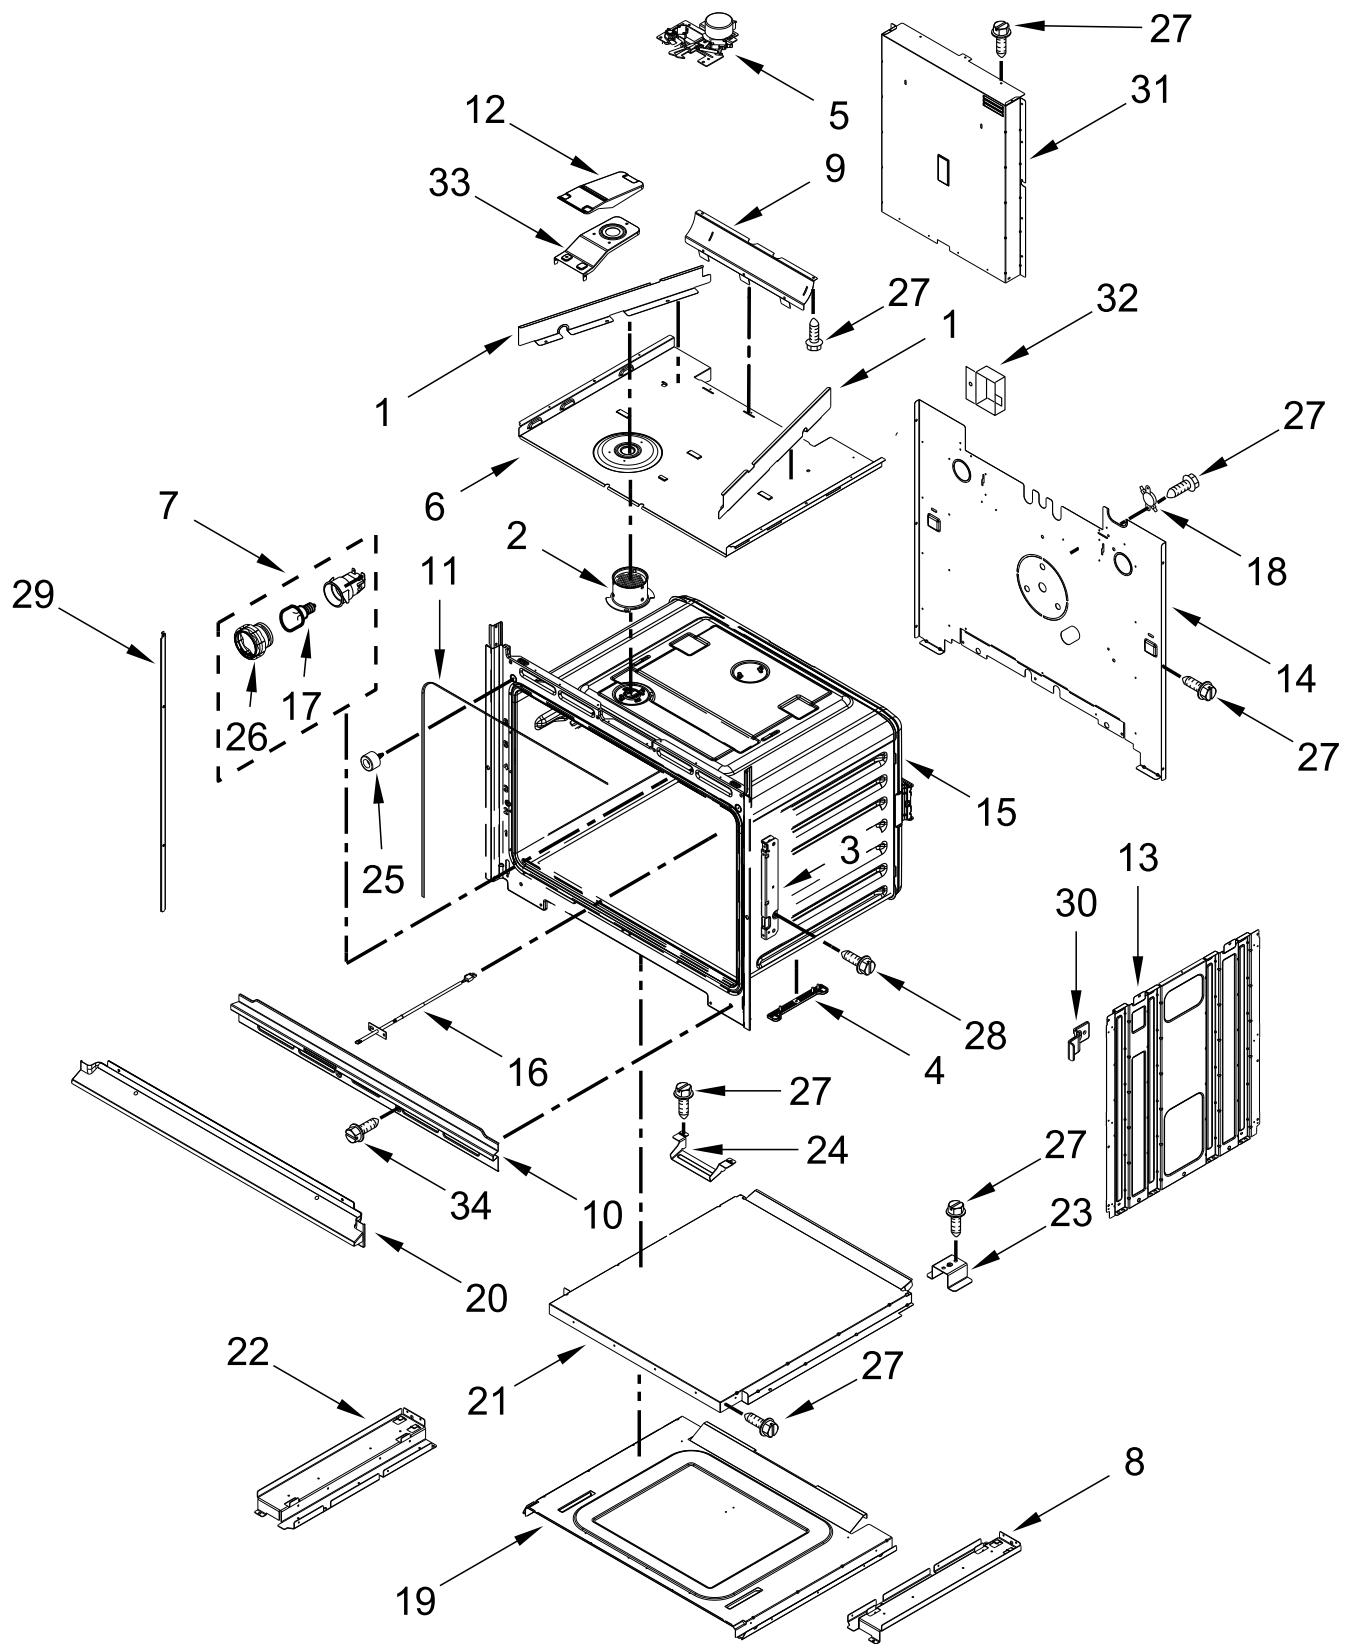

OVEN PARTS

Illus.

<u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10681156	Deflector, Chassis
2	W11085298	Tube, Vent
3	W11044775	Receiver, Hinge
4	W10618102	Spacer, Base
5	W10618131	Latch, Motorized
6	W10904158	Top, Chassis
7	W10734063	Assembly, Light
8	W10283021	Support, Base (Right)
9	W10904163	Deflector, Blower
10	W10495154	Vent, Center 30"
11	W10282960	Gasket
12	W10616810	Cover, Vent Exhaust
13	W10318190	Side, Chassis
14	W10904160	Back, Chassis
15		Liner, Oven (Not Serviceable)


Illus.

<u>No.</u>	<u>Part No.</u>	<u>Description</u>
16	W10622170	Probe, Sensor
17	W10412711	Bulb, Light
18	4449751	Thermostat (TOD)
19	W11238787	Base, Chassis
20		Assembly, Bottom Vent
	W10327373	Black
	W10506344	White
	W10351279	Stainless
21	W10283008	Chassis, Bottom Duct
22	W10283020	Support, Base (Left)
23	W10213759	Support, Air Channel
24	W10351308	Spacer, Chassis Bottom Duct
25	W10351278	Bumper & Screw
26	W10412722	Lens, Light

Illus.

<u>No.</u>	<u>Part No.</u>	<u>Description</u>
27	7101P426-60	Screw
28	W10254050	Screw
29		Trim, Side
	W10344483	Black (Left)
	W10344482	Black (Right)
30	W10347649	Spacers, Front
31	W10519707	Cover, Back Duct
32	8285593	Cover, Connector
33	W10616809	Base, Vent Exhaust
34	W11249635	Screw
		FOLLOWING PARTS NOT ILLUSTRATED
	W10282944	Insulation, Cavity
	W10520715	Insulation, Wrap



OVEN DOOR PARTS

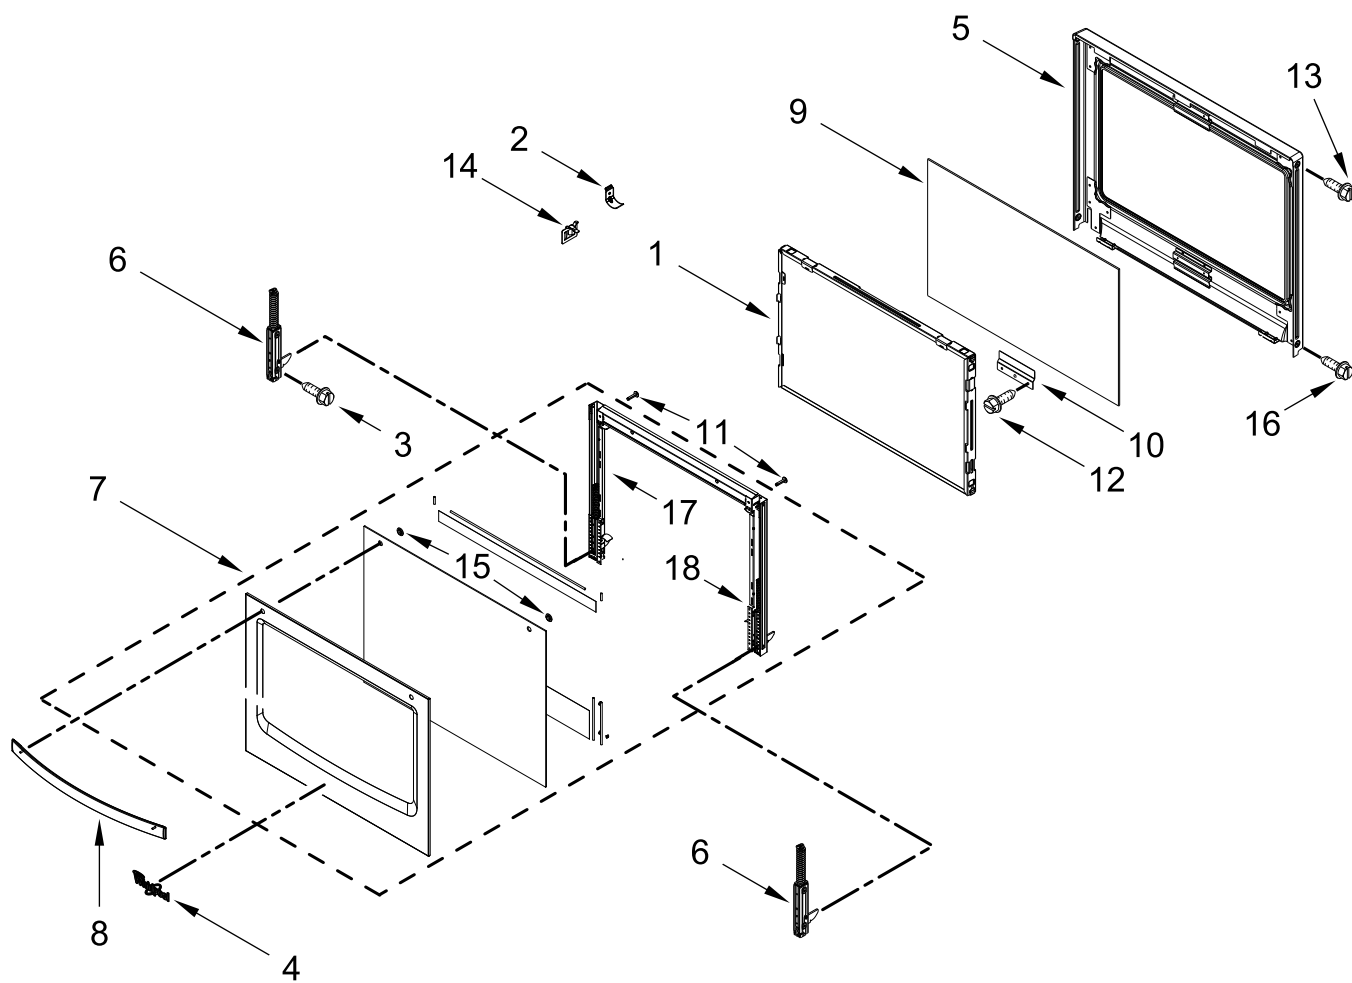

OVEN DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10347596	Assembly, Window Pack	8		Handle, Door	17	W10284278	Rail, Door Side (Left)
				W11022638	Black	18	W10284279	Rail, Door Side (Right)
2	W10284285	Spring, Door Glass Fixation		W11022639	White			
				W10875206	Stainless			
3	3196183	Screw	9	W10678524	Glass, Inner			
4	W10884775	Nameplate	10	W10284297	Bracket, Glass			
5	W10709147	Assembly, Liner	11	W10480830	Screw			
6	W10639069	Hinge, Door	12	7101P426-60	Screw			
7		Assembly, Door	13	7101P653-60	Screw			
	W10866266	Black	14	W10653954	Clip, Spring Metal			
	W10866267	White	15	W10319024	Washer, Door			
	W10866265	Stainless	16	7101P635-60	Screw (Black)			


INTERNAL OVEN PARTS

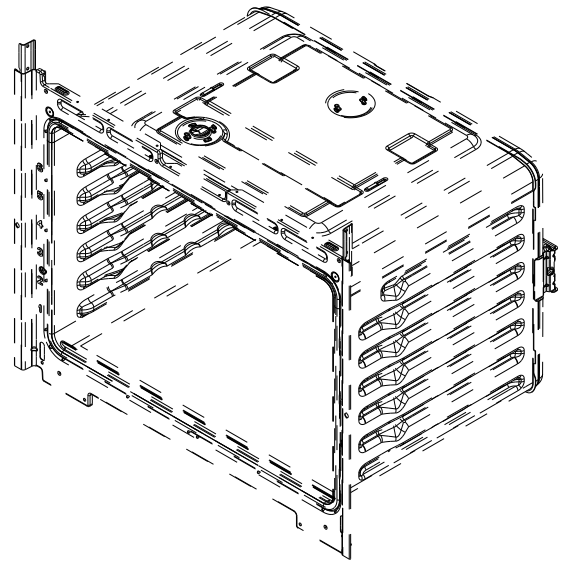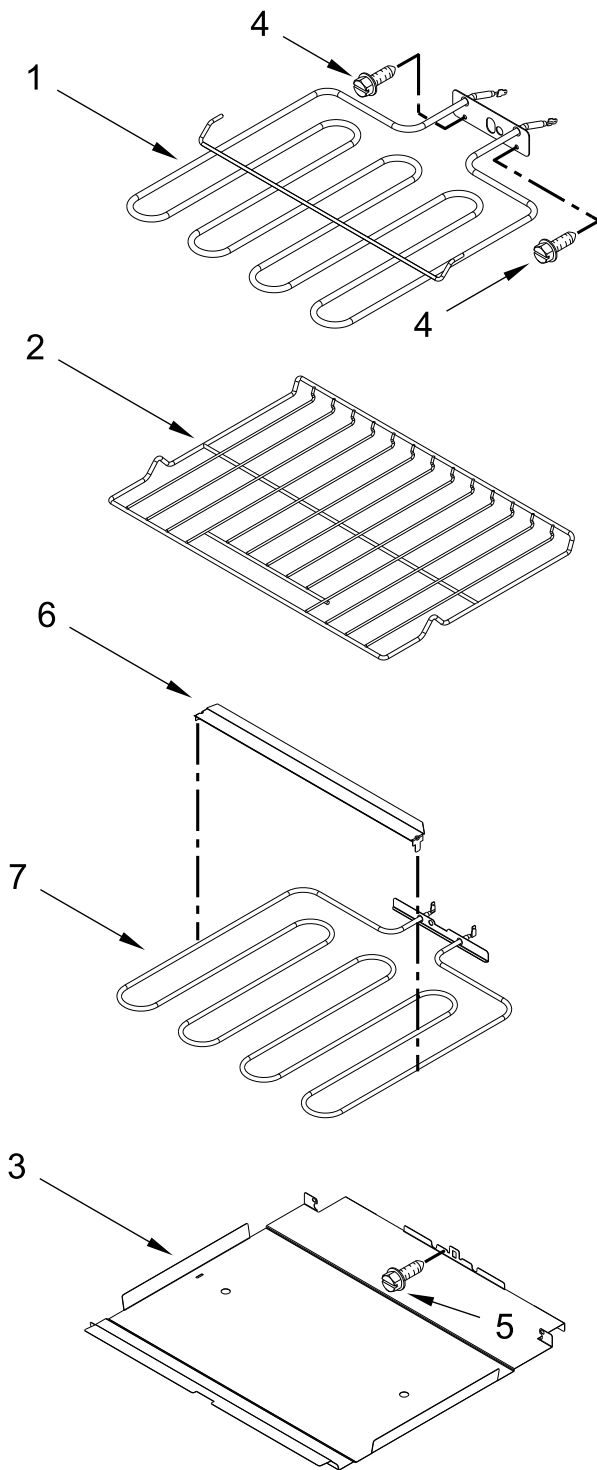

INTERNAL OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10260252	Element, Broil	4	7101P434-60	Screw	6	W10282957	Crossbar, Hidden Bake Tray
2	W11122597	Rack, Oven	5	7101P426-60	Screw	7	W10546517	Element, Bake
3	W10318198	Tray, Hidden Bake						


MICROWAVE DOOR PARTS

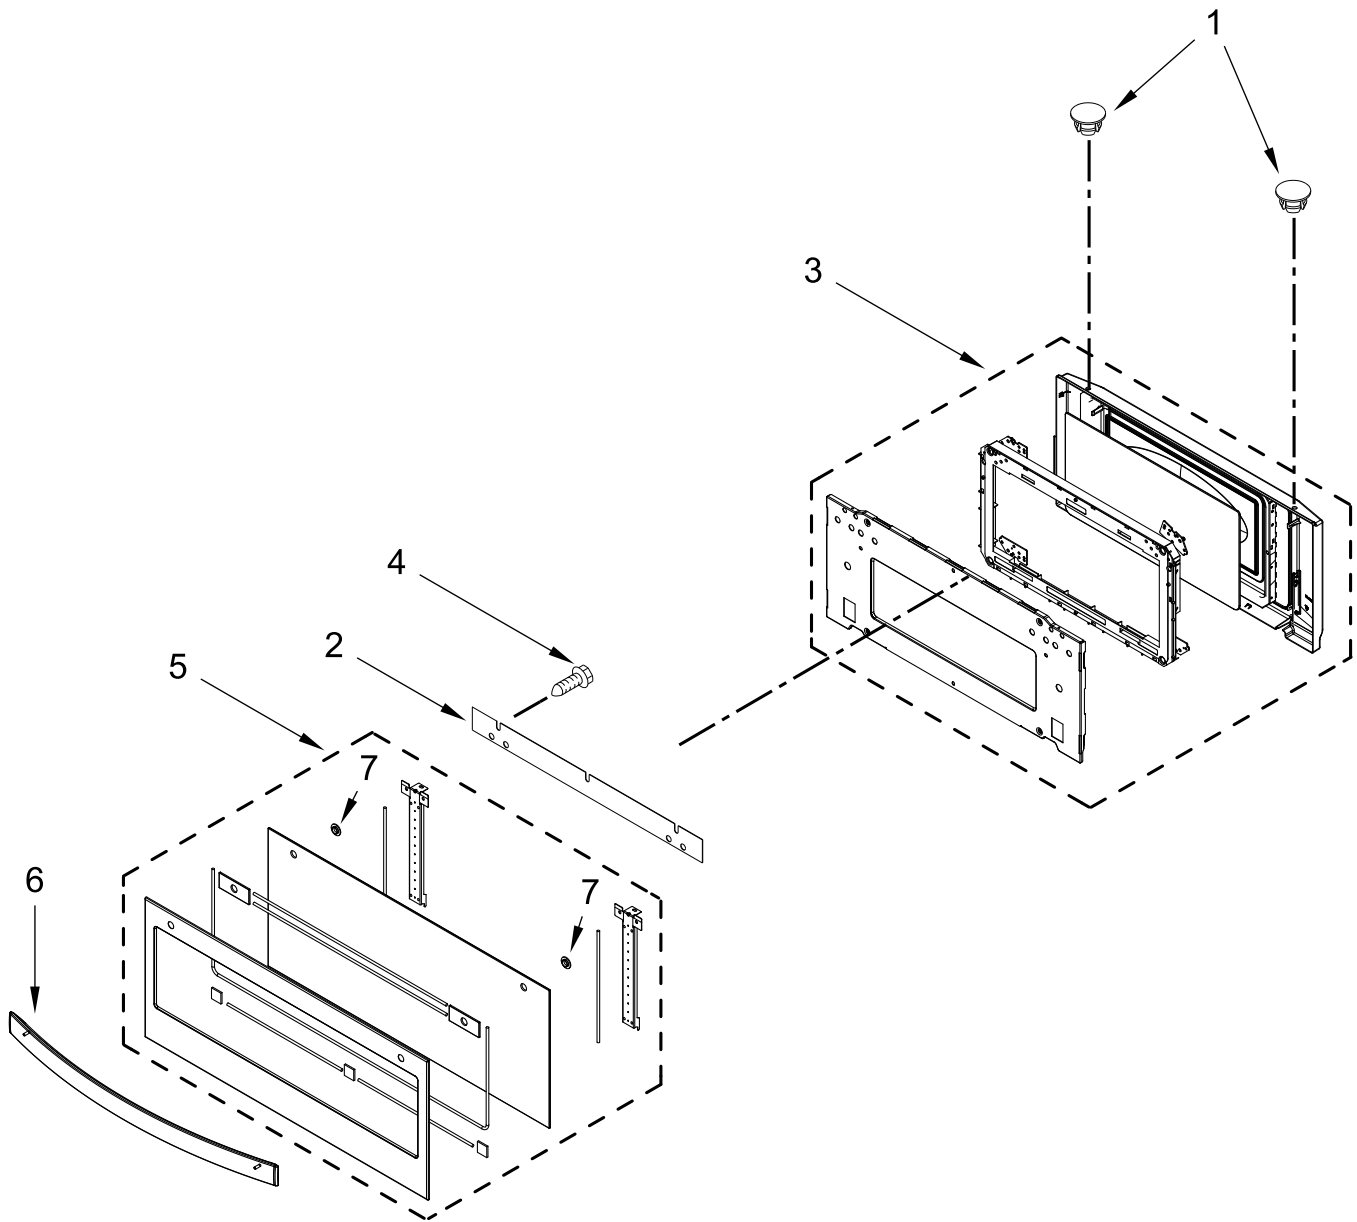

MICROWAVE DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	8304588BL	Cap, Screw	5		Assembly, Outer Door	6		Handle, Door
2	W10359769	Foam, Door Handle	W10866274	Black		W11022638	Black	
3	W10687342	Assembly, Inner Door	W10866275	White		W11022639	White	
4	W10480830	Screw	W10866273	Stainless		W10875206	Stainless	
						7	W10319024	Washer, Door


CABINET AND STIRRER PARTS

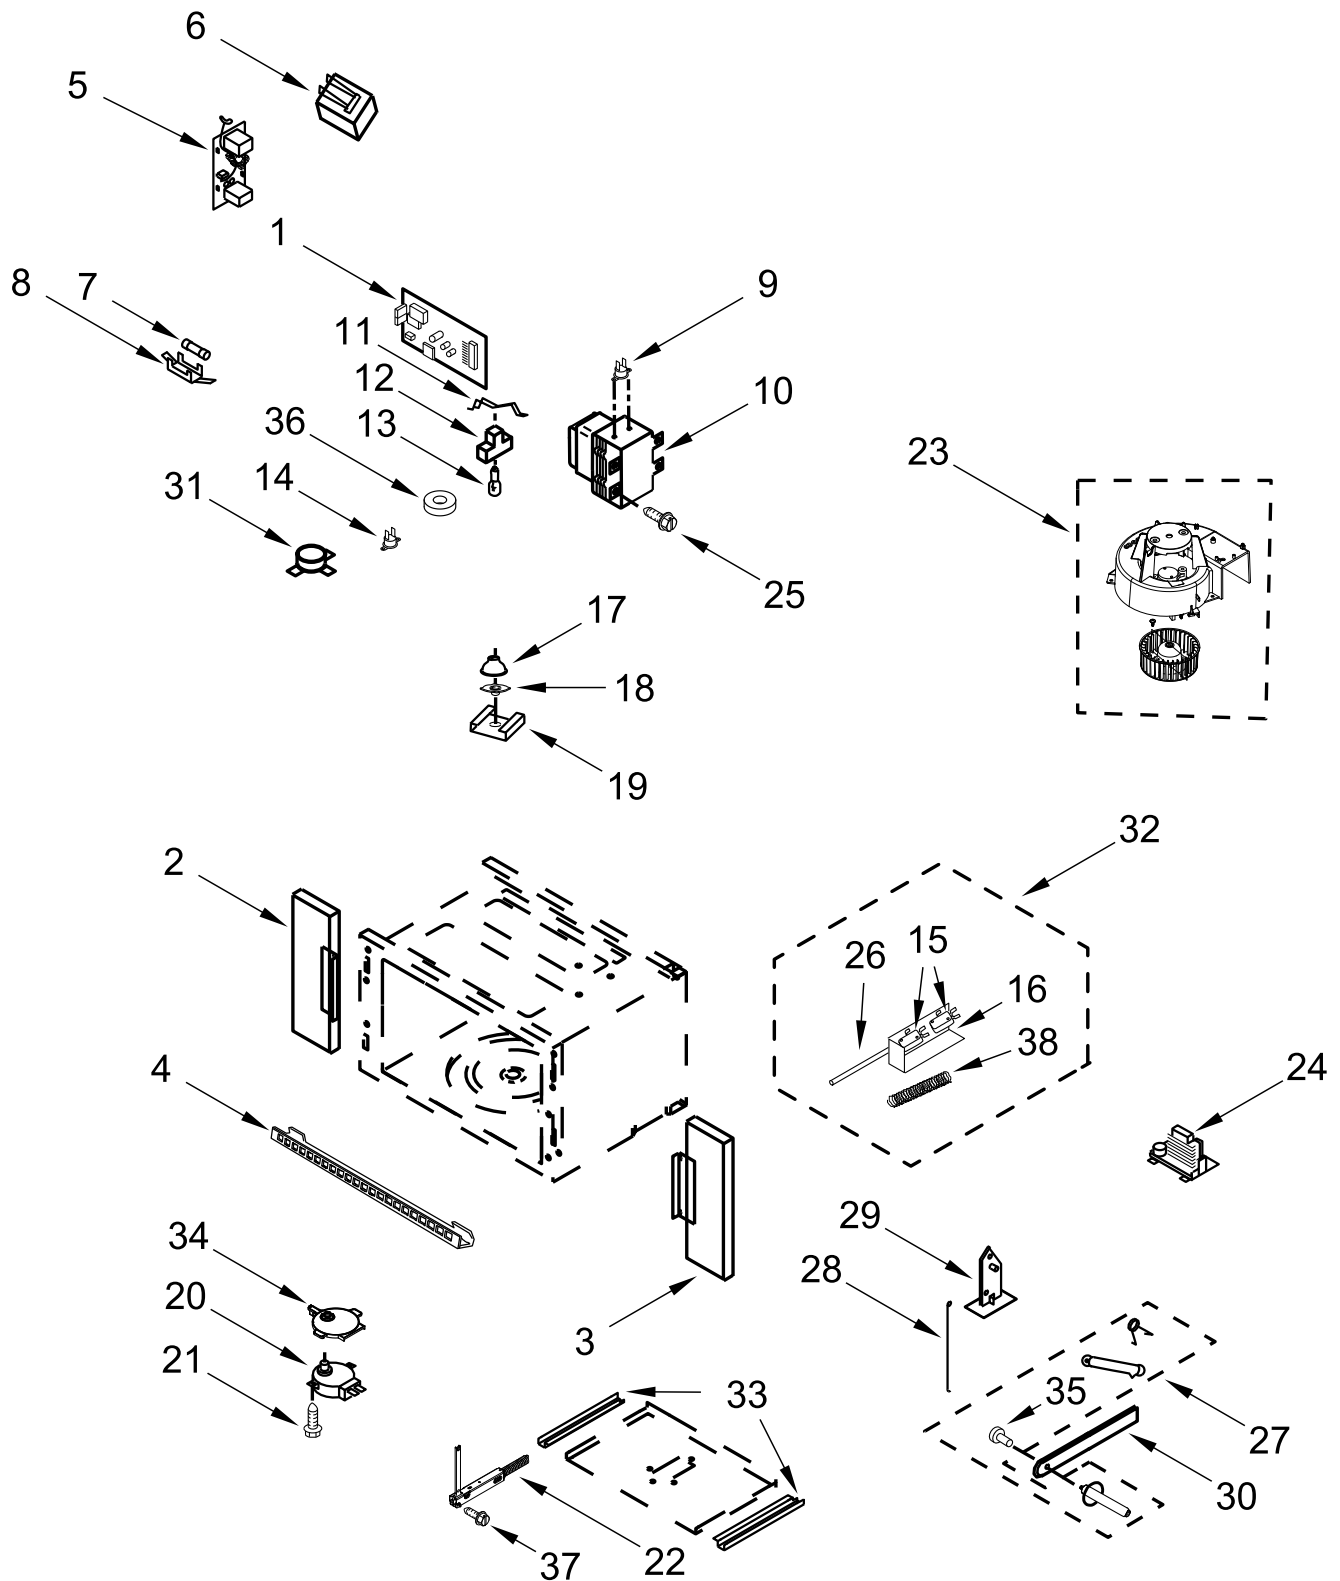

CABINET AND STIRRER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11290002	Control, Electric	13	W10795595	Lamp, Halogen	27	W10128850	Assembly, Sliding Arm
2	461967017491	Trim, Side (Left)	14	W10389447	Thermostat	28	461967570351	Spring, Torsion
3	461967017481	Trim, Side (Right)	15	461967848881	Switch	29	461967750494	Support
4	461968973241	Vent, Top Microwave	16	W10876593	Holder, Switch	30	461967750483	Arm, Sliding
5	W10692851	Filter, Noise	17	423107022541	Reflector	31	W10460457	Sensor, Humidity
6	461967848621	Transformer, Light (20V)	18	423107720491	Lens, Lamp	32	W10358241	Assembly, Interlock Switch
7	241908600053	Fuse	19	461967010591	Clip, Spring	33	461967008461	Support, Bottom
8	4375231	Block, Fuse	20	461967848971	Motor, Turntable	34	461967753742	Adapter, Turntable Motor
9	461967846741	Thermostat, Magnetron	21	461967825321	Screw	35	461967510191	Bushing
10	W11226473	Magnetron	22	461968979601	Hinge, Door	36	W10769147	Sealing, Lamp
11	W10465869	Spring, Lamp	23	W11131760	Assembly, Cooling Fan	37	461967825781	Screw (Shoulder)
12	W10490593	Holder, Lamp	24	W11237240	Inverter	38	423107570871	Spring, Release Rod
			25	461967825971	Screw			
			26	461967750464	Rod, Push			


TOP VENTING PARTS

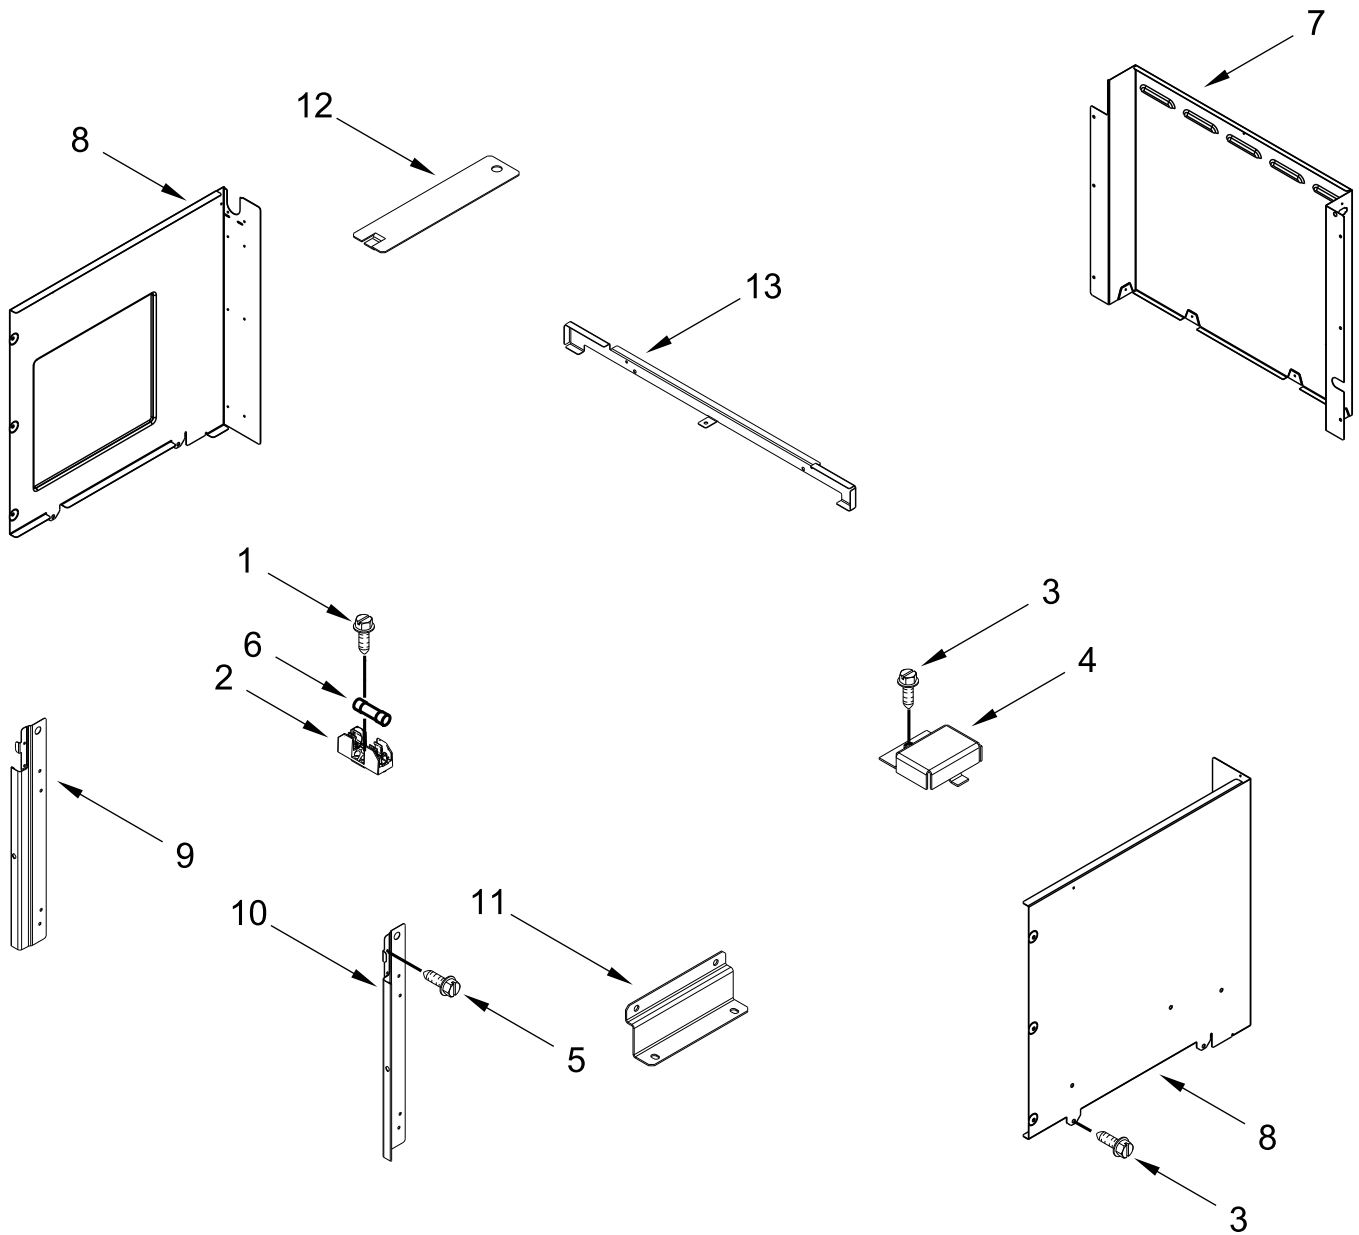

TOP VENTING PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	7101P060-60	Screw	7	W11037653	Cover, Combo Chassis Back Duct (With Hole)	9	W10360516	Rail, Side (Left)
2	4454949	Holder, Fuse				10	W10360518	Rail, Side (Right)
3	7101P426-60	Screw	8	W10655466	Chassis, Combo Side (Left)	11	W10283024	Side, Bracket
4	8285593	Cover, Connector		W11037649	Chassis, Combo Side (Right)	12	W10356437	Cover, Slot Module
5	7101P633-60	Screw (Black)				13	W10283022	Support, Crossbar
6	W10017410	Fuse, Time Delay						

INTERNAL MICROWAVE PARTS

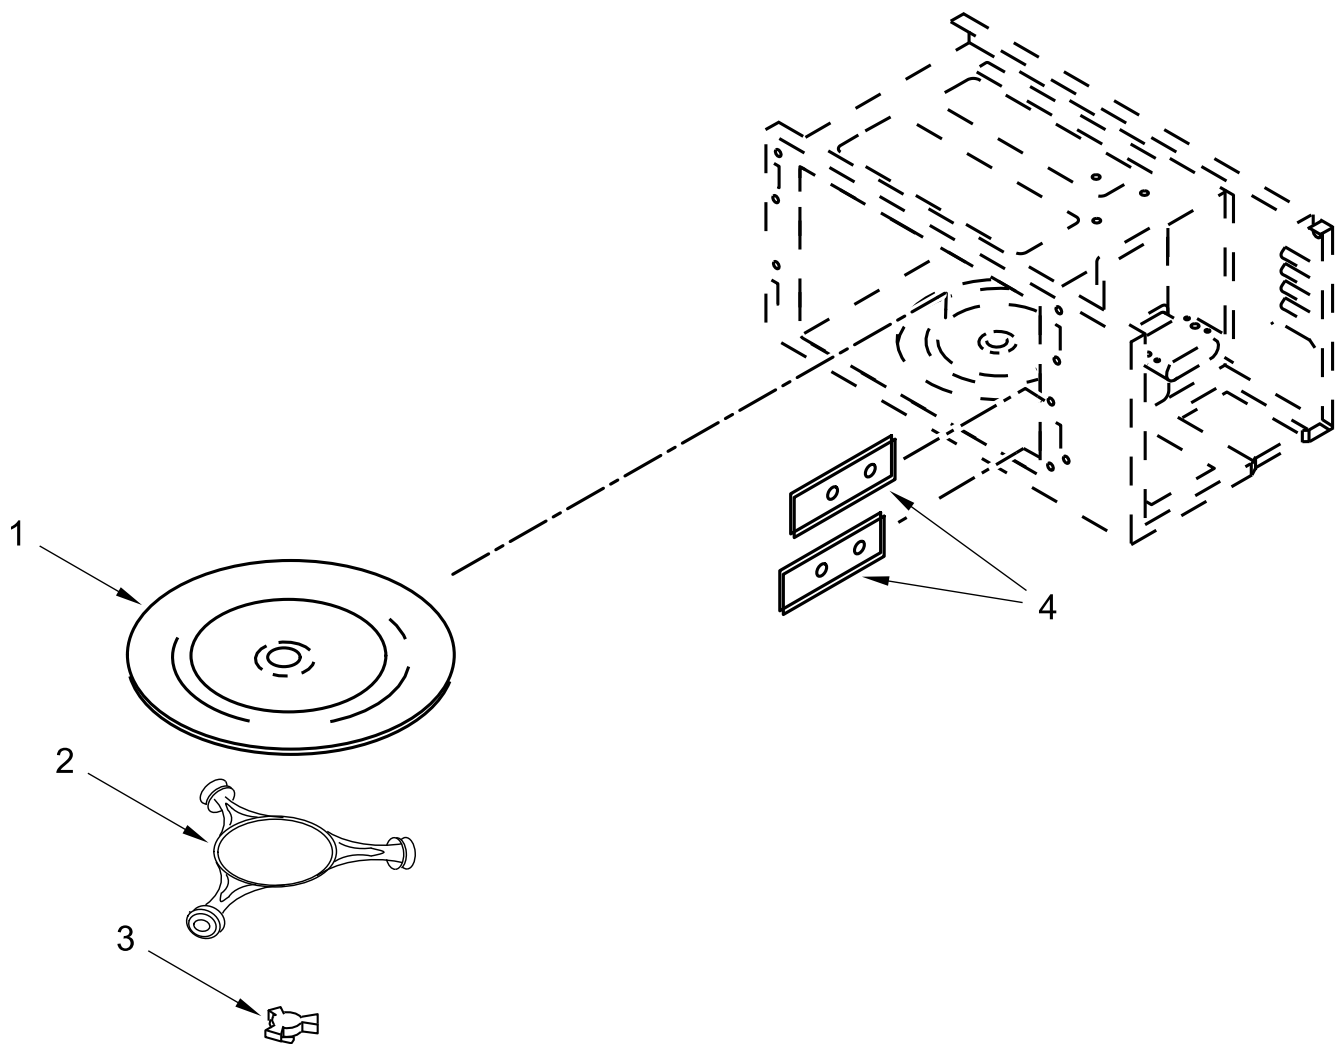

INTERNAL MICROWAVE PARTS

Illus.
No.

Part No.

Description

- | | | |
|---|--------------|-----------------|
| 1 | 461967720541 | Tray, Cook |
| 2 | W10367316 | Ring, Turntable |

Illus.
No.

Part No.

Description

- | | | |
|---|--------------|------------------|
| 3 | W10545578 | Drive, Turntable |
| 4 | 461967451001 | Plate, Cover |

OPTIONAL PARTS (NOT INCLUDED)

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	72032	Black

PAINT, SPRAY

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	261900	Citrine White
	830864	Black

ADHESIVE

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	482338	Sealer, Silastic

MISCELLANEOUS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	4448950	Screw, Door Installation