




30" ELECTRIC BUILT-IN COOKTOP

MODELS:

WCC31430AB03 (Black)

WCC31430AW03 (White)

COOKTOP PARTS

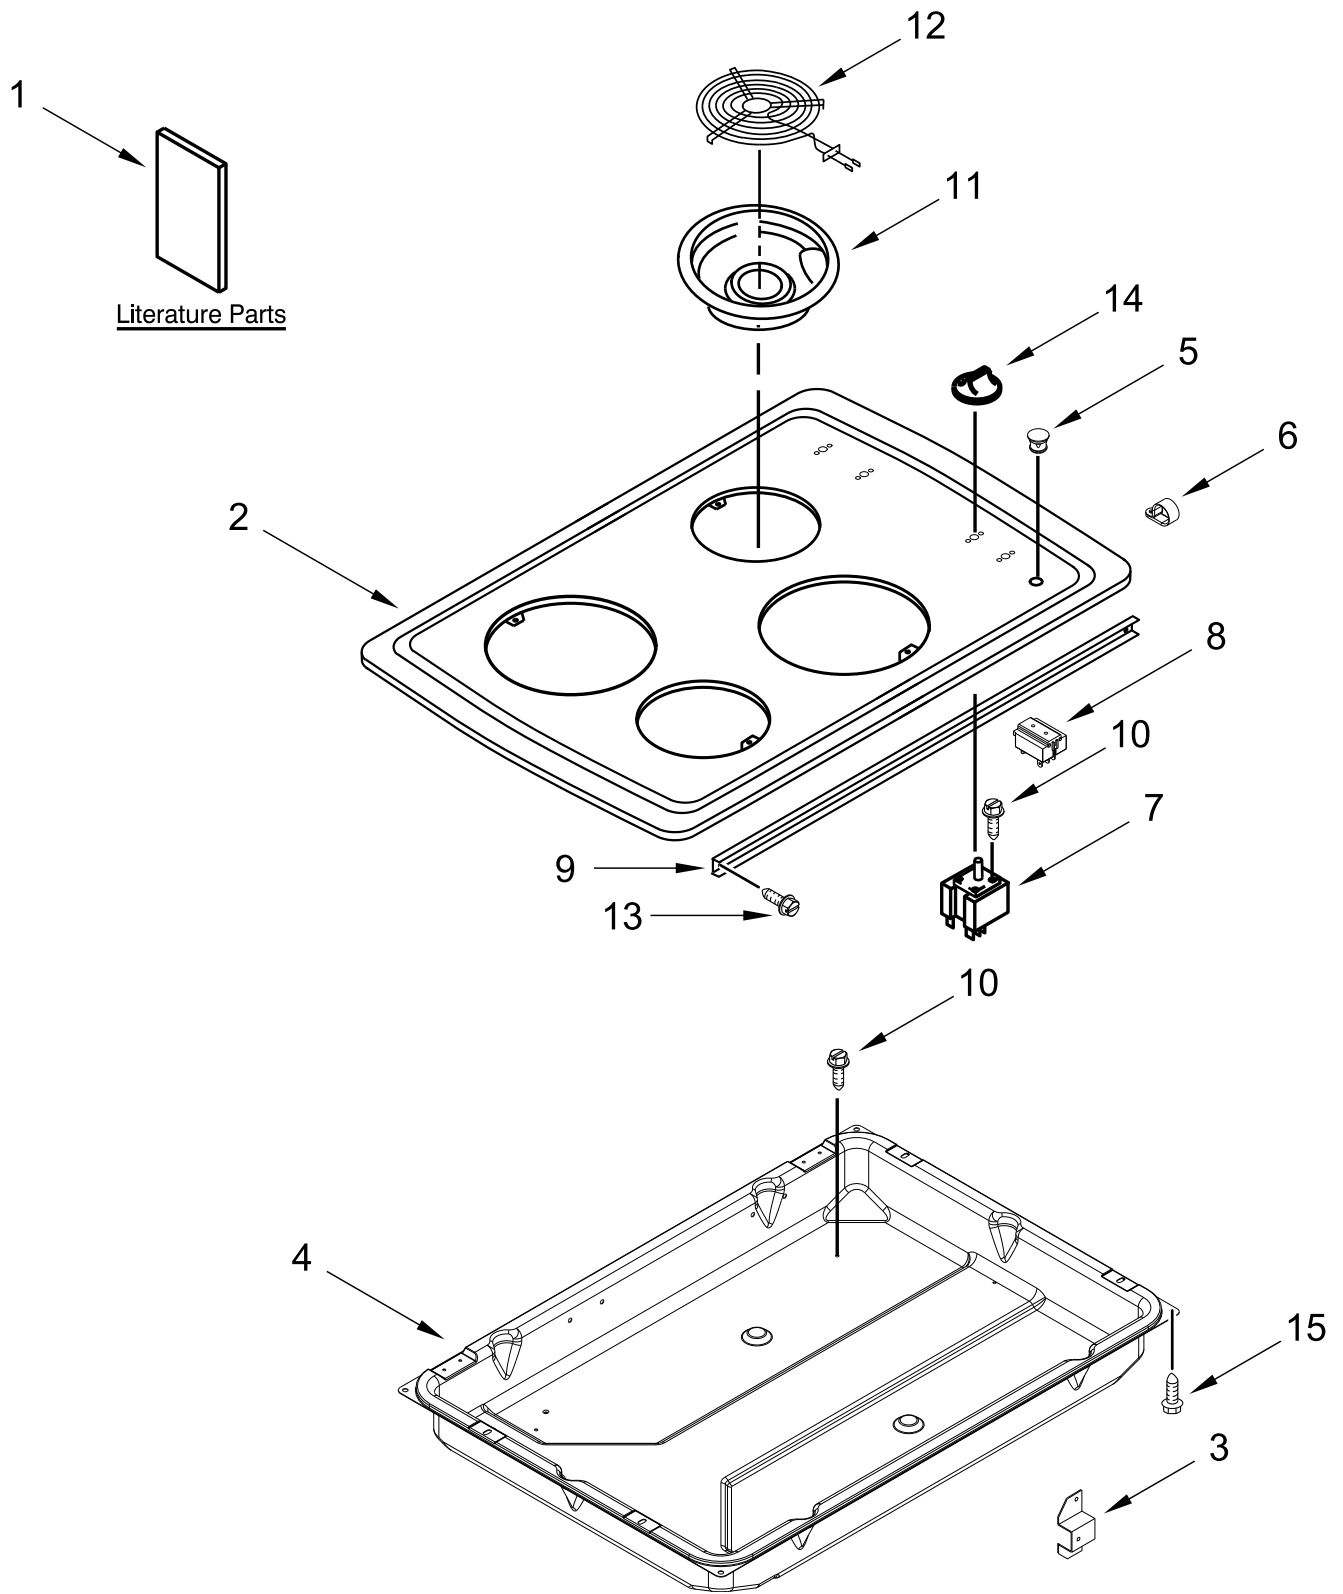

COOKTOP PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	8	7407P102-60	Light, Indicator	14		Knob, Control
	W10274252	Instructions, Installation	9		Brace, Top (Not Serviced)		W10454079	Black
	W11235896	Guide, Use & Care	10	W10734880	Screw		W10454082	White
	W10278688	Wiring Diagram	11	7725P053-60	Bowl, Drip Small (Left Front & Right Rear)	15	7101P426-60	Screw
2		Cooktop		7725P054-60	Bowl, Drip Large (Left Rear & Right Front)			FOLLOWING PARTS NOT ILLUSTRATED
	W10457738	Black					W11171895	Harness, Main
	W10457741	White					7101P027-60	Screw, Ground
3		Bracket, Main Top (Not Serviced)					5155P758-60	18 BK 125C
4		Box, Burner (Not Serviced)	12	W11364018	Element, Coil Heating (1500W) (Left Front & Right Rear)		W11190477	Harness, Element Wire
5	7730P012-60	Lens, Indicator Lamp					7101P394-60	Screw (For Element Wire Harness)
6	7111P002-60	Clamp, Wire		W11364019	Element, Coil Heating (2400W) (Left Rear & Right Front)		8008P010-60	Grommet, Harness
7	7403P373-60	Switch, Infinite (Left Front & Right Rear)						
	7403P372-60	Switch, Infinite (Left Rear & Right Front)	13	7101P336-60	Screw			

OPTIONAL PARTS (NOT INCLUDED)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		ACCESSORIES
	242905	Kit, Canning Unit
	31617A	Cleaner, Grate & Drip Pan
	31462	Cleaner, Stainless Steel