




RISE 48" DUAL-FUEL PROFESSIONAL RANGE
Includes Griddle

MODELS:

JDRP548HL01 (Stainless)


BURNER BOX AND GRIDDLE PARTS

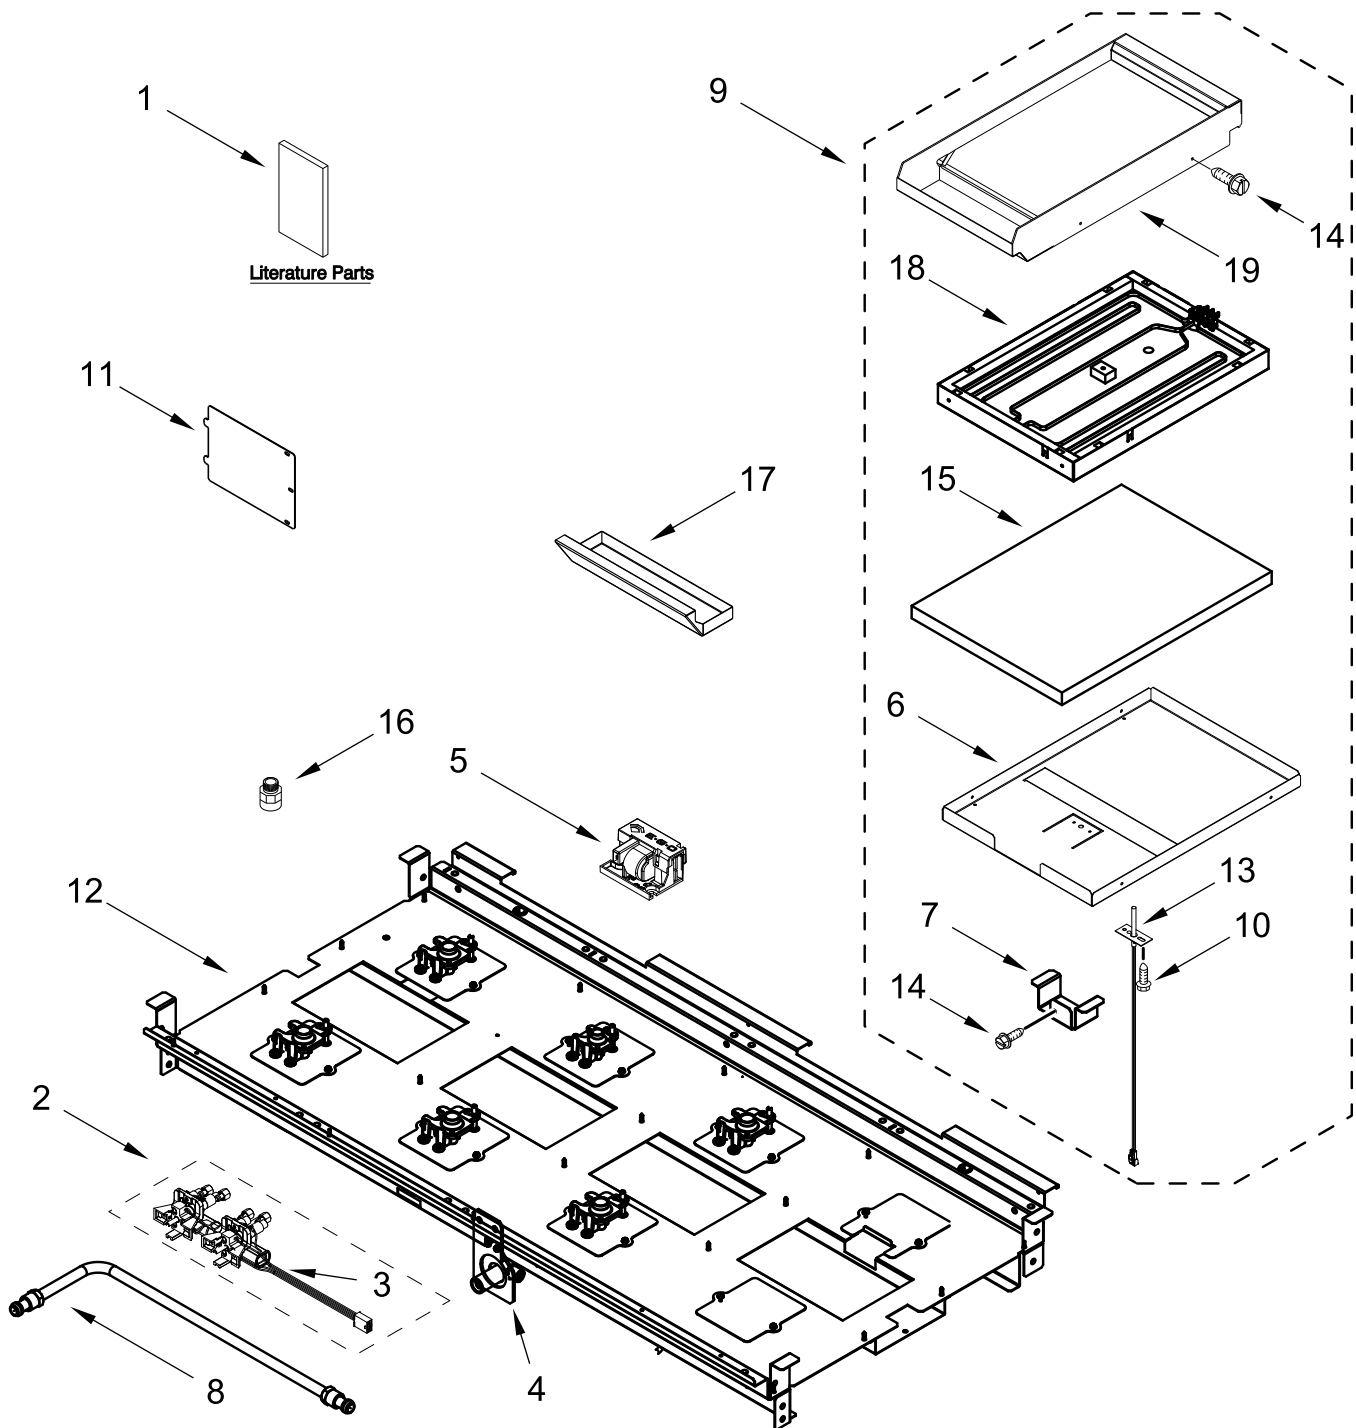

BURNER BOX AND GRIDDLE PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	4	W11121194	Bracket, Manifold	19	W10891567	Module, Griddle
	W11114330	Guide, Use and Care	5	W11121317	Module, Spark			FOLLOWING PARTS NOT ILLUSTRATED
	W11177312	Guide, Quick Start	6	W11330430	Tray, Griddle Insulation		W11200315	Harness, Main (30")
	W11114333	Instructions, Installation	7	W11121384	Bracket, Griddle-RTD		W11200311	Harness, Main (18")
	W11184746	Guide, Internet Connectivity	8	W10892784	Tube, Manifold Supply (Left)		W10903727	Harness, Griddle
	W11266584	Diagram, Wiring (Cooktop)		W10892775	Tube, Manifold Supply (Left Center)		W11200329	Harness, Cooktop
	W11202370	Diagram, Wiring (Oven)		W10892789	Tube, Manifold Supply (Right Center)		W10780278	Harness, Door Lock
	W11202265	Sheet, Tech					W11200318	Harness, Communication
2	W11183722	Assembly, Valve Manifold (Left Front And Left Rear)	9	W10891745	Assembly, Griddle Module		W11242785	Harness, WIFI
			10	3196160	Screw		W11212216	Cord, Power
			11	W10115843	Cover, Ignition		9759877	Retainer, Strain Relief
	W10893058	Assembly, Valve Manifold (Left Center Front And Left Center Rear)	12		Box, Burner (Not Serviced)		4450800	Screw, Grounding
			13	W10891584	Sensor, Griddle		W10253333	Bracket, Anti-Tip
			14	W10162096	Screw		7101P485-60	Screw, Anti-Tip Kit
	W10893051	Assembly, Valve Manifold (Right Center Front And Right Center Rear)	15	W11121383	Insulation, Griddle		W11238041	Kit, LP Conversion
			16	4453116	Adapter, Male			
			17	W10276497	Tray, Griddle Drip			
			18	W10891698	Element, Griddle			
3	W11106300	Switch, Harness						


COOKTOP, BURNER AND GRATE PARTS

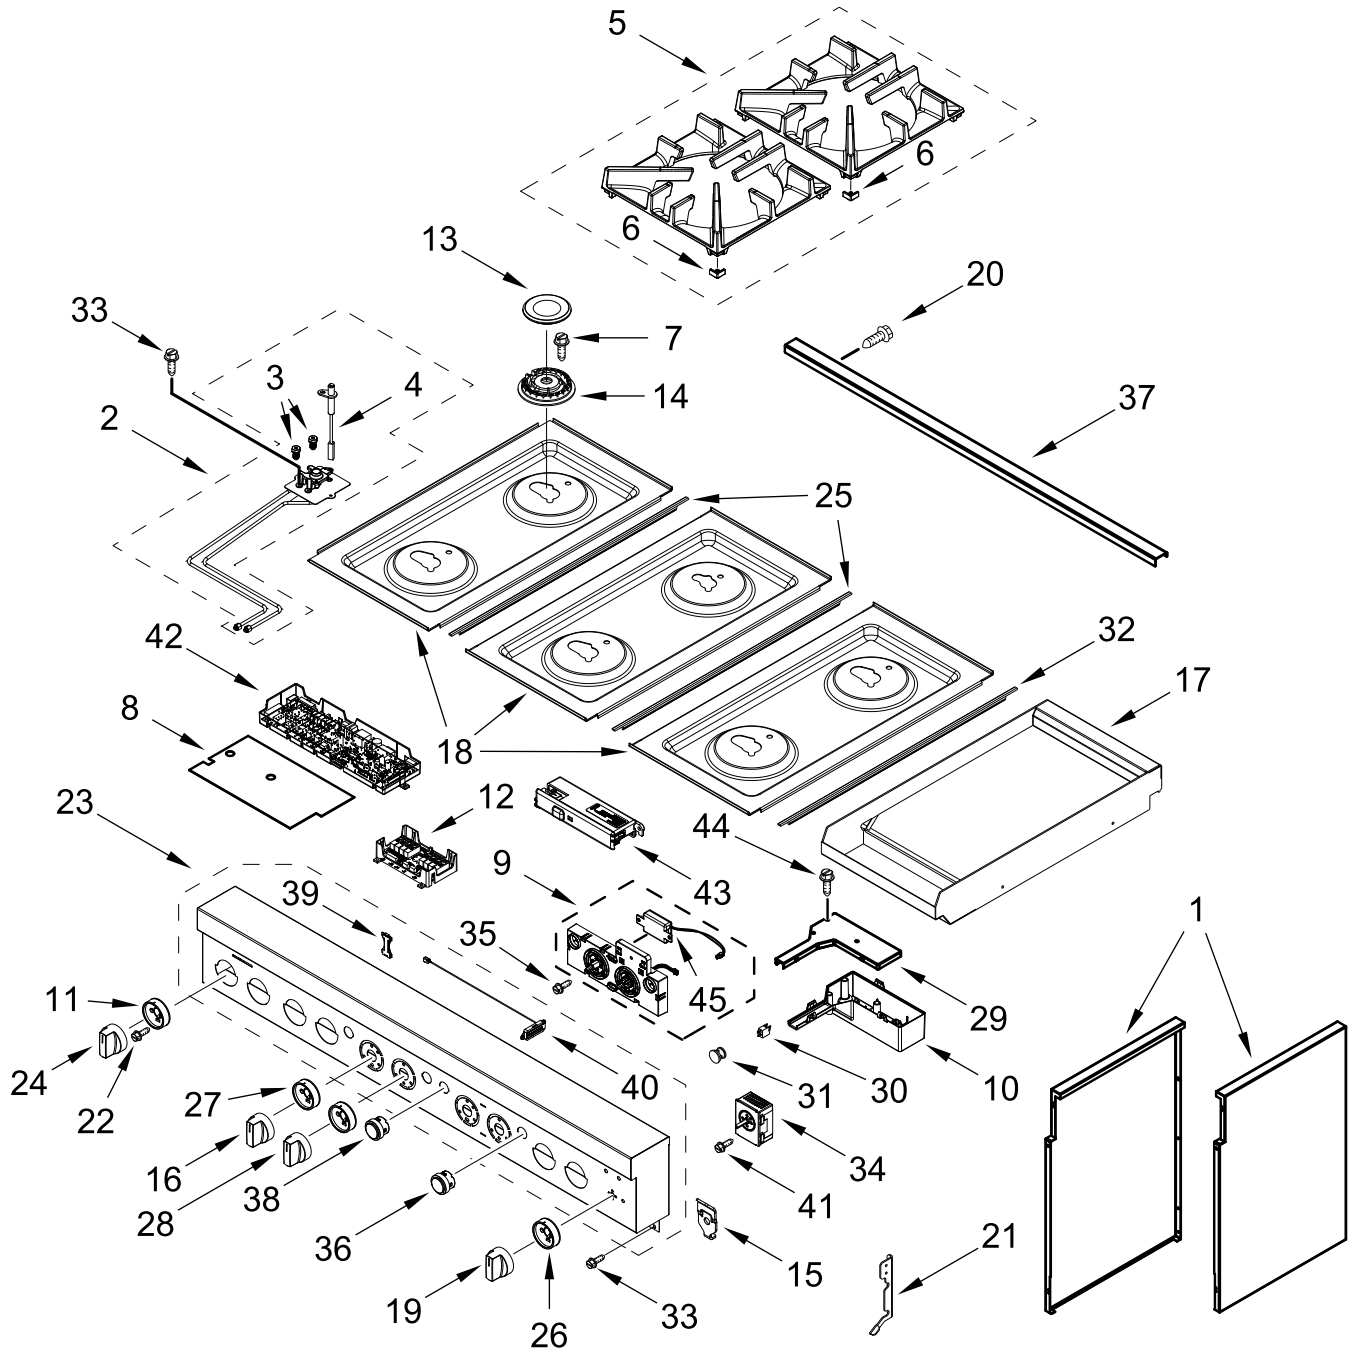

COOKTOP, BURNER AND GRATE PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11111429	Panel, Cabinet Side (Left)	5		Assembly, Grate	24		Knob, Burner (For 6 Cooktop Burners)
	W11111428	Panel, Cabinet Side (Right)		W11291176	Black (Set of 2)		W10882958	Stainless
2	W10892807	Assembly, Orifice Holder (Left Front)	6	W11042504	Bumper, Grate	25		Trim, T-Strip
	W10892495	Assembly, Orifice Holder (Left Rear)	7	W11323260	Screw		W10271524	Black
	W11114338	Assembly, Orifice Holder (Left Center Front)	8	W11281269	Barrier, Appliance Manager	26	W11104966	Bezel, Griddle
	W10892810	Assembly, Orifice Holder (Left Center Rear)	9	W11436323	Interface, User	27		Bezel, Oven (For 4 Oven Knobs)
	W10892505	Assembly, Orifice Holder (Right Center Front)	10	W11205795	Cover, WIFI Outer		W10914998	Stainless
	W10892444	Assembly, Orifice Holder (Right Center Rear)	11	W11090283	Bezel, Cooktop (For 6 Cooktop Burners)	28		Knob, Oven Temperature
3	W10892422	Orifice, Main (17.4K) (Left Front & Right Center Front)	12	W10890116	Manager, Appliance (Expansion)		W10891871	Stainless
	W10892418	Orifice, Main (15.4K) (Left Rear, Left Center Front, Right Center Rear)	13		Cap, Burner	29	W11205794	Cover, WIFI Inner
	W10892440	Orifice, Main (7.2K) (Left Center Rear)		W11121392	Black (Set of 6)	30	W10116114	Light, Indicator Housing
	W10892435	Orifice, Simmer (2.6K) (All But Left Center Rear)	14	W10891987	Spreader, Flame (High) (All But Left Center Rear)	31	W10294500	Lens, Indicator Light
	W10892429	Orifice, Simmer (2.0K) (Left Center Rear)		W10892022	Spreader, Flame (Low) (Left Center Rear)	32	W10291193	Trim, L-Strip
4	W11238757	Igniter (Left Front, Left Rear, Right Center Front)	15	W11036559	Spring Clip, Range	33	7101P426-60	Screw
	W11238758	Igniter (Left Center Front, Right Center Rear)	16		Knob, Oven Mode	34	W11033497	Control, Griddle
	W11238756	Igniter (Left Center Rear)		W10891872	Stainless	35	3400814	Screw
			17		Assembly, Griddle Module (Part Number Shown On Burner Box and Griddle Parts Page)	36	W11090650	Button Assembly, Oven Start
						37	W11156418	Trim, Island
			18		Panel, Cooktop	38	W11090651	Button Assembly, Oven Light
				W10803515	Black (Left)	39	W10896369	Assembly, Light Pipe
				W10803519	Black (Left Center)	40	W11130078	Antenna, WIFI
				W10804364	Black (Right Center)	41	7101P309-60	Screw
			19		Knob, Griddle	42	W11100270	Manager, Appliance (Powermax)
				W10884943	Stainless	43	W11110768	Assembly, WIFI Module
			20	7101P338-60	Screw	44	7101P624-60	Screw
			21	W10130760	Bracket, Moving Console (Left)	45	W10568405	Assembly, Speaker
				W10130759	Bracket, Moving Console (Right)			
			22	W11328357	Screw			
			23	W11253772	Panel, Control			


48" CHASSIS PARTS

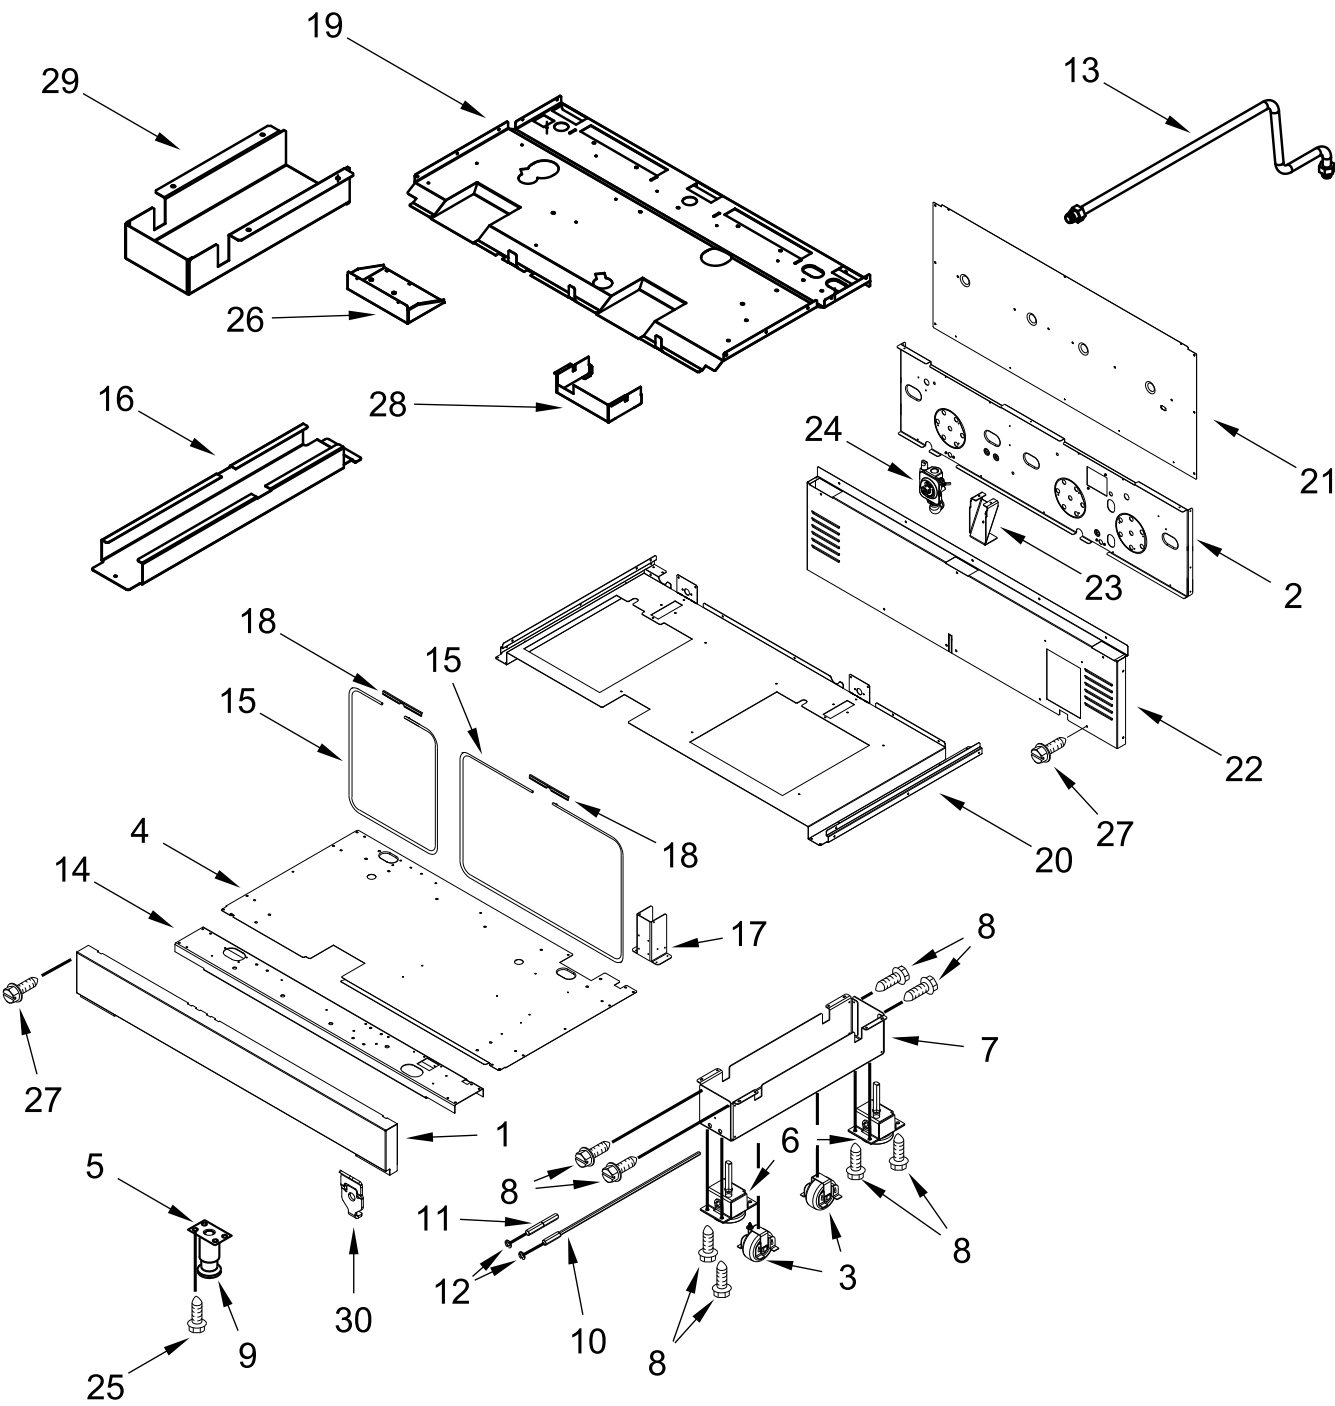

48" CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10883797	Kickplate	13	W11106963	Tube, Pressure Regulator	22	W11034123	Panel, Back Bottom
2	W11324987	Back, Chassis	14	W11369238	Support, Channel	23	W11096823	Bracket, Pressure Regulator
3	W10138054	Assembly, Roller	15	W11115328	Gasket, Oven (30")	24	W10449140	Regulator, Pressure
4	W11110260	Duct, Bottom (48")		W11115326	Gasket, Oven (18")	25	3400518	Screw
5	9759118	Plate, Mounting	16	W11050145	Duct-Chassis, Rear	26	W11106341	Drawer, Appliance Manager
6	9760860	Leveler	17	W10115819	Column, Central	27	7101P426-60	Screw
7	W10908710	Base, Leveling Leg	18	W11362015	Retainer, Gasket (9" Long)	28	W11369237	Cabinet, Appliance Manager
8	4449743	Screw	19	W11324984	Top, Chassis	29	W11368831	Channel, Wire
9	9759117	Foot, Dual Fuel	20	W11040800	Chassis, Bottom	30	W11036559	Spring Clip, Range
10	W10115869	Shaft, Long	21	W11103335	Panel, Back Top			
11	W10115793	Shaft, Short						
12	489504	E-Ring						


30" OVEN PARTS

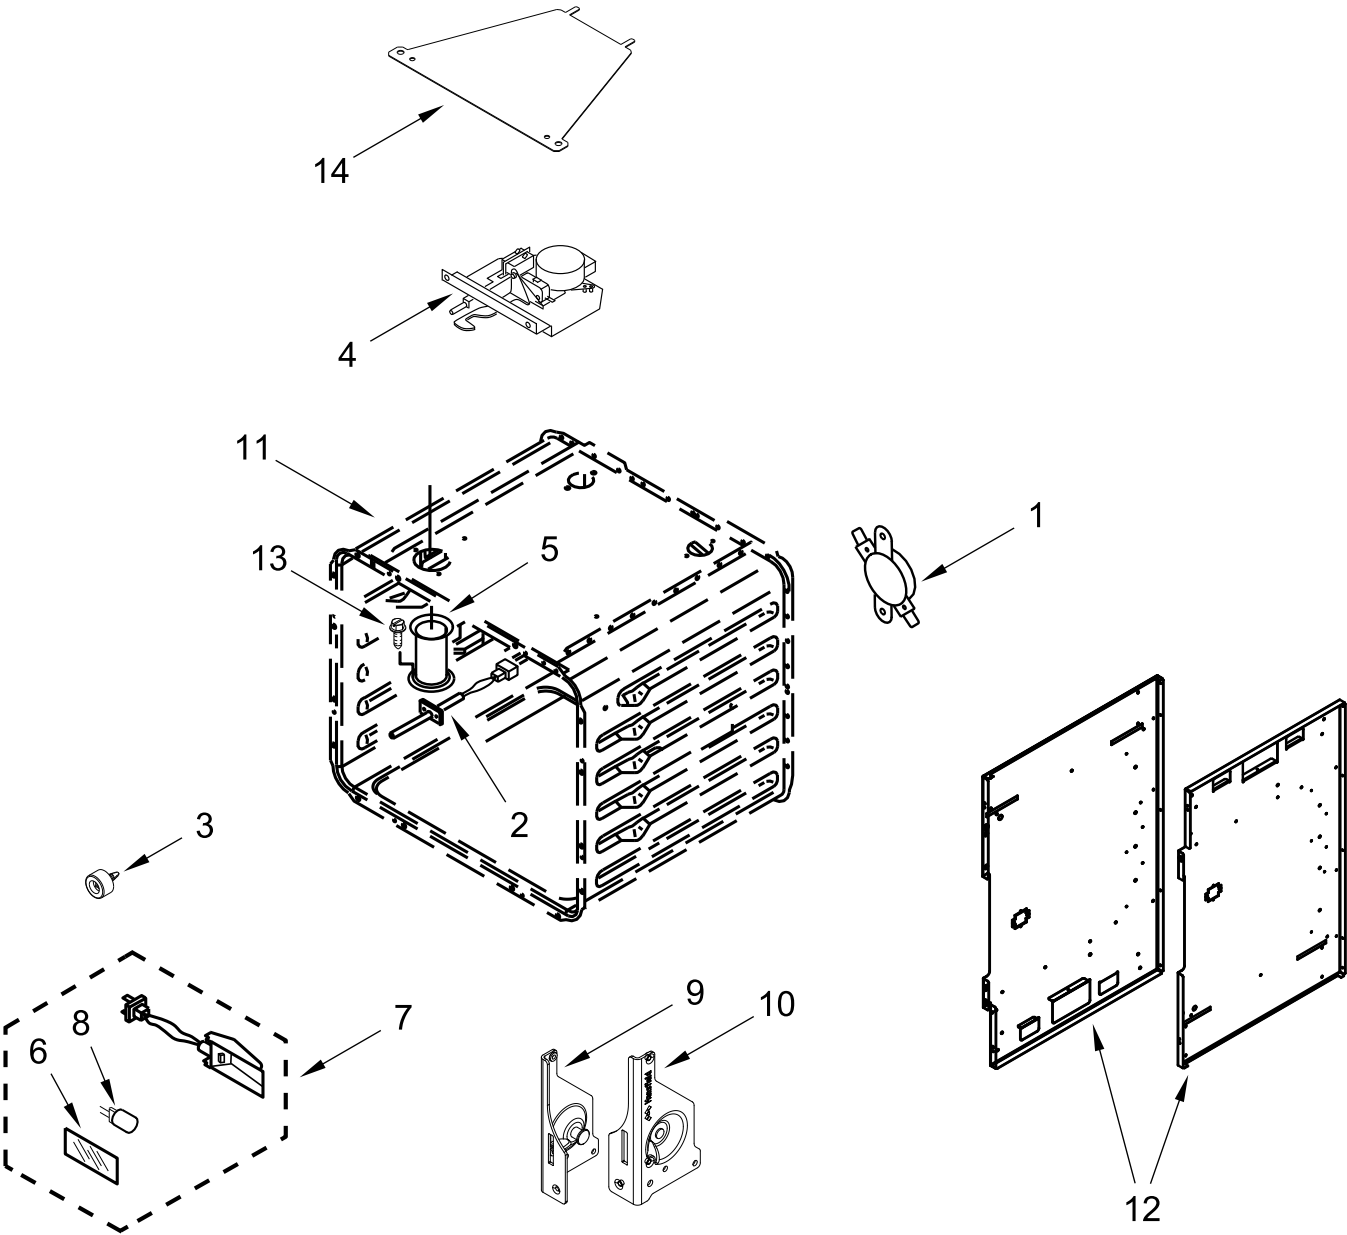

30" OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	4449751	Thermostat (TOD)	10	W11096293	Receiver, Hinge (Right)	14	W10160858	Cover, Latch
2	W10622170	Probe, Sensor						FOLLOWING PARTS NOT ILLUSTRATED
3	W10351278	Bumper & Screw	11		Liner, Oven (Not Serviced)		W10282810	Insulation, Wrap, 30"
4	W10830016	Latch, Motorized	12	W11102297	Chassis, Side (Left)		W10282816	Insulation, Back, 30"
5	W11290663	Tube, Vent		W11102296	Chassis, Side (Right)		3400968	Nut
6	W10169756	Lens, Light	13	3196176	Screw			
7	W11223932	Assembly, Oven Light						
8	W10169757	Bulb, Light						
9	W11096294	Receiver, Hinge (Left)						


18" OVEN PARTS

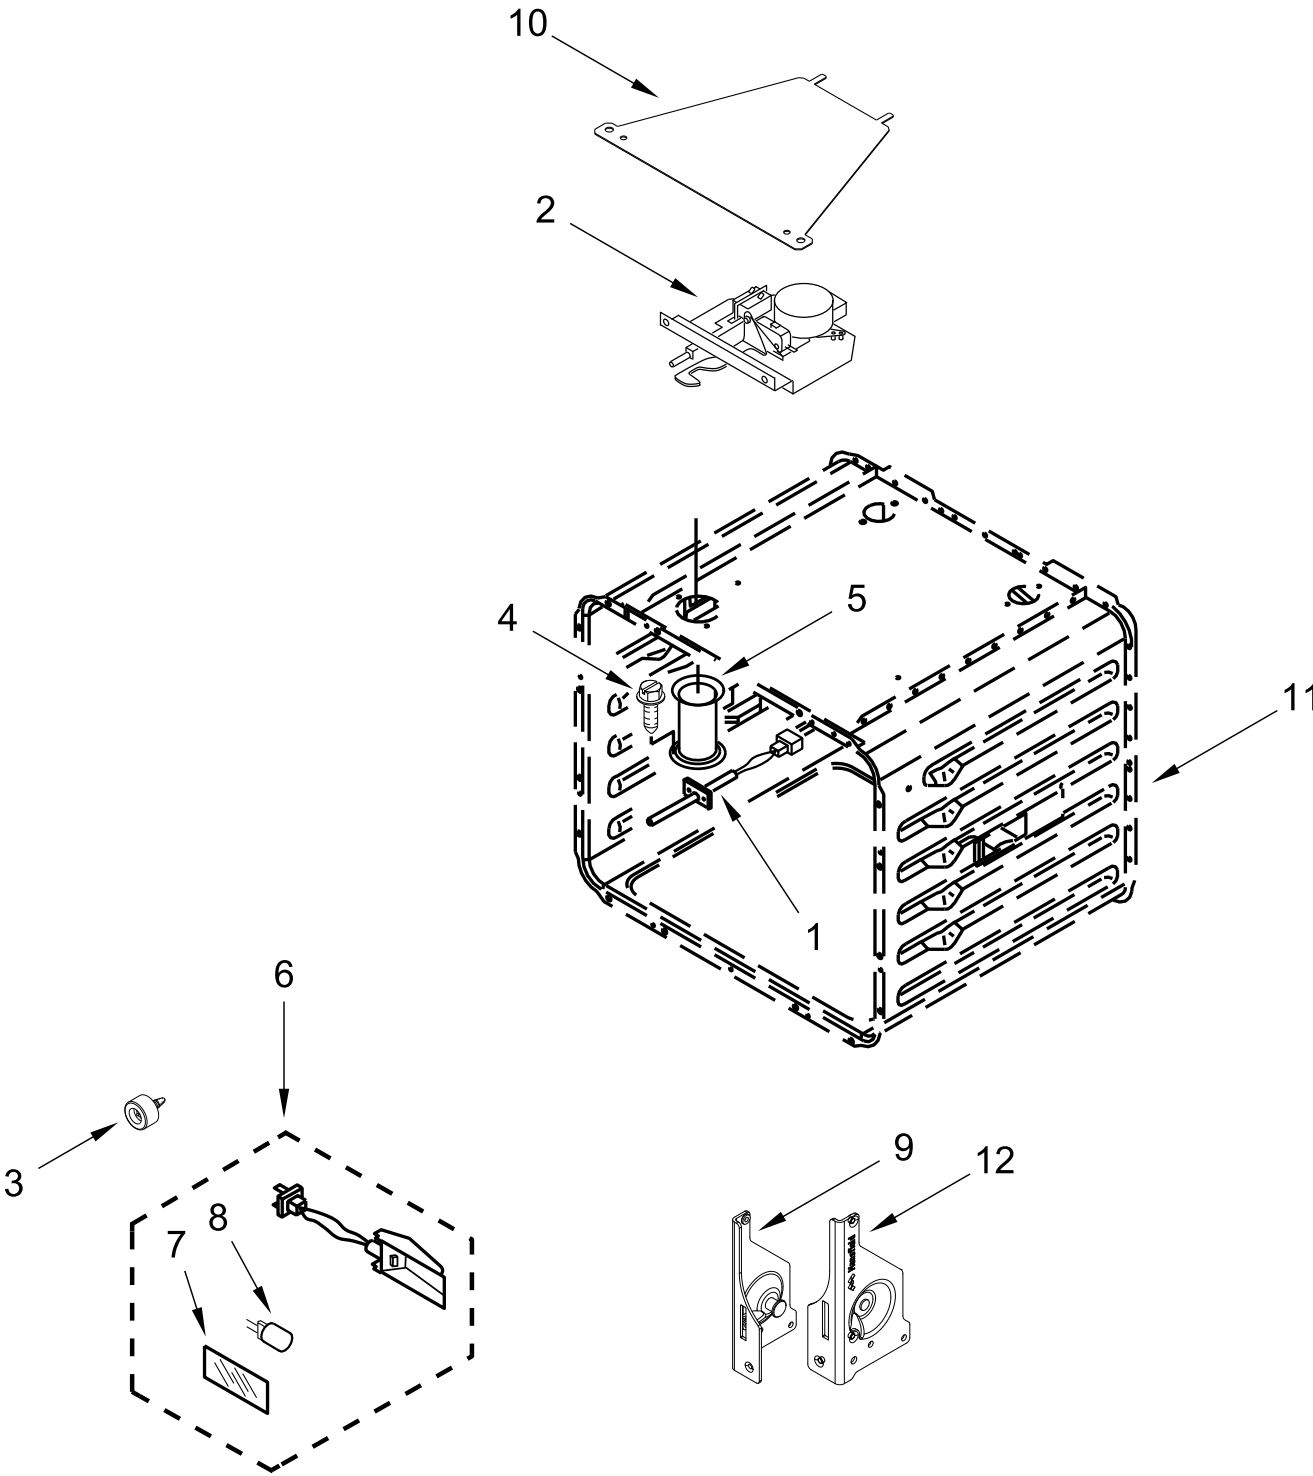

18" OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10622170	Probe, Sensor	8	W10169757	Bulb, Light	12	W11096293	Receiver, Hinge (Right)
2	W10830016	Latch, Motorized	9	W11096294	Receiver, Hinge (Left)			FOLLOWING PARTS NOT ILLUSTRATED
3	W10351278	Bumper & Screw	10	W10160858	Cover, Latch			
4	3196176	Screw	11		Liner, Oven (Not Serviced)			
5	W10288078	Tube, Vent					W10282820	Insulation, Wrap, 18"
6	W11223932	Assembly, Oven Light					W10282812	Insulation, Back, 18"
7	W10169756	Lens, Light					3400968	Nut


VENTING PARTS

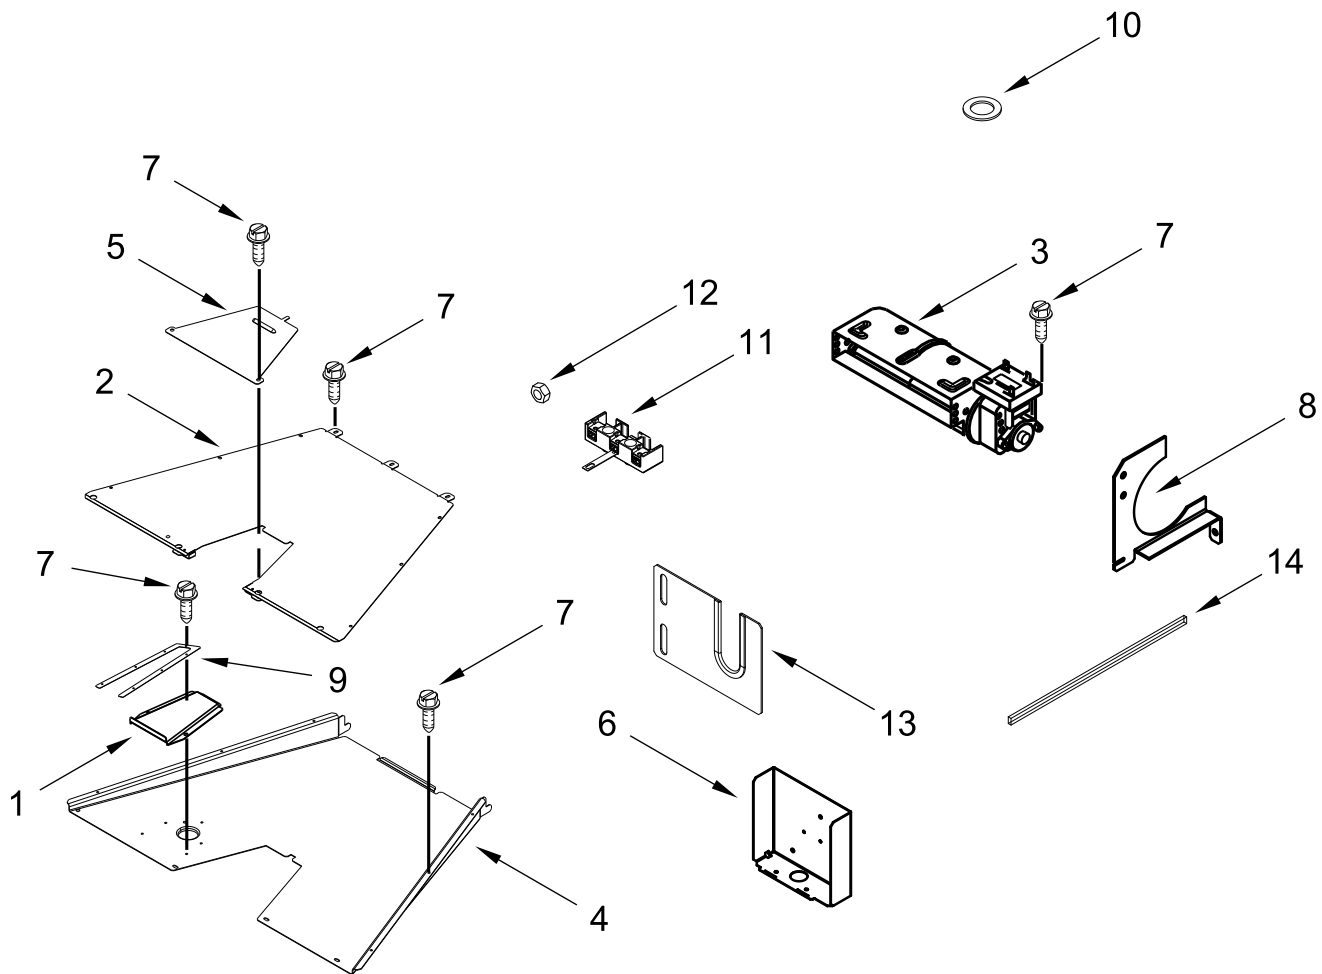

VENTING PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10818234	Slope, Exhaust Vent (30")	4	W11105222	Vent, Cooling Bottom (30")	9	W10270397	Seal, Vent Slope (30")
	W10818235	Slope, Exhaust Vent (18")		W11113378	Vent, Cooling Bottom (18")		W10270402	Seal, Vent Slope (18")
2	W11105223	Vent, Cooling Top (30")	5	W11109518	Plate, Cooling Latch	10	W10270396	Seal, Chimney
	W11113380	Vent, Cooling Top (18")	6	W11353392	Box, Terminal	11	9761958	Block, Terminal
			7	7101P426-60	Screw	12	112432	Nut, Hex
3	W11200129	Blower	8	W11047754	Bracket, Blower Mount	13	W11106956	Cover, Channel
						14	W10919715	Gasket


30" OVEN DOOR PARTS

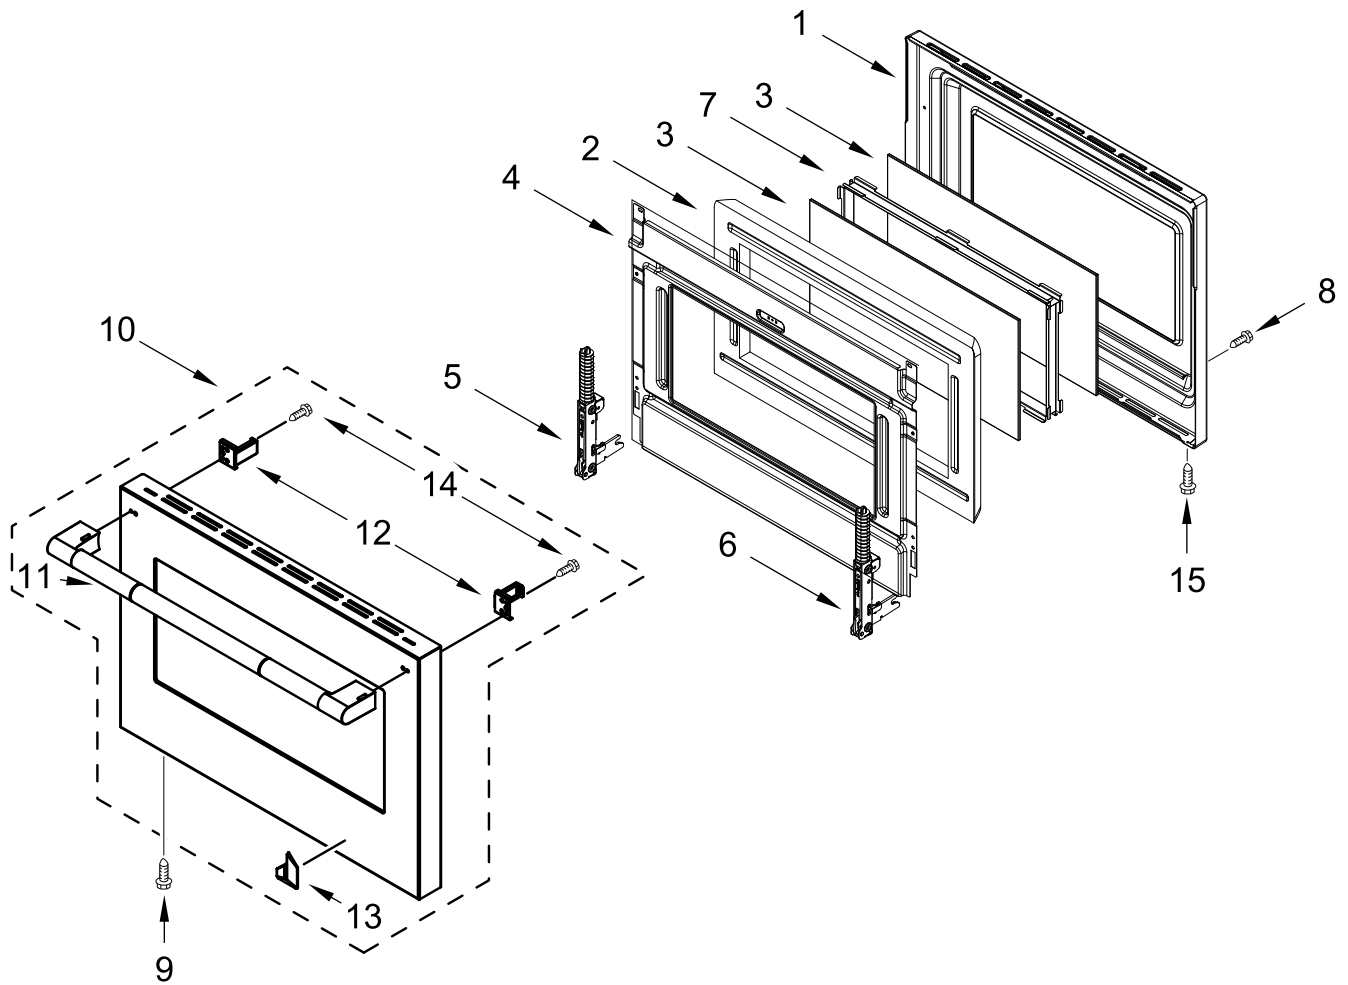

30" OVEN DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11036771	Liner, Door	7	W10272594	Frame, Glass	12	W11197830	Bracket, Handle
2	W11413190	Insulation, Door (30")	8	W10898280	Screw	13		Badge
3	W11184409	Glass, Inner	9	W10162096	Screw		W11238656	Stainless
4	W11194821	Retainer, Glass	10	W11199071	Assembly, Outer Door Glass (Includes Handle)	14	W10276043	Screw
5	W11390105	Hinge, Door (Left)				15	W10607120	Screw
6	W11390124	Hinge, Dual (Right)	11	W11102826	Handle, Door			


18" OVEN DOOR PARTS

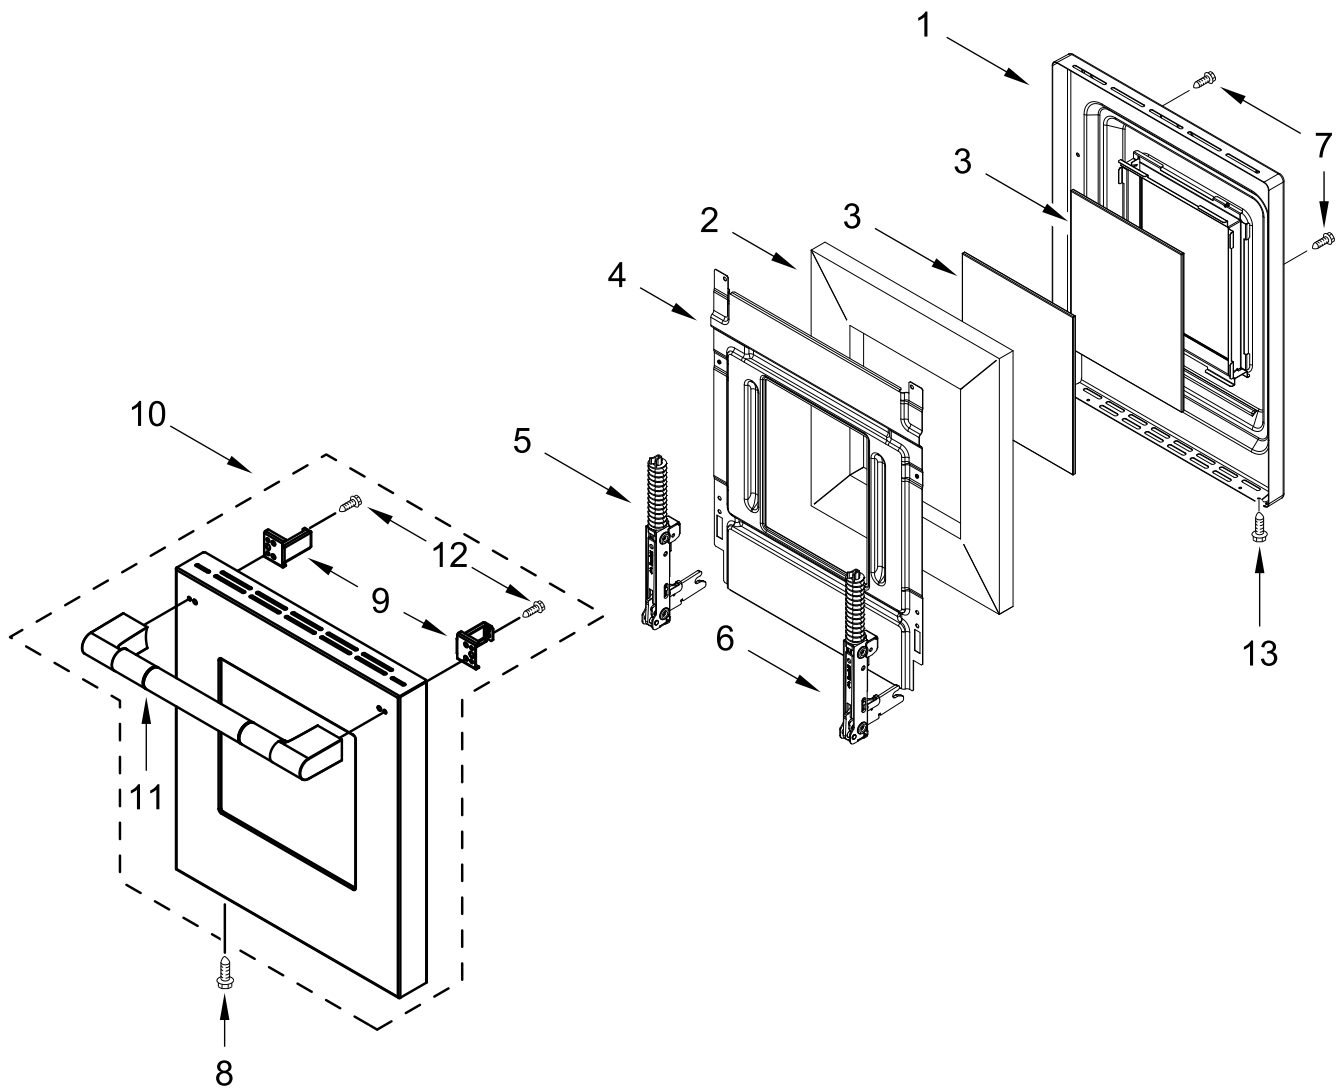

18" OVEN DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11036770	Liner, Door	7	W10898280	Screw	11	W11102824	Handle, Door
2	W10884821	Insulation, Door	8	W10162096	Screw	12	W10276043	Screw
3	W11036789	Glass, Inner	9	W11197830	Bracket, Handle	13	W10607120	Screw
4	W11194818	Retainer, Glass	10	W10799306	Assembly, Outer Door Glass (Includes Handle)			
5	W11390106	Hinge, Door (Left)						
6	W11390125	Hinge, Door (Right)						


30" INTERNAL OVEN PARTS

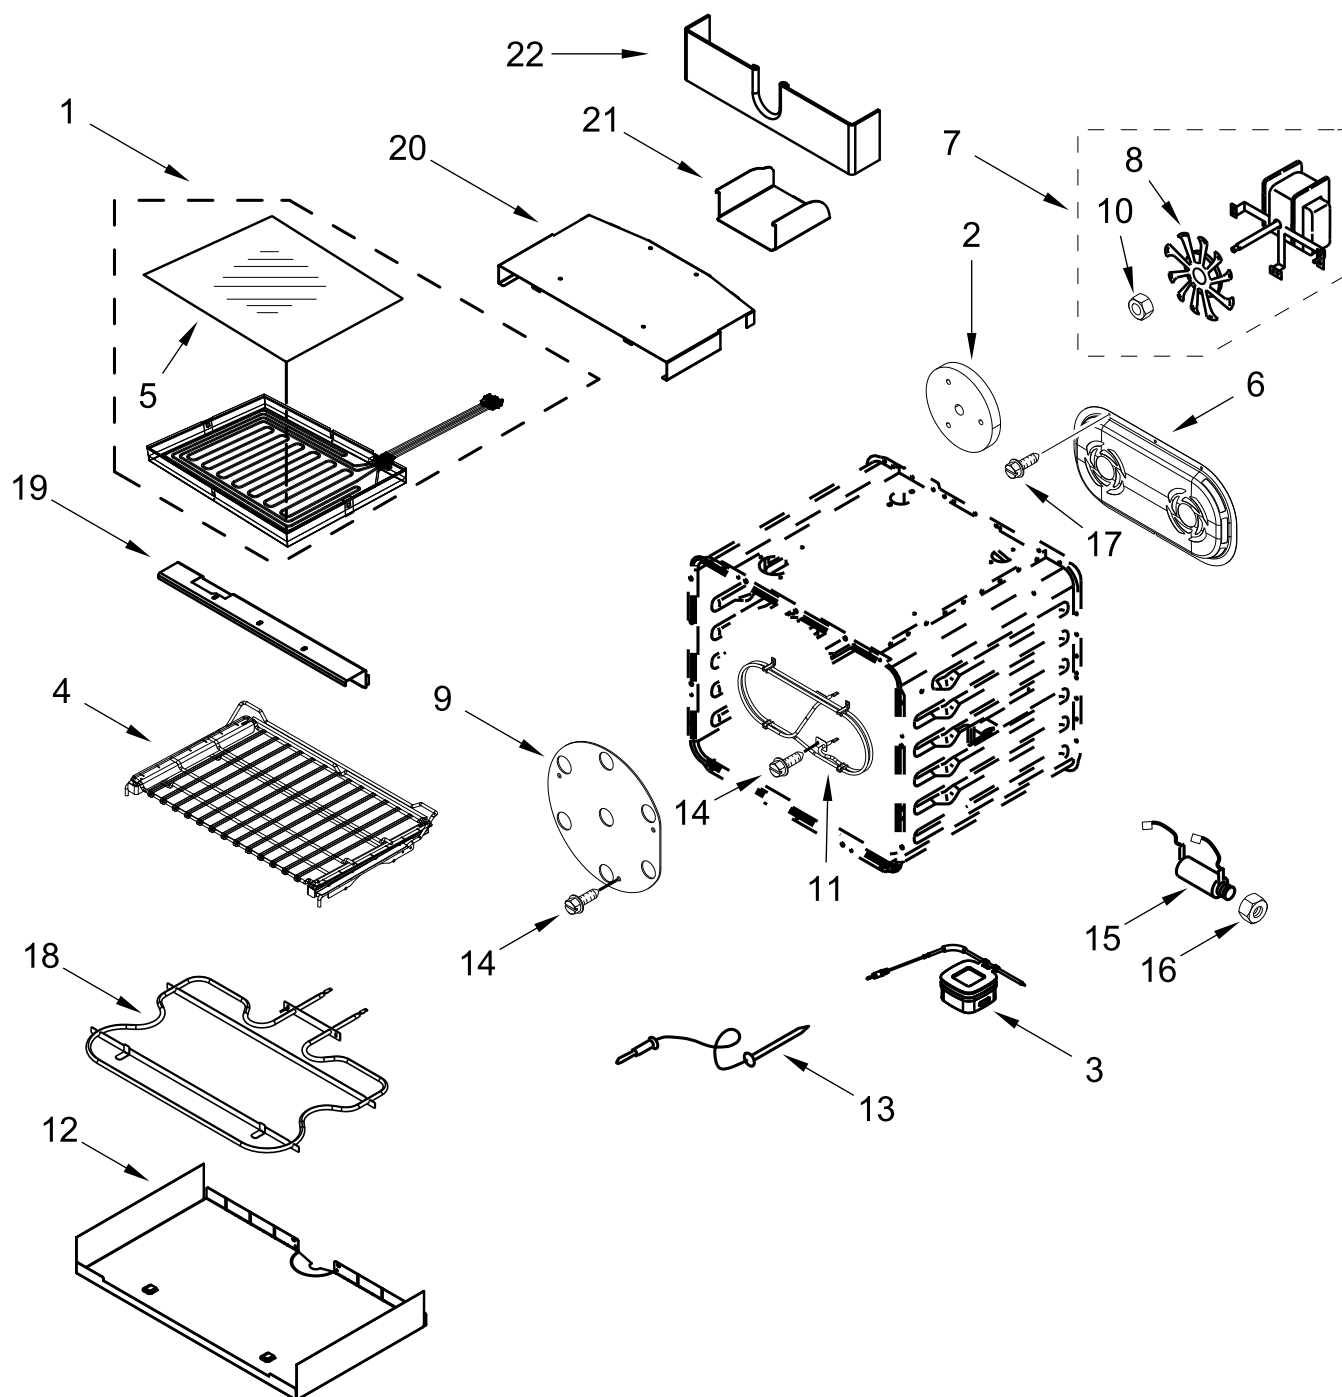

30" INTERNAL OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11210530	Element, Broil	8	W11108376	Blade, Fan	16	W11033111	Nut, Locking
2	W10282821	Insulation, Convection Cover	9	W10261523	Plate, Fan	17	W10739592	Screw
3	W11186918	Probe, Wireless Meat	10	W10631504	Nut, Acorn (LH)	18	W10115995	Element, Hidden Bake
4	W11111342	Rack, Oven (Sliding)	11	W10116434	Element, Convection	19	W11112336	Bracket, Broil Front
5	W11193191	Glass, Broil Element	12	W11109421	Tray, Hidden Bake	20	W11158843	Bracket, Broil Top
6	W11232487	Baffle, Convection	13	9755542	Probe, Temperature	21	W11111391	Cover, Broil Terminal
7	W11121400	Fan, Convection	14	4449154	Screw	22	W11170823	Cover Plate, Terminal Hole
			15	9755543	Jack, Meat Probe			

18" INTERNAL OVEN PARTS

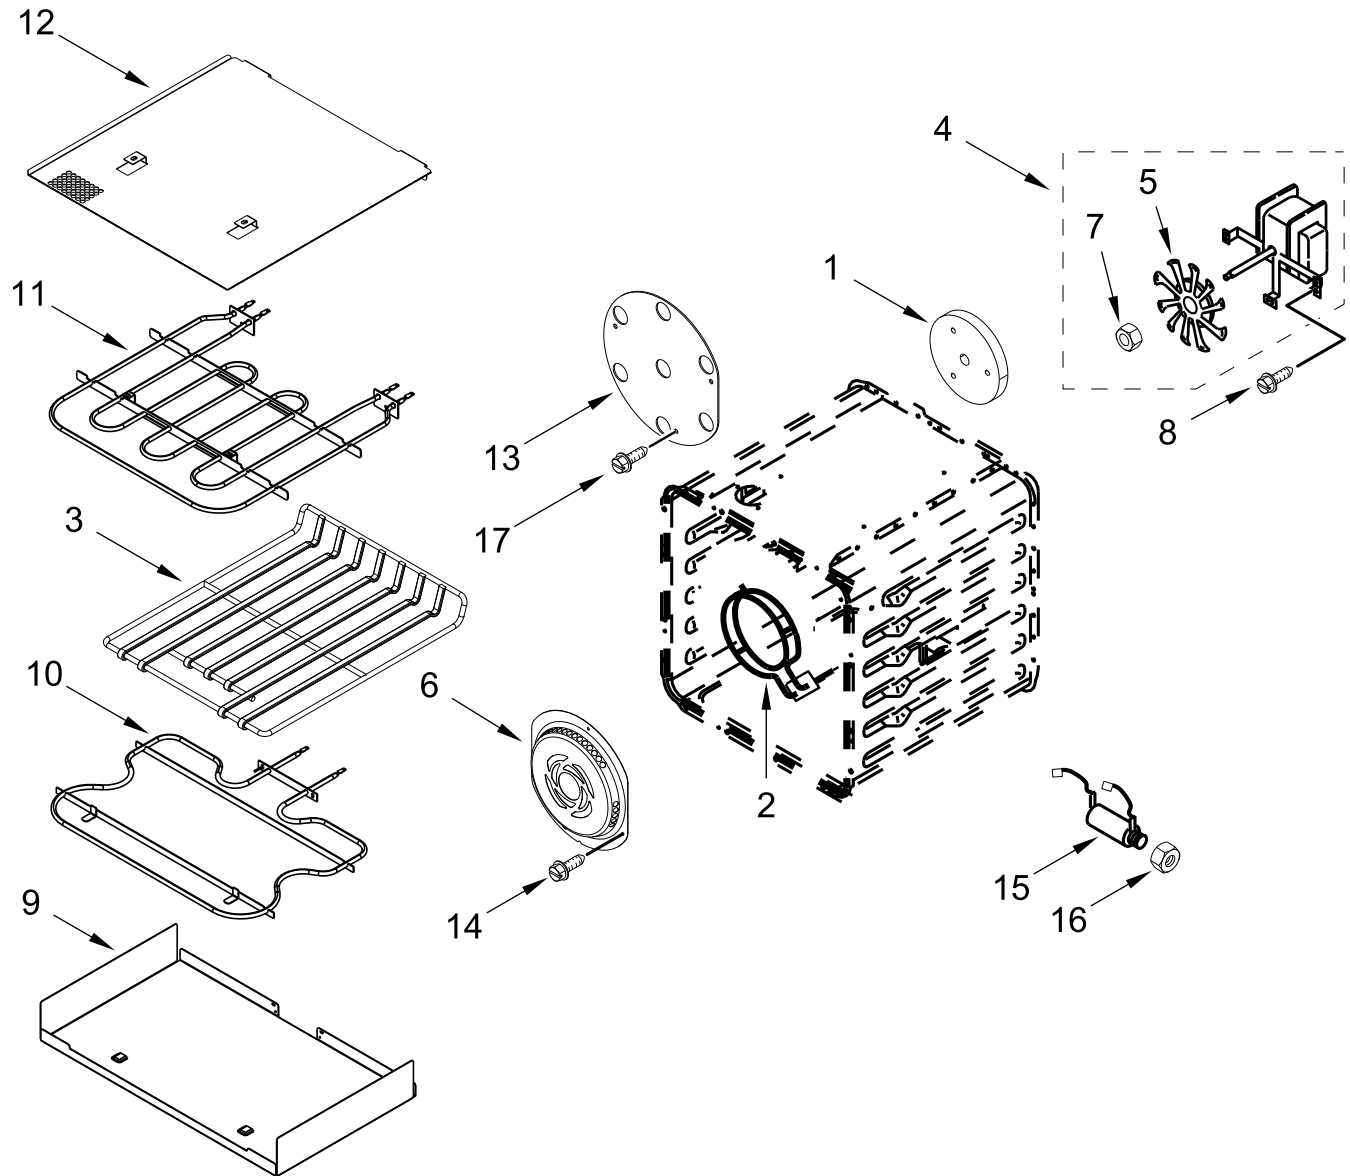

18" INTERNAL OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10282821	Insulation, Convection Cover	7	W10631504	Nut, Acorn (LH)	14	W10739592	Screw
2	9762242	Element, Convection Steam	8	4449154	Screw	15	9755543	Jack, Meat Probe
3	W11111351	Rack, Oven (18")	9	W11110223	Tray, Hidden Bake	16	W11033111	Nut, Locking
4	W11121400	Fan, Convection	10	W11045324	Element, Hidden Bake	17	W10720084	Screw
5	W11108376	Blade, Fan	11	W10116010	Element, Broil			
6	W11368180	Cover, Fan	12	W10160855	Shield, Element Broil			
			13	W10261523	Plate, Fan			

OPTIONAL PARTS (NOT INCLUDED)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		ACCESSORY PARTS
	4396920	Stainless Steel Cleaner & Polish
	W10160195	Cover, Grill/Griddle
	W10216179	Ring, Wok Backsplash
	W10285449	48" With Shelves
	31464	Cleaner, Cooktop
	W10123240	Rack, Broiler Pan & Roasting
	8284755	Backsplash (Adjustable)
	JXA9001CDP	Stainless Steel Wallsplash
	W11238043	Kit, High Altitude Kit, Burner Cap (Set of 4)
	W11323014	Brass, Large Burner Cap (Single)
	W11323015	Brass, Small
	W11323012	Brass, Large Kit, Bezel (Set of 4)
	W11323062	Chrome, Surface and Grill
	W11323068	Brass, Oven Bezel (Single)
	W11317495	Brass, Griddle
	W11323067	Brass, Oven
	W11316873	Brass, Surface and Gril
	W11323024	Chrome, Griddle
	W11317499	Chrome, Oven
	W11323061	Chrome, Surface and Grill