 


OPERATING INSTRUCTIONS

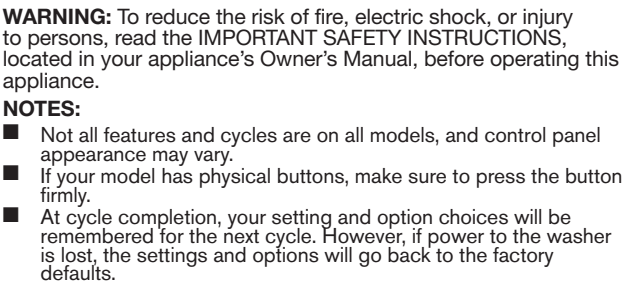

NOTE: See the “Adding Laundry Products” section for more information on adding HE detergent, fabric softener, and/or bleach.

Step 4. Select Settings.



 
Step 5. Press Start/ Pause/Cancel




IMPORTANT: Using non-HE detergent will likely result in longer cycle times and reduced rinsing performance. It may also result in component malfunction and, over time, buildup of mold or mildew. HE detergents should be low-sudsing and quick-dispersing to produce the right amount of suds for the best performance.

Add a measured amount of HE detergent or single-dose laundry packets into the basket. If using oxi-type boosters, color-safe bleach, or fabric softener crystals, add to the bottom of the washer basket before adding clothes.


NOTE: Follow the manufacturer's instructions to determine the amount of laundry products to use.

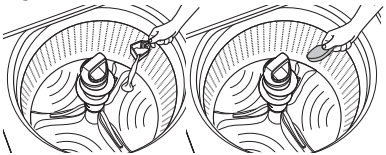

 
Do not overfill, dilute, or use more than 1 cup (236 mL). Do not use color-safe bleach or oxi products in the same cycle with liquid chlorine bleach.

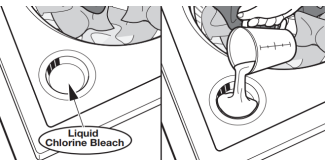

If you desire to use liquid fabric softener with this washer, Whirlpool suggests using the Downy Ball® dispenser. Pour a measured amount of liquid fabric softener into the Downy Ball® dispenser, pull the ring tightly to seal it, and place on top of load. Follow manufacturer's directions for correct amount of fabric softener based on your load size. Then use the Rinse Options button to select Fabric Softener. The Downy Ball® dispenser will automatically release the fabric softener at the correct time in the cycle. For questions on using the Downy Ball® dispenser visit www.downy.com.

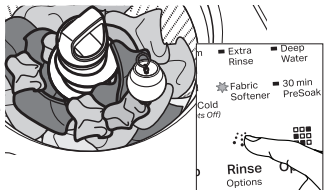 

 Select the Fabric Softener option on the control panel before starting a cycle. During the final rinse, wait until the washer has completed filling, press the Start/Pause button to pause the washer. Lift the lid and add the recommended amount of liquid fabric softener. Close the lid, press and hold the Start/Pause button to resume the cycle.

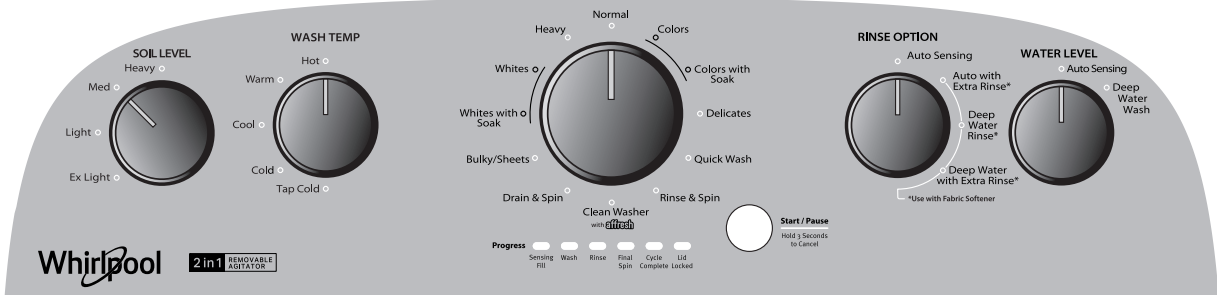

Designed
to use only
HE High
Efficiency
detergents.

SOIL LEVEL (on some models)

Select the setting most suitable for your load. For heavily soiled and sturdy fabrics, select Heavy Soil Level for more wash time. For lightly soiled and delicate fabrics, select Light or Extra Light Soil Level for less wash time. A lighter soil-level setting will help reduce tangling and wrinkling.

Wash Temp senses and maintains uniform water temperatures by regulating incoming hot and cold water.

Select a wash temperature based on the type of fabric and soils being washed. For best results, follow the garment label instructions using the warmest wash water safe for your fabric.

- On some models and cycles, warm and hot water may be cooler than your previous washer.
- Even in a cold- or cool-water wash, some warm water may be added to the washer to maintain a minimum temperature. All rinses are cold.

Use the Wash Cycle knob to select available cycles on your washer. Turn the knob to select a cycle for your laundry load. See online “Cycle Guide” for detailed descriptions.

Select the option most suitable for your load. Select Auto with Extra Rinse, Deep Water Rinse, or Deep Water with Extra Rinse if using fabric softener during a cycle. It ensures that fabric softener is added at the correct time in the rinse for even distribution.

Set the Water Level knob to the Auto Sensing setting and the washer will automatically sense the appropriate water level for the load size and type.

Set the Water Level knob to the Deep Water Wash setting and the washer will automatically add more water to any cycle at any time during the wash process.

NOTE: Expect longer cycle times due to extended fill times when using the Deep Water Wash option.

Press to start the selected cycle. Press again to pause the cycle and unlock the lid. Close the lid and press to restart the cycle. Press and hold to cancel a cycle and pump out the water.

NOTE: If the washer is spinning, it may take several minutes to unlock the lid.

The Progress lights show the progress of a cycle. At each stage of the process, you may notice sounds or pauses that are different from traditional washers.

Agitator Mode	Squeeze Handle	Rotate Counter-Clockwise	Pull Up	Impeller Mode
--	---	---	--	---

- Keep it in (Agitator mode) when you want increased mechanical action to remove and rinse away loose soils. You can use this mode anytime but it's especially suited for everyday mixed loads.
- Take it out (Impeller mode) when you need added space and/or a thorough, gentle clean. You can use this mode anytime but it's especially suited for bulky items such as bedding and delicate items such as undergarments.

- Squeeze handle, rotate counter-clockwise, and pull up to remove.
- Push down and rotate clockwise to re-install. The agitator should lock into place.

For detailed installation instruction and maintenance information, winter storage, and transportation tips, please see the Owner's Manual included with your machine.

For best fabric care, choose the cycle that best fits the load being washed. Recommended settings for performance are shown in bold. Not all cycles and options are available on all models. Not all settings options are available on each cycle.

Items to Wash:	Cycle:	Temperature:	Description:
Cottons, linens, and mixed-garment loads	Normal	Hot Warm Cool Cold Tap Cold	Use this cycle for normally soiled cottons and mixed-fabric loads. A high spin speed is the default for this cycle.

- All rinses are cold.
- Normal cycle is recommended for washing normally soiled cotton or linen clothes. This clothes washer's government energy certifications were based on the Normal (Medium Soil) cycle with all wash temperature selections and water fill levels offered in the cycle. It was tested as an Adaptive Automatic and Deep Water Fill Control System clothes washer with the Agitator installed. The settings as shipped are Normal (Medium Soil) cycle, Warm Wash Temp, Water level Auto Sensing and Rinse Option Auto Sensing.
- If the washer detects an out-of-balance condition it will run a recovery routine to re-distribute the load before spin. During this time the spin and lid lock status indicators will both illuminate.

For information on any of the following items, a full cycle guide, warranty, detailed product dimensions, or for complete instructions for use and installation, please visit www.whirlpool.com/owners, or in Canada www.whirlpool.ca/owners. This may save you the cost of a service call. Note: Spanish literature is available at the web address above / Nota: Literatura en Español está disponible en la dirección electrónica mencionada.						
Register Product	Schedule Service	How To's & FAQ	Manuals & Downloads	Add Service Plan	Parts	Accessories
Model & Serial Number Tag location		To speak with a customer service representative or if you have additional questions, call us toll free at 1-866-698-2538 or in Canada call 1-800-807-6777. You can write with any questions or concerns at: Whirlpool Brand Appliances Customer eXperience Center 533 Benson Road Benton Harbor, MI 49022-2692 Whirlpool Brand Appliances Customer eXperience Center Unit 200-6750 Century Ave Mississauga, Ontario L5N 0B7 Please include a daytime phone number in your correspondence.				

INSTRUCTIONS D'UTILISATION

Ne jamais mettre des articles humectés d'essence ou d'autres fluides inflammables dans la laveuse.

Ne pas faire sécher des articles qui ont été salis par tout genre d'huile (y compris les huiles de cuisson).

Le non-respect de ces instructions peut causer un décès, une explosion ou un incendie.

- Toutes les fonctions et tous les programmes ne sont pas présents sur tous les modèles et l'apparence du panneau de commande peut varier.
- Si le modèle comporte des boutons physiques, s'assurer d'appuyer fermement sur le bouton.
- À la fin du programme, la laveuse garde en mémoire les choix de réglages et d'options pour une utilisation ultérieure de ce programme. Cependant, si la laveuse est affectée par une coupure de courant, les réglages et les options seront restaurés au paramétrage d'usine.

Étape 3. Fermer le couvercle; puis sélectionner le programme en appuyant sur le bouton Start/Pause (mise en marche/pause) ou en tournant le bouton de sélection de programme; les DEL 2, 3, 4 et 5 s'allumeront toutes, la DEL 1 clignotera et la DEL 6 restera éteinte.

Sélectionner l'option Fabric Softener (assouplissant) sur le panneau de commande avant de démarrer un programme. Au cours du rinçage final, attendre le remplissage complet de la laveuse puis appuyer sur le bouton Start/Pause (mise en marche/pause) pour mettre le programme de la laveuse en pause. Lever le couvercle et verser le montant recommandé d'assouplissant pour tissu. Fermer le couvercle, appuyer sur Start/Pause (mise en marche/pause) pour remettre le programme de la laveuse en marche.

Whirlpool 2 in 1 REMOVABLE ADD-A-TATOR

SOIL LEVEL
Heavy
Med
Light
Ex Light

WASH TEMP
Hot
Warm
Cool
Cold
Tap Cold

Normal
Heavy
Whites with Soak
Bulky/Sheets
Drain & Spin
Clean Washer with Add-A-Tator
Rinse & Spin
Colors
Colors with Soak
Delicates
Quick Wash

RINSE OPTION
Auto Sensing
Auto with Extra Rinse*
Deep Water Rinse*
Deep Water with Extra Rinse*

WATER LEVEL
Auto Sensing
Deep Water
Wash

Progress
Sensing Fill Wash Rinse Final Spin Cycle Complete Locked

Start / Pause
Hold 5 Seconds to Cancel

*Use with Fabric Softener



Conçue
uniquement
pour une
utilisation
avec des
détergents
HE Haute
efficacité.

GIATATEUR AMOVIBLE 2 EN 1

The diagram shows a sequence of five steps to remove the cap:

- Initial state: The cap is seated on the device.
- Step 1: A downward arrow indicates the cap is pushed down.
- Step 2: A curved arrow labeled "antihoraire" (counter-clockwise) indicates the cap is rotated.
- Step 3: An upward arrow labeled "le haut" indicates the cap is lifted.
- Step 4: The cap is fully removed, leaving the device open.

- Pour obtenir des instructions d'installation et des informations d'entretien et d'hivernisation détaillées, ainsi que des conseils pour le transport, consulter le Manuel d'utilisation inclus avec votre machine.

Articles à laver :	Programme :	Température :	Description :
charges de vêtements en coton, lin charges mixtes	Normal	Hot (chaude) Warm (tiède) Cool (fraîche) Cold (froide) Tap Cold (froide du robinet)	Utiliser ce programme pour les articles en coton et les charges de tissus mixtes présentant un degré de saleté normal. Une vitesse d'essorage élevée est la valeur par défaut pour ce programme.

ASSISTANCE OU SERVICE ET INFORMATIONS SUPPLÉMENTAIRES

marque : La littérature espagnole est disponible à l'adresse Web ci-dessus / **Nota:** Literatura en Español está disponible en la dirección electrónica mencionada.

Enregistrement du produit	Prendre rendez-vous	Comment faire et FAQ	Manuels et téléchargements	Ajouter un plan de service	Pièces	Accessoires
						
 Emplacement du numéro de modèle et du numéro de série		Pour communiquer avec un représentant du service à la clientèle ou si vous avez des questions, appelez-nous sans frais au 1-866-698-2538 ou au 1-800-807-6777 si vous résidez au Canada. Vous pouvez adresser tous commentaires ou toutes questions à : Whirlpool Brand Appliances Customer eXperience Center 533 Benson Road Benton Harbor, MI 49022-2692 Whirlpool Brand Appliances Customer eXperience Center Unit 200-6750 Century Ave Mississauga, Ontario L5N 0B7 Veuillez indiquer dans votre correspondance un numéro de téléphone où l'on peut vous joindre dans la journée.				