



Dishwasher

MODELS:


WDT730PAHB0 (Black)

WDT730PAHW0 (White)

WDT730PAHZ0 (Stainless)

WDT730PAHV0 (Black Stainless)


DOOR AND PANEL PARTS

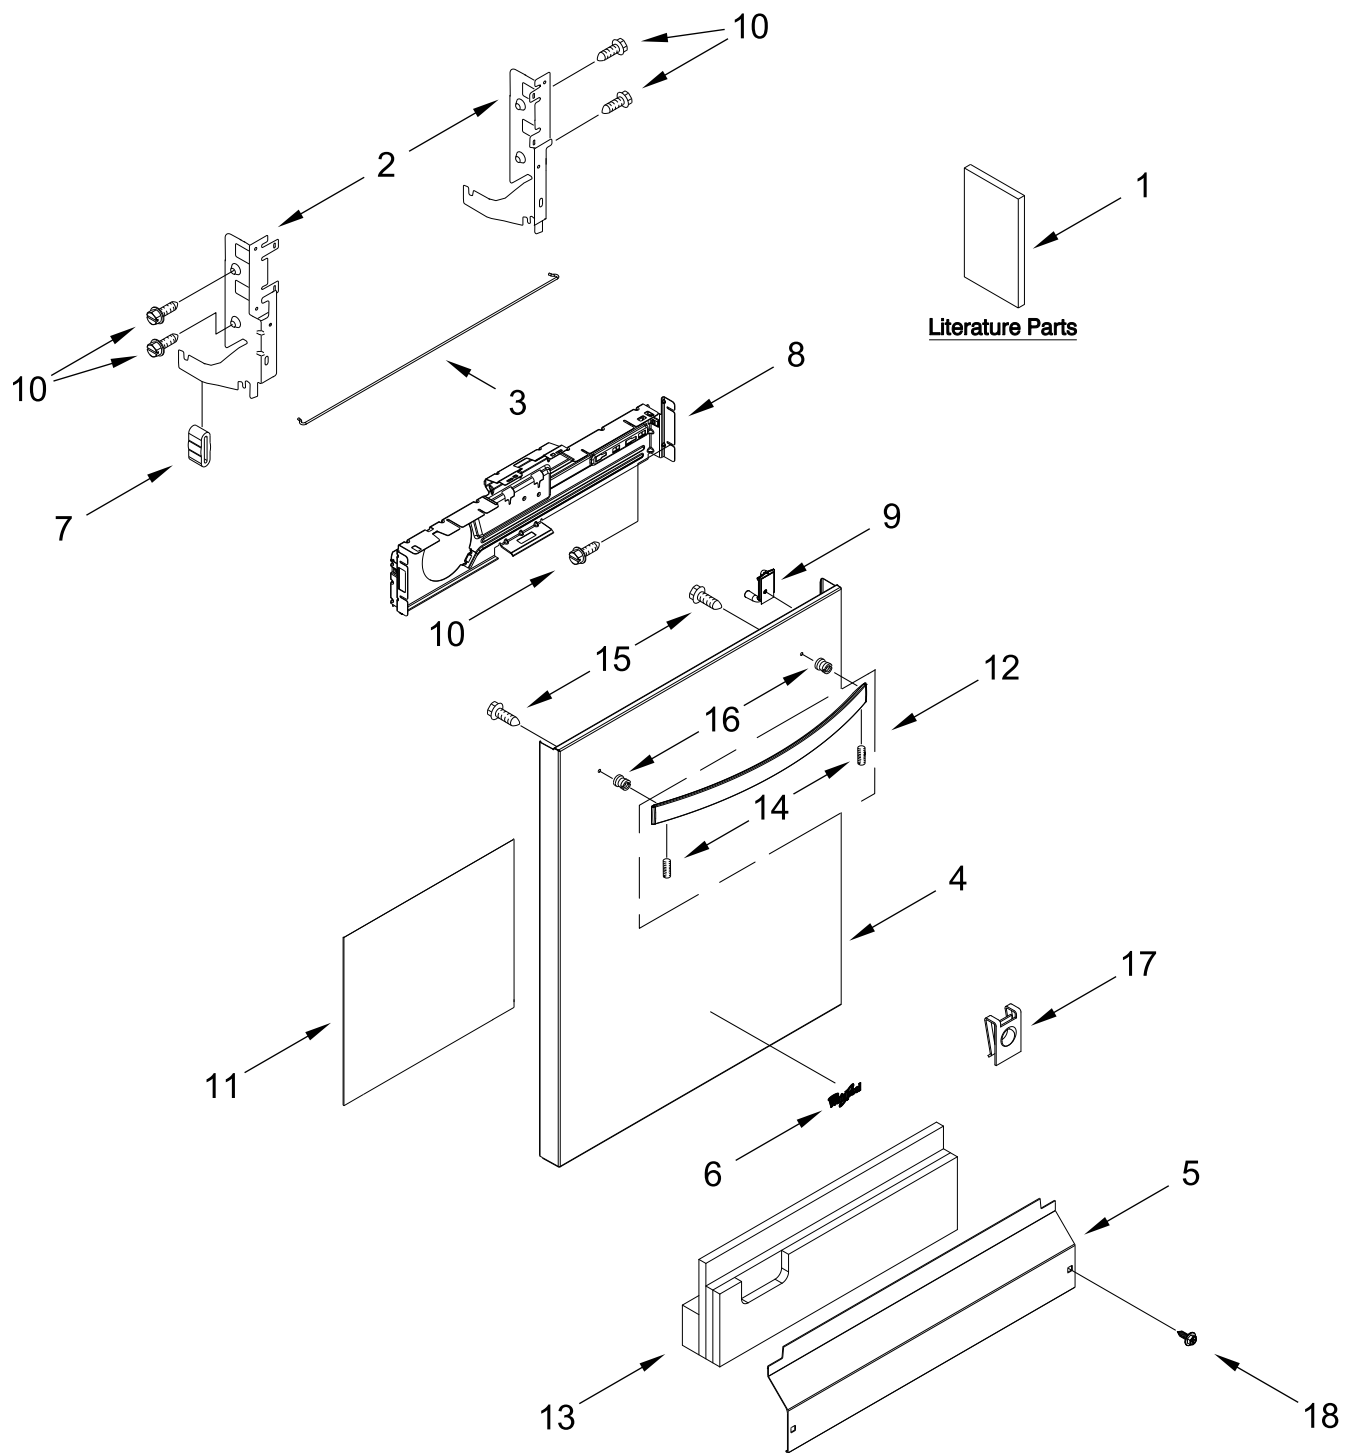

DOOR AND PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	5		Access Panel	13	W10518815	Insulation, Four Layer
	W11444533	Energy Guide		W10852733	Black	14	W10693137	Screw, Set
	W11384187	Owners Manual		W10852732	White	15	W10316572	Screw
	W11427962	Tech Sheet	6	W10884775	Badge	16	W11049903	Stud, Mounting
2		Arm, Hinge	7	8268961	Sleeve, Friction	17	W10853886	U-nut
	W11484017	Left Hand	8	W10641745	Bracket, Control	18	302868	Screw (Black)
	W11484018	Right Hand	9	W11036316	Light, Pipe		3400836	Screw (White)
3	W10803537	Stiffener, Door	10	489470	Screw			
4		Panel, Front (Includes 6, 7, 9, 15 & 16)	11	W10315897	Insulation, Front Panel			
	W10917586	Black	12		Handle Assembly			
	W10917587	White		W11439701	Black			
	W10917591	Stainless		W11439697	White			
	W10917592	Black Stainless		W11439703	Stainless			
				W11439696	Black Stainless			


CONTROL PANEL AND LATCH PARTS

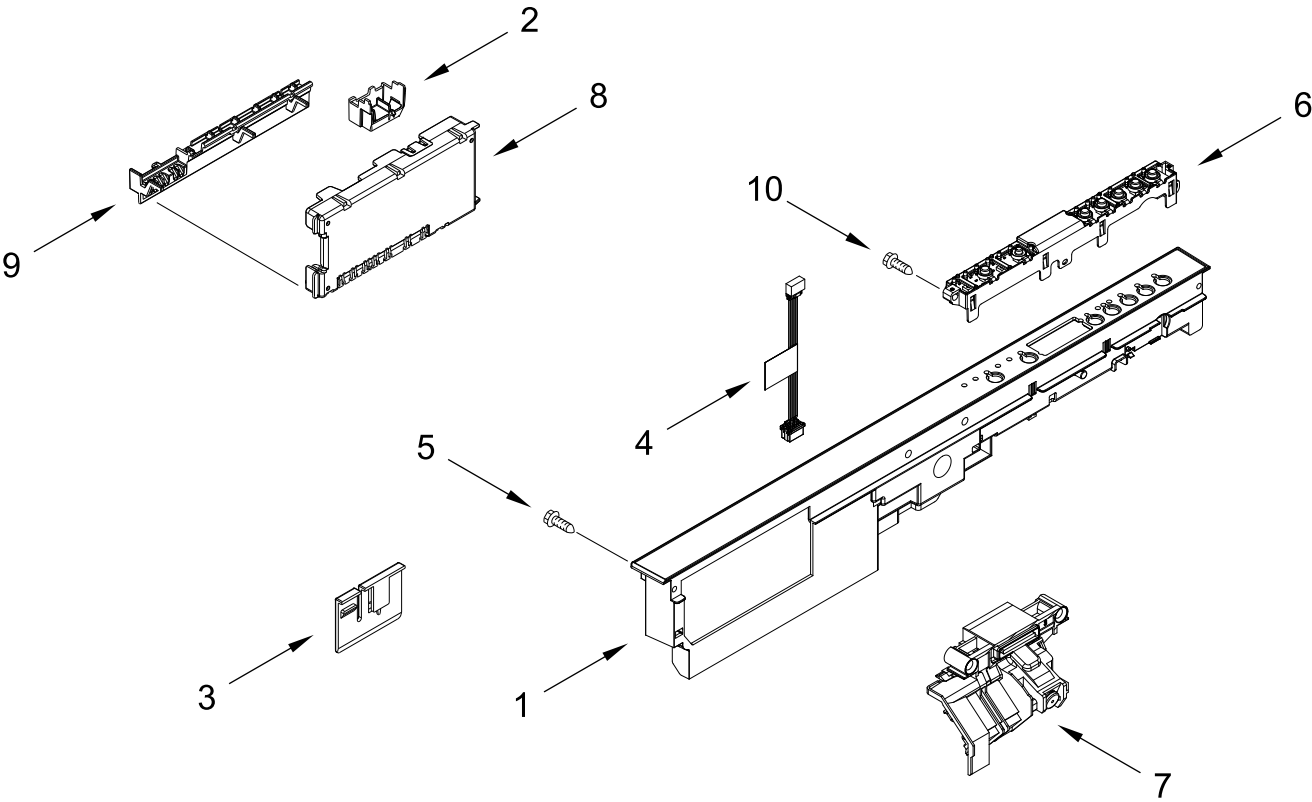

CONTROL PANEL AND LATCH PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Console Assembly	5	3400861	Screw	8	W11227807	Control, Electronic
	W11028305	Black	6	W11028325	Housing Assembly, User Interface	9	W10825369	Brace, Connector
2	W10825638	Box, Connector				10	W10177098	Screw
3	W11233967	Clip, Control	7	W10653840	Latch Assembly (Includes Switch)			
4	W10566903	Jumper, 4-Wire						


INNER DOOR PARTS

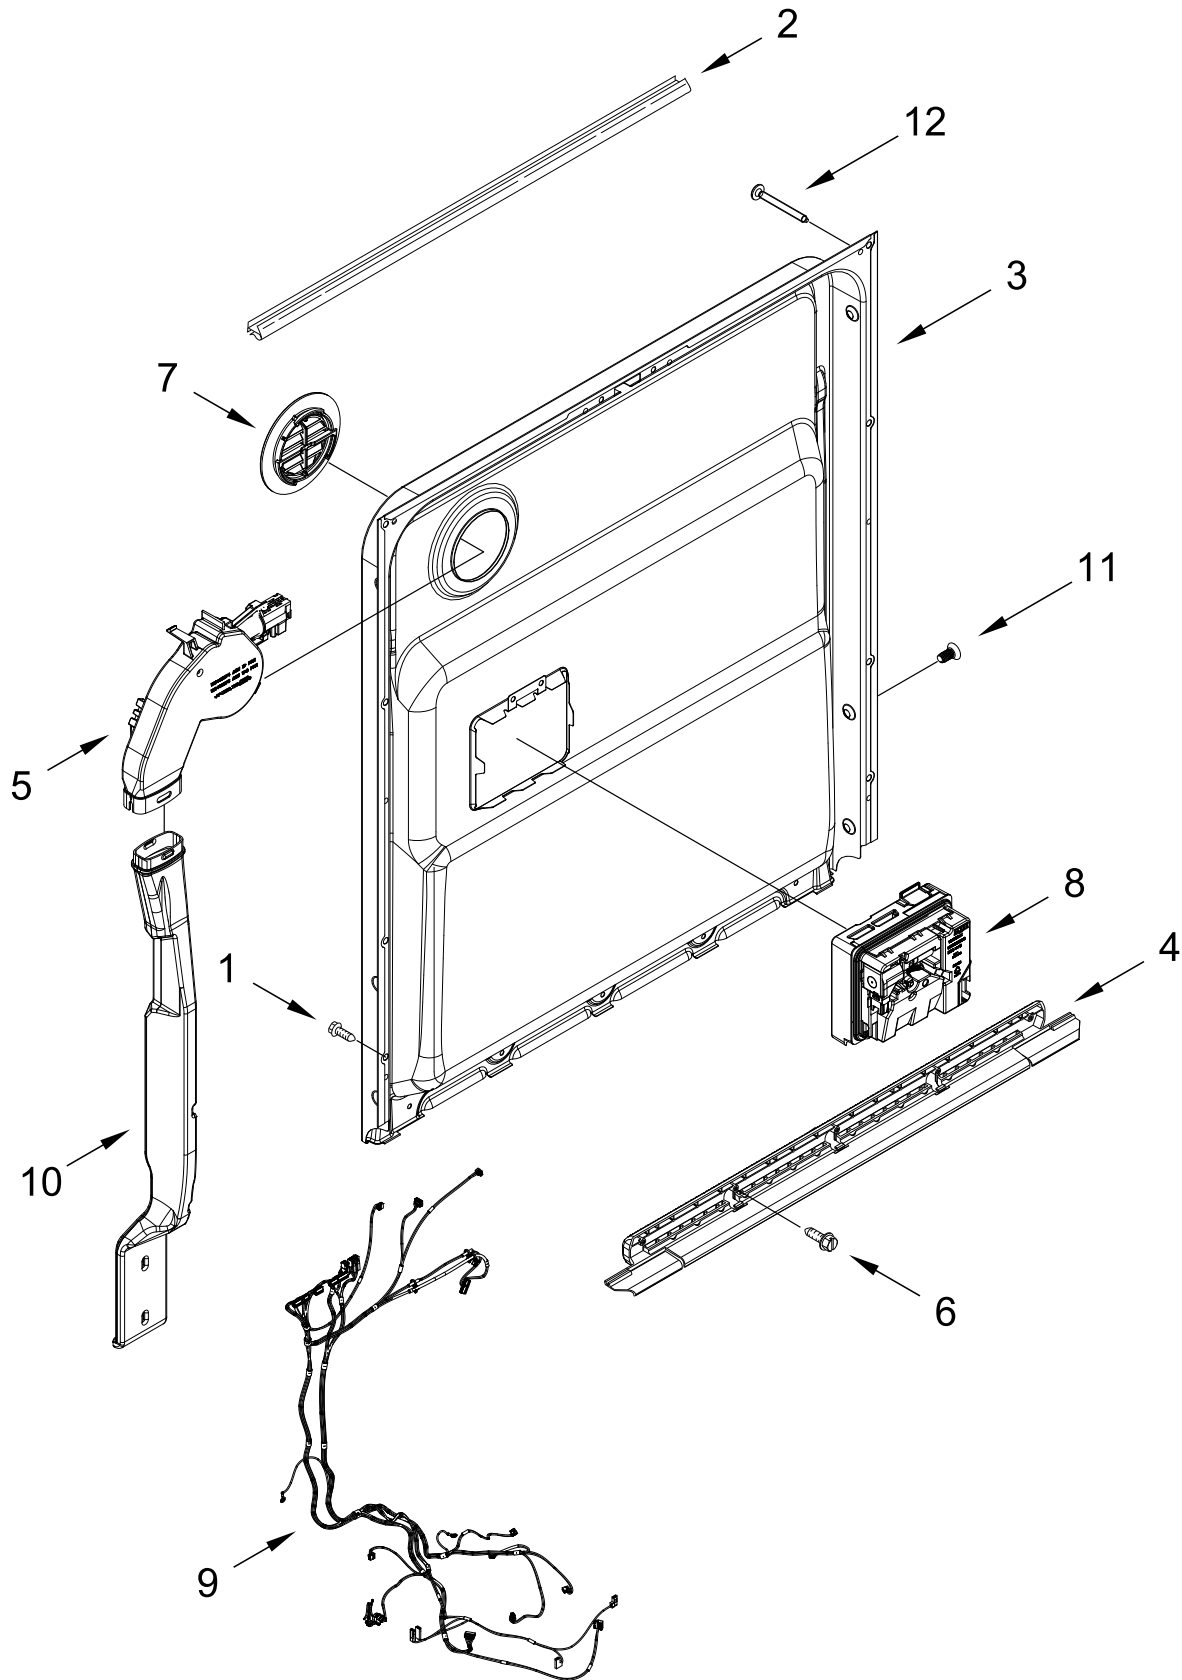

INNER DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10348409	Screw	6	W11476843	Screw	10		Duct, Vent
2	W11050927	Seal, Console/Door	7	W10195032	Deflector, Vent		W10195028	Black
3	W11038319	Inner Door Assembly	8	W10620296	Dispenser Assembly	11	3400071	Screw
4	W10920683	Door Bottom, Seal	9	W10919642	Wiring Harness	12	W11096645	Screw
5	W10469574	Vent Assembly w/ Fan						


FILL, DRAIN AND OVERFILL PARTS

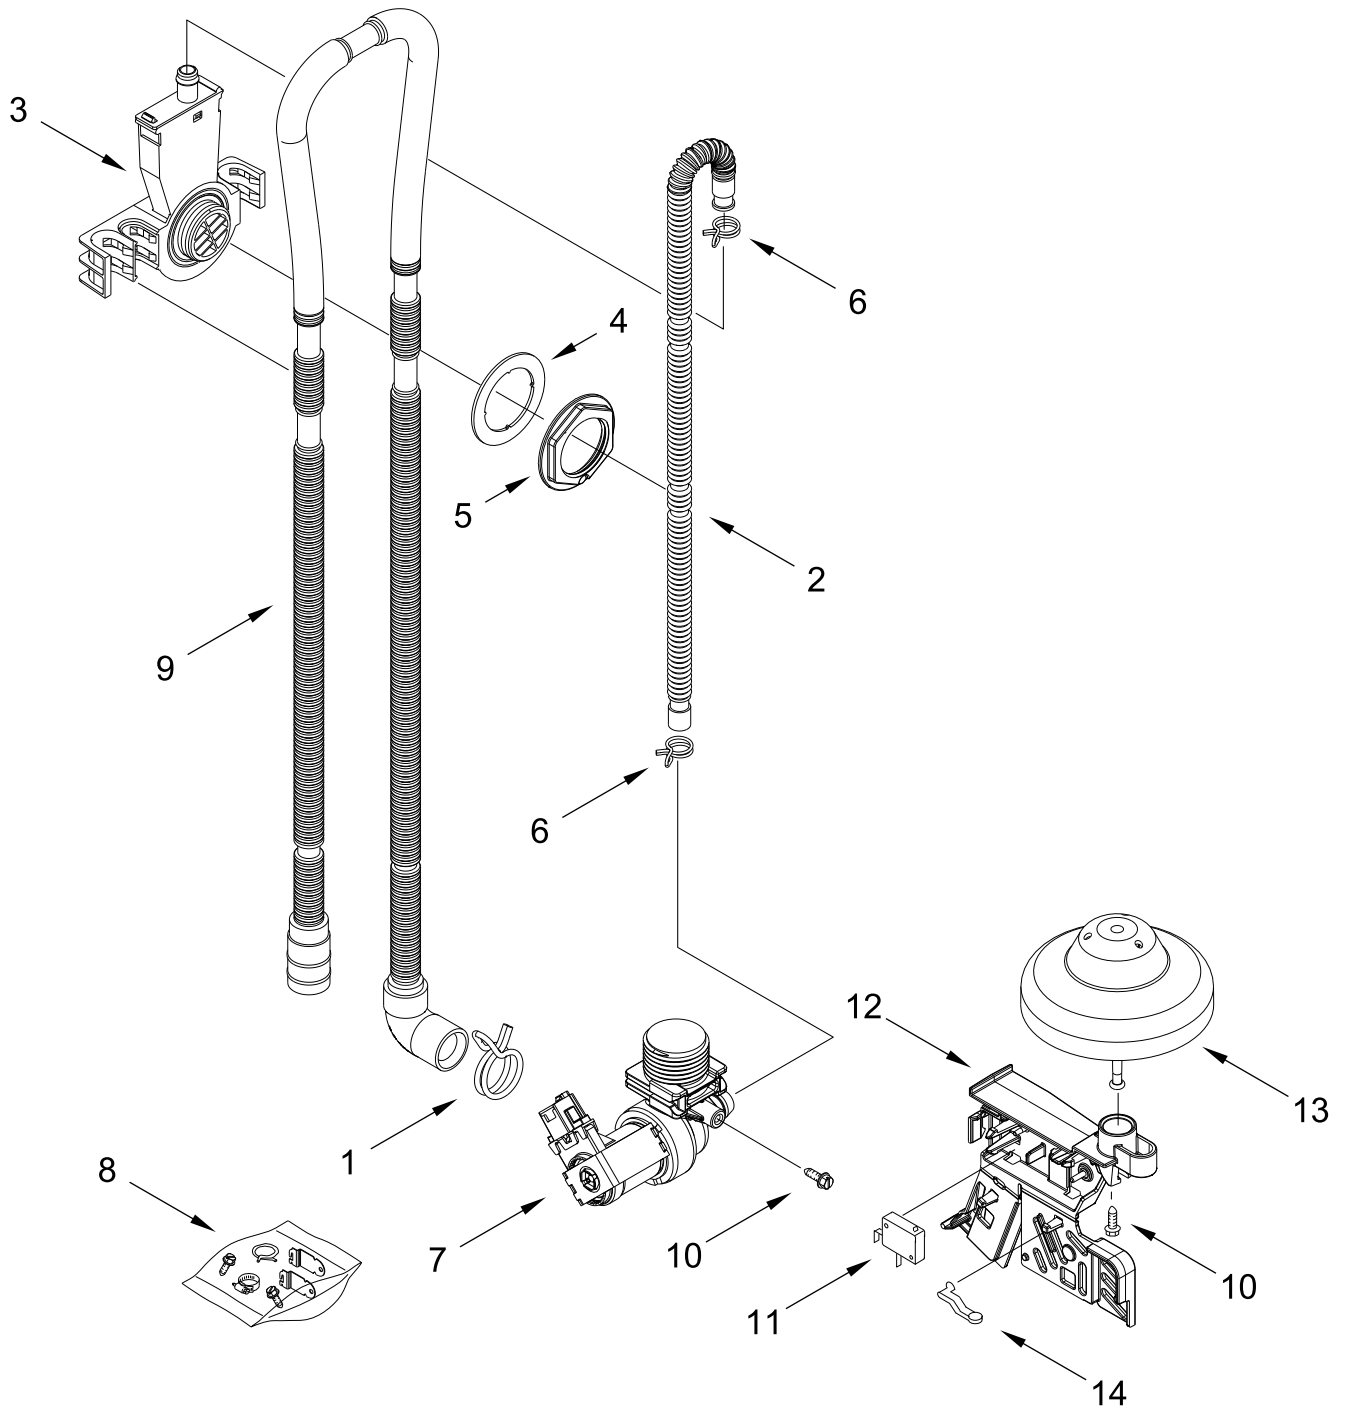

FILL, DRAIN AND OVERFILL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	370445	Clamp, Hose	6	371505	Clamp, Hose	10	304231	Screw
2	W10769066	Inlet Hose	7	W11130744	Fill Valve Assembly	11	W10195039	Switch, Overfill Control
3	W10195536	Inlet, Water (Also Order Item 4)	8	W10786175	Miscellaneous Parts Bag (Contains 2 Screws, 2 Clamps, & 2 Brackets)	12	W10316267	Standpipe, Overfill
4	8531323	Gasket				13	W10346525	Float & Retainer Assembly
5	W10508676	Nut, Inlet (Also Order Item 4)	9	W10545278	Drain loop with check valve assembly	14	W10195037	Lever, Overfill Switch


TUB AND FRAME PARTS

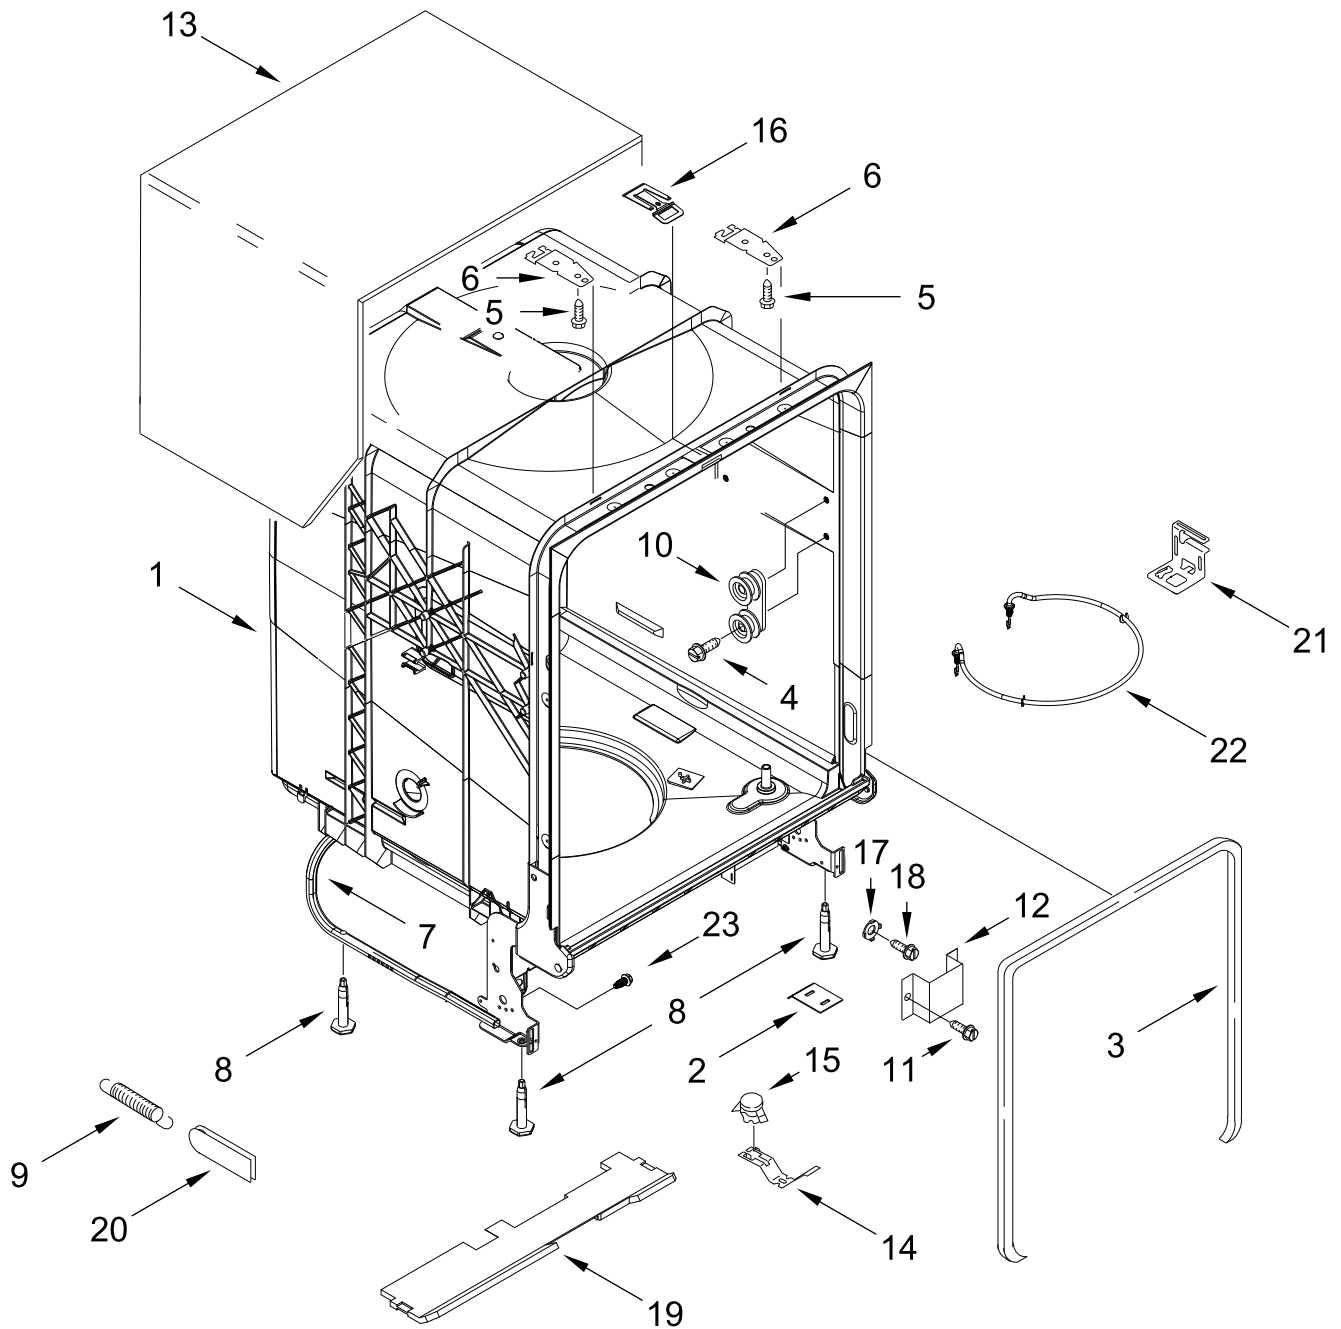

TUB AND FRAME PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10908439	Tub Assembly	12	8268991	Cover, Terminal Box	21	W10732961	Bracket, Heater Support
2	W11521240	Shield, Thermostat	13	W11038866	Sound Shield, Tub	22	W10441445	Heater Element Assembly
3	W11425053	Seal, Tub	14	W10539489	Clip, Thermostat			(Includes Heater Washer & Nut)
4	W10341745	Screw	15	3371618	Thermostat			NOTE: If heater element is removed, it must be replaced.
5	3367670	Screw	16	W10544004	Strike, Latch			
6	8269145	Bracket, Undercounter	17	3378128	Washer, Pronged Cup			
7	W10304230	Support, Bottom	18	3400014	Screw, Grounding			
8	W10619352	Leveler, Leg	19	W10819539	Sound Insulation, Bottom	23	W10277003	Screw
9	W10920693	Spring, Door Balance						
10	W10902242	Wheel Assembly	20	8268990	Bushing, Door Spring			
11	3400892	Screw						


PUMP, WASHARM AND MOTOR PARTS

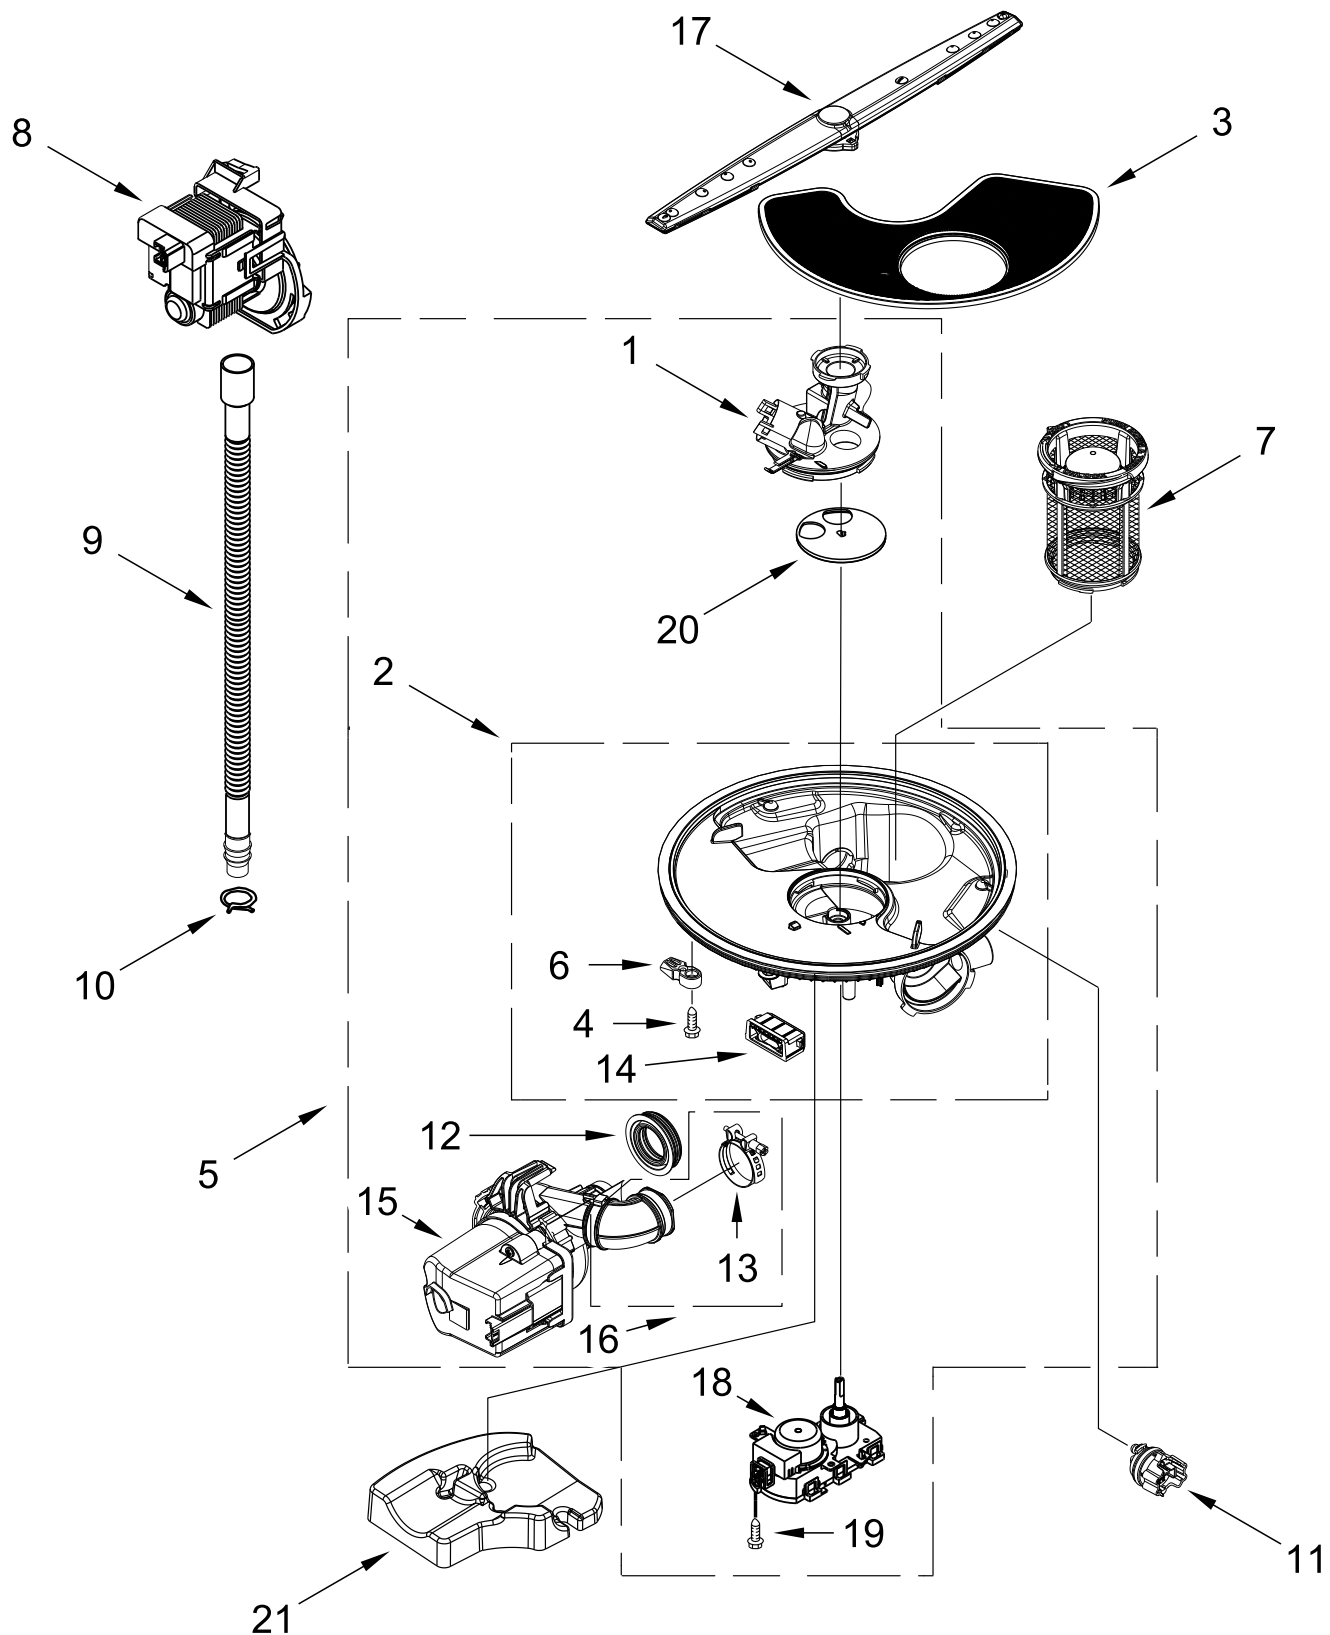

PUMP, WASHARM AND MOTOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10455271	Cover, Outlet	9	8269144	Hose, Drain	17	W10491331	Sprayarm
2	W10455268	Sump With Seal (Also Order Items 12 & 16)	10	370445	Clamp, Hose	18	W10849439	Motor, Diverter
3	W10463906	Screen	11	W10723295	Indicator, Optical Wash	19	9741232	Screw
4	W10348407	Screw	12	W11182008	Grommet	20	W10476221	Disc, Diverter
5	W11164469	Sump & Motor Assembly	13	8269146	Clamp, Hose	21	W10350335	Damper, Sump Assembly
6	W10372113	Tab, Sump	14	W10195086	Motor, Isolator			
7	W10789806	Filter Cup Assembly	15	W10805387	Motor (Also Order Items 12 & 16)			
8	W10724439	Pump, Drain	16	W10445975	Hose Assembly (Includes 2 Clamps)			


UPPER WASH AND RINSE PARTS

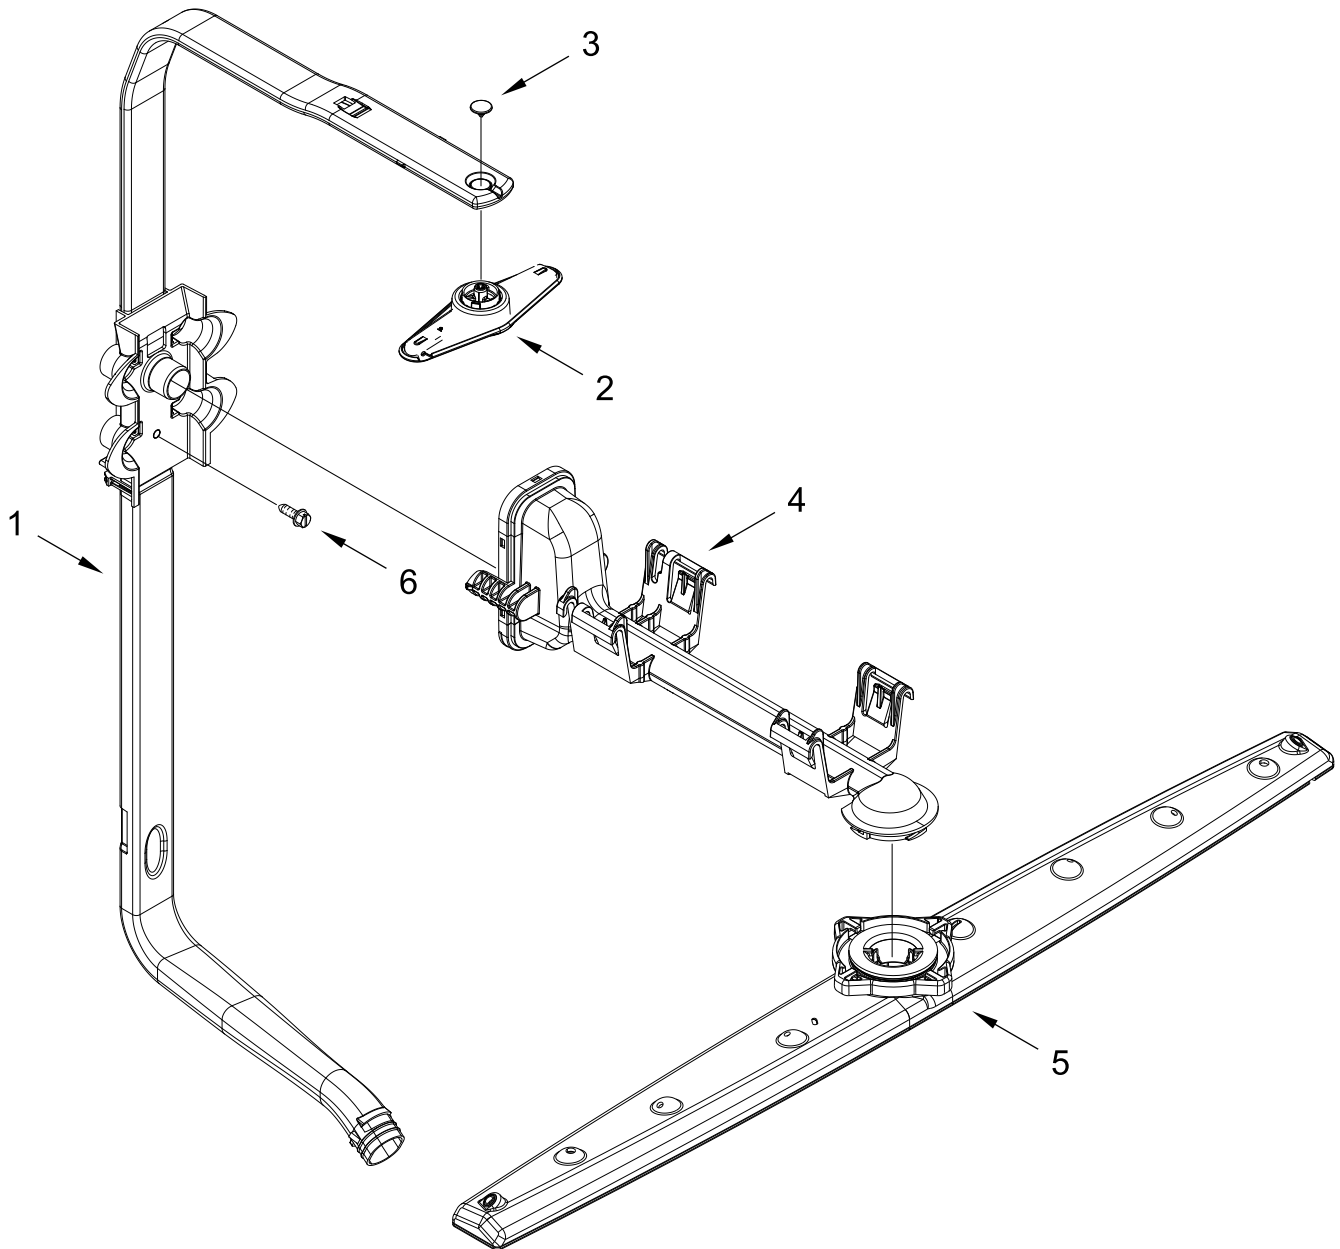

UPPER WASH AND RINSE PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10340745	Feed Tube Assembly (Includes Items 2 & 3)	2	W10327455	Sprayarm, Third Level	4	W10340542	Manifold
			3	3400918	Retainer	5	W10448645	Sprayarm, Upper
						6	W10165274	Screw


UPPER RACK AND TRACK PARTS

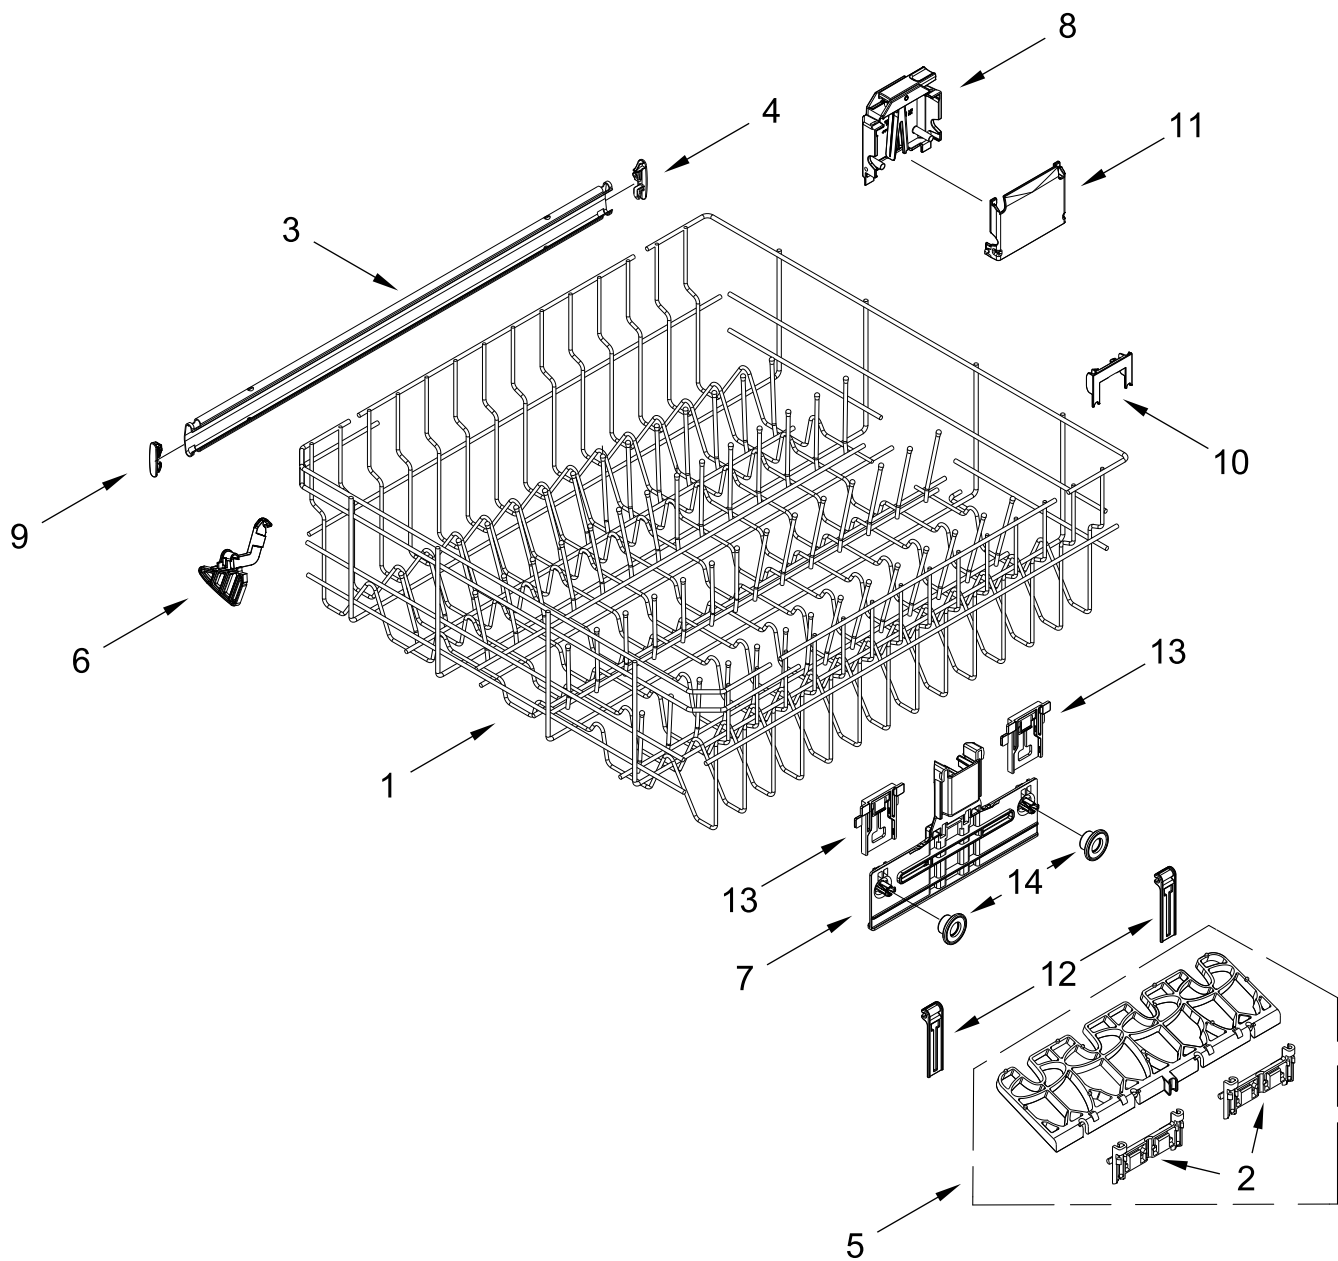

UPPER RACK AND TRACK PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10350382	Dishrack, Upper	7	W10350375	Adjuster, Arm Assembly	10	W10250160	Clip, Adjuster
2	W10082848	Clip, Cupshelf				11	W10250162	Cover, Adjuster
3	3385089	Track, Dishrack	8		Housing Assembly	12	W10195839	Strap, Tether Adjuster
4	W10082860	Stop, Track (Non-Removable)		W10195372	Left Hand	13	W10195840	Positioner, Adjuster
5	W10082649	Cupshelf Assembly		W10195373	Right Hand	14	3379676	Wheel
6	W10752617	Clip, Dispenser Guard	9	W10508950	Stop, Track (Removable)			

LOWER RACK PARTS

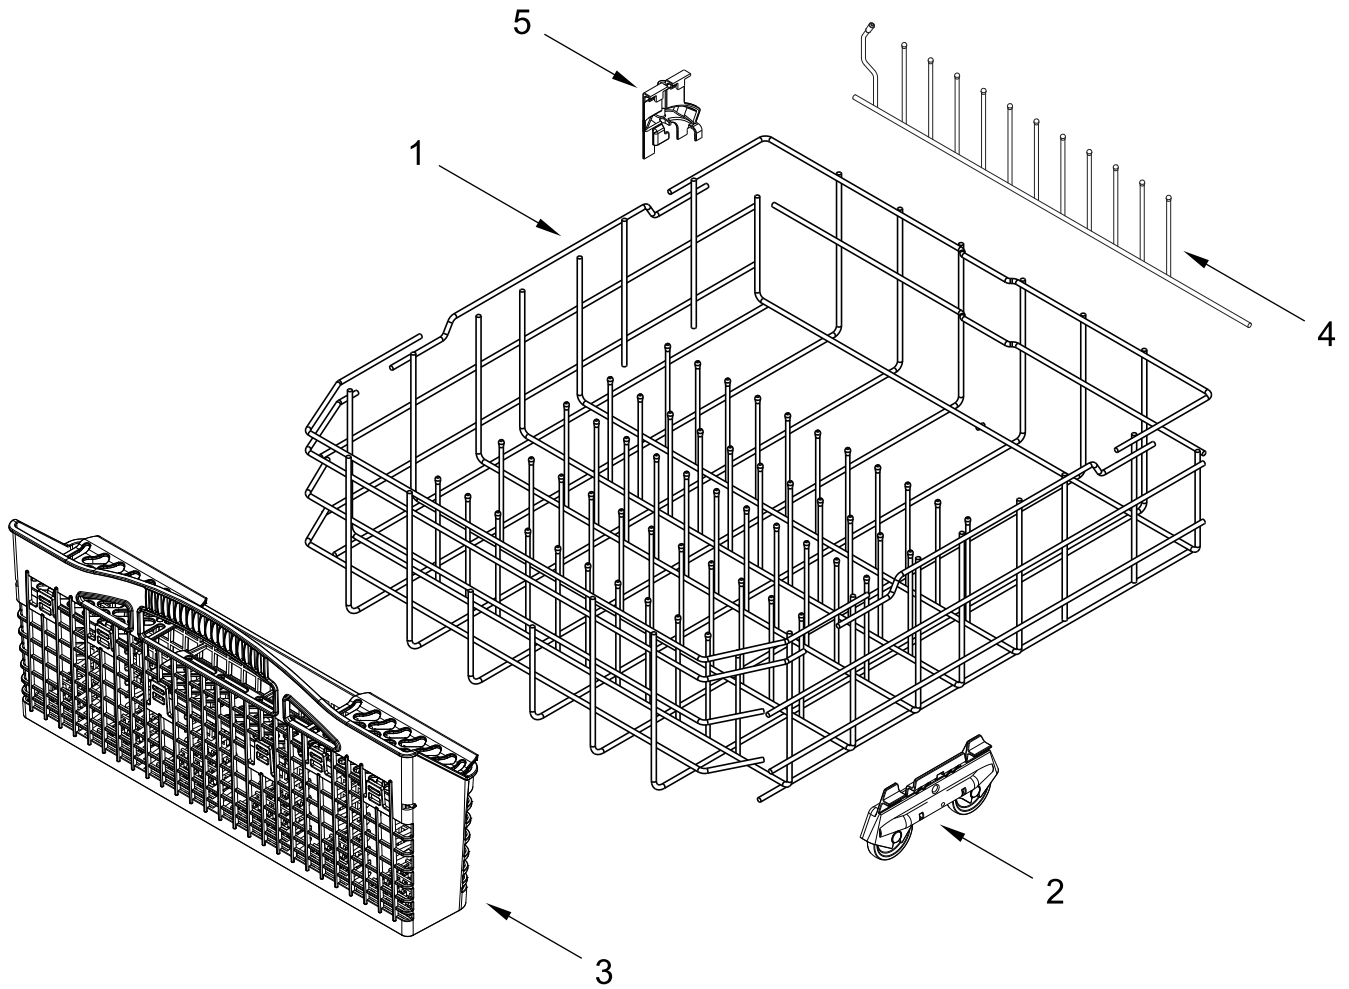

LOWER RACK PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10525646	Dishrack, Lower	3	W10179397	Silverware Basket Assembly	4	W10056272	Tine Row, Fold Down
2	W10082868	Wheel & Transport Assembly				5	W10671902	Retainer, Tine Row (Combo)

OPTIONAL PARTS (NOT INCLUDED)

ACCESSORIES

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		SIDE PANEL KITS
	8171656	White
	8171657	Black
	8171658	Biscuit/Bisque
	8171659	Stainless Steel
		MOISTURE BARRIER KIT
	4396277	Barrier Kit
		DRAIN HOSE
	3385556	12 Ft.
		Handle Assembly
	W10702080	Black
	W10702081	White

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	72032	Black
	4392899	Biscuit and Bisque

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	285006	Black
	4392901	Biscuit and Bisque

PAINT, BULK (1 QT.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)
	4392900	Biscuit/Bisque

POWER CORD KIT

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	4317824	Power Cord Kit (Included Cord & Misc. Hardware)

ANTI-TIP KIT

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	8171477	Floor Mount Kit
	8212560	Side Mount Kit

DISHRACK REPAIR

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		TINE TIP REPAIR KIT (Enough for Two Complete Racks)
	4396838	White
	4396840	Grey
	4396854	Silver Atlantis
		VINYL TOUCH-UP (4oz)
	676453	White
	676455	Grey
	4396853	Silver Atlantis