




ELECTRIC COMBO WALL OVEN

MODELS:

WOEC5930LZ01 (Stainless)


CONTROL PANEL PARTS

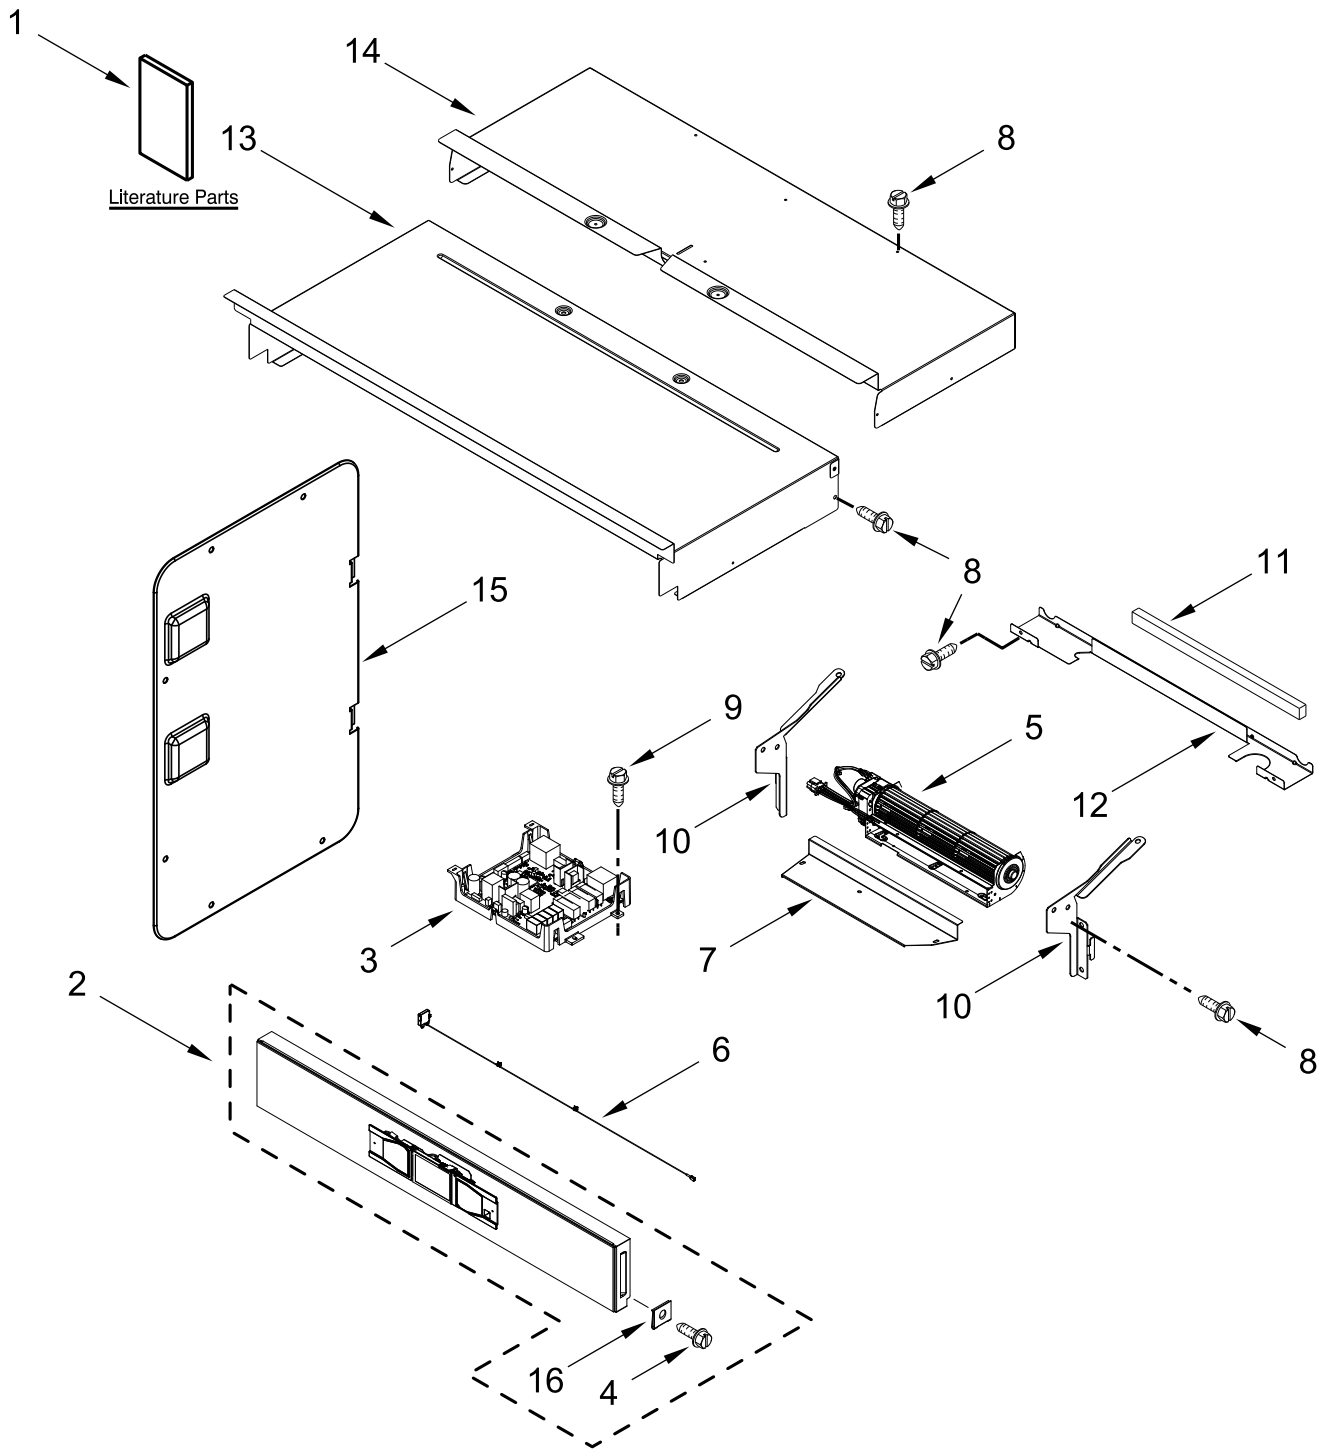

CONTROL PANEL PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	13	W10318158	Chassis, Cover Top Front 30 IN	16	4450118	Nut
	W11655510	Owner's Manual						FOLLOWING PARTS NOT ILLUSTRATED
	W11553919	Quick Start Guide	14	W10588732	Chassis, Cover Top Back 30 IN		W11659377	Harness, Main
	W11601393	Tech Sheet					W11256629	Harness, Signal
2		Assembly, Control Panel (Includes Overlay)	15	W10655467	Chassis, Combo Side		W11356990	Harness, Communication
	W11468021	Black					W11264646	Harness, Door Latch
3	W11585754	Control, Copernicus					W11226264	Strap, Ground
4	W11339492	Screw (Black)					W11454022	Harness, Fan and Turntable
5	W11397930	Blower					W11539494	Harness, Inverter
6	W11409842	Antenna					W11555169	Harness, Interlock
7	W10681157	Cover, Combo Blower					W11539527	Jumper Harness, Communication
8	7101P426-60	Screw					W11555848	Harness, Input
9	7101P460-60	Screw, Grounding					313438	Clip, Harness
10	W10655463	Bracket, Blower (Left)					4448664	Clamp, Conduit
	W10655462	Bracket, Blower (Right)					W11394923	Bag, Hardware
11	4451758	Block, Foam						
12	W11166802	Divider, Chassis Back						


OVEN PARTS

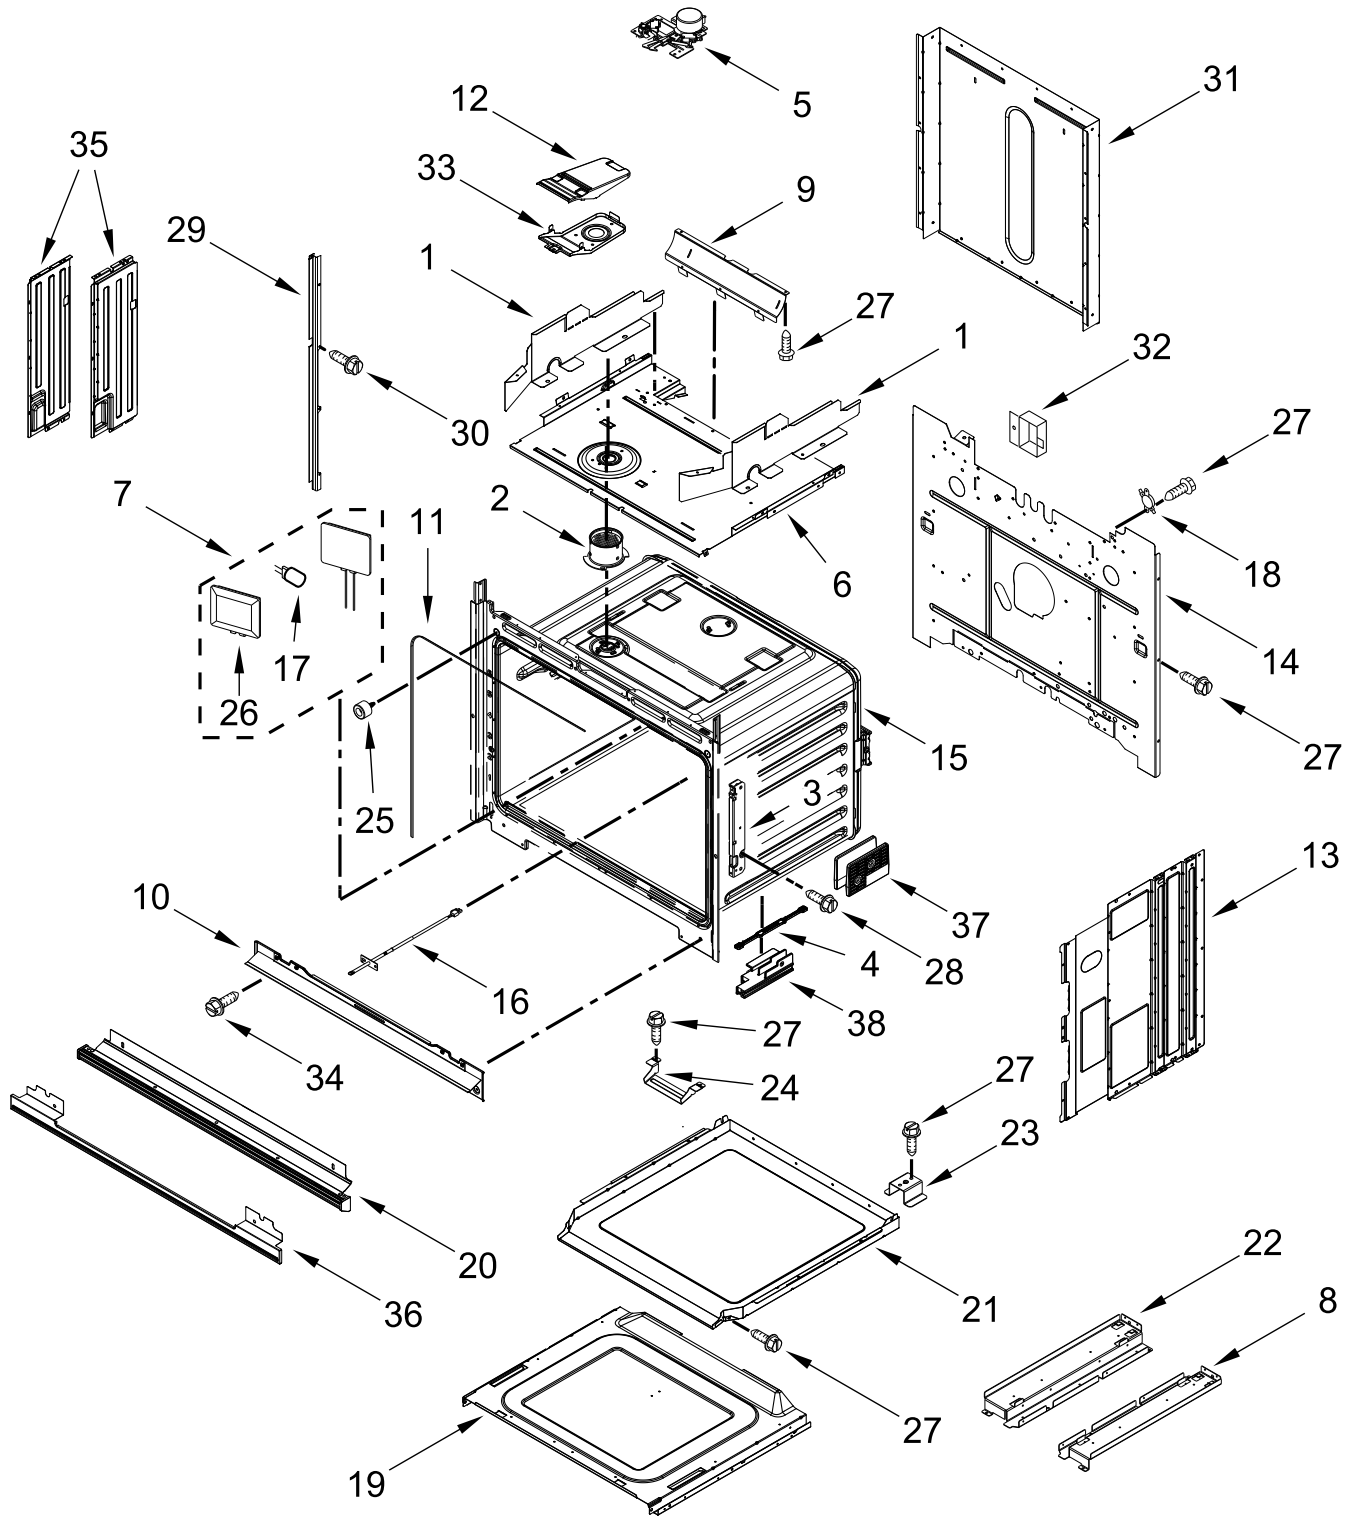

OVEN PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11186391	Deflector, Chassis (Left)	16	W11346074	Probe, Sensor	32	8285593	Cover, Connector
	W11186398	Deflector, Chassis (Right)	17	W10472384	Bulb, Light	33	W11256423	Base, Vent Exhaust
2	W11085298	Tube, Vent	18	4449751	Thermostat (TOD)	34	W11249635	Screw
3	W11239070	Receiver, Hinge (Left)	19	W11135103	Base, Chassis	35	W11167419	Cover, Suction (Left)
	W11239072	Receiver, Hinge (Right)	20		Assembly, Bottom Vent		W11186675	Cover, Suction (Right)
4	W11558603	Spacer, Base		W11467754	Stainless	36		Trim, Bottom Vent
5	W11132456	Latch, Motorized	21	W11244446	Duct, Bottom Chassis		W11560859	Black
6	W11168071	Top, Chassis	22	W10283020	Support, Base (Left)	37	W11245118	Foot, Base
7	W11205574	Assembly, Oven Light	23	W11135135	Support, Air Channel	38	W11245114	Foot, Chassis (Left)
8	W10283021	Support, Base (Right)	24	W11390667	Spacer, Chassis Bottom Duct		W11245116	Foot, Chassis (Right)
9	W10904163	Deflector, Blower	25	W11166315	Bumper and Screw			FOLLOWING PARTS NOT ILLUSTRATED
10	W11518347	Vent, Combo Center	26	W10472386	Lens, Light		W11234758	Insulation, Cavity
11	W11608108	Gasket	27	7101P426-60	Screw		W11188284	Insulation, Wrap
12	W11256424	Cover, Vent Exhaust	28	W10254050	Screw			
13	W11165274	Side, Chassis	29		Trim, Side			
14	W11223327	Back, Chassis		W11235457	Black (Left)			
15		Liner, Oven (Not Serviceable)		W11235458	Black (Right)			
			30	W11404000	Screw			
			31	W11134657	Duct, Lower Chassis Back			


OVEN DOOR PARTS

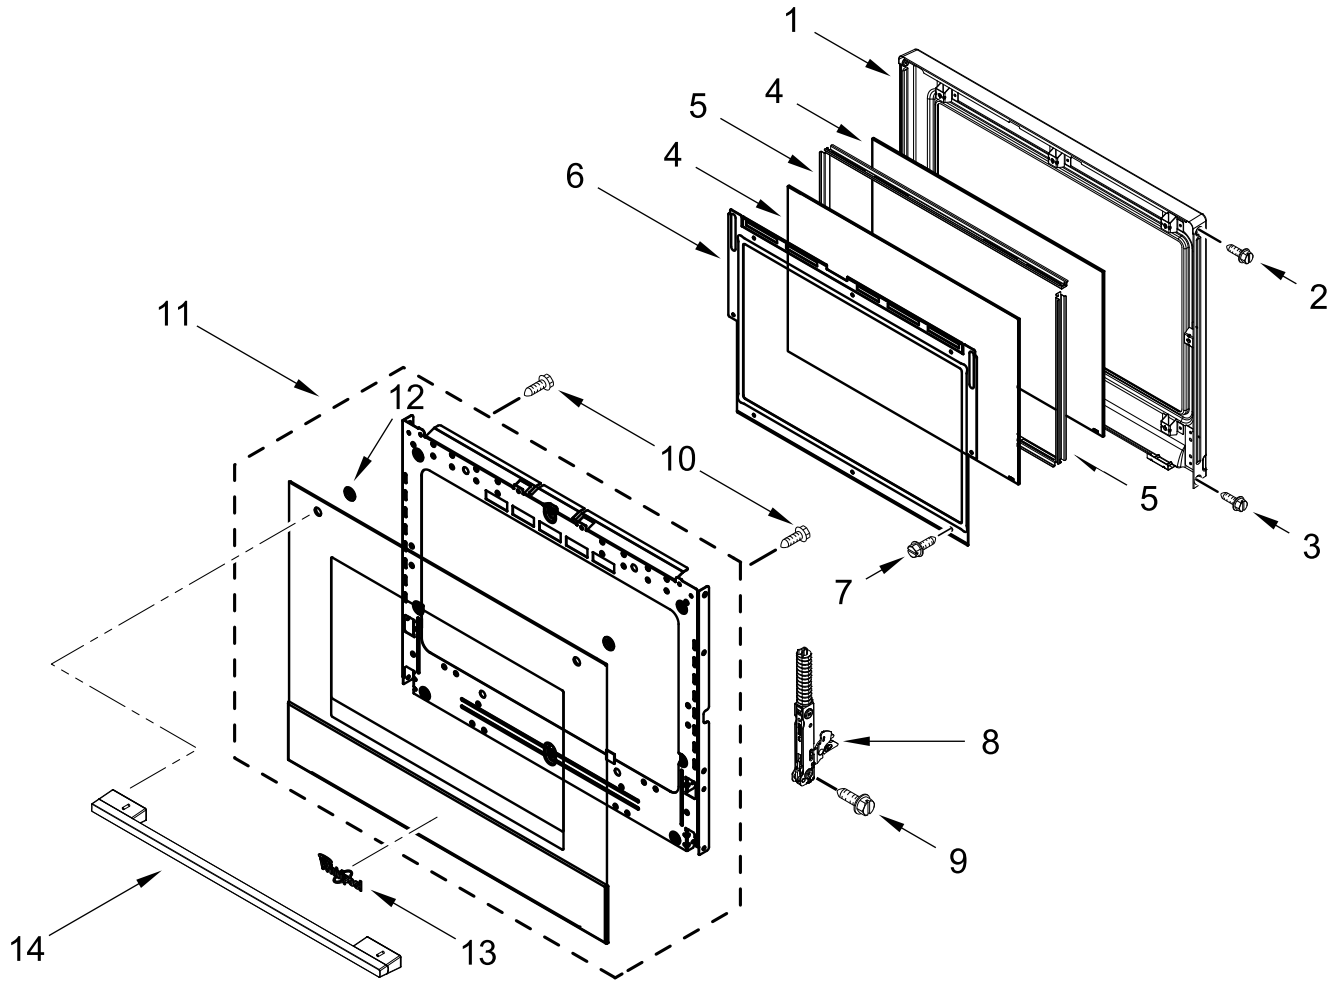

OVEN DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11302587	Liner Assembly	7	7101P426-60	Screw	11		Door Assembly
2	7101P375-60	Screw	8	W11296054	Hinge, Door (Left)		W11499218	Stainless
3	W11290045	Screw		W11296055	Hinge, Door (Right)	12	W10319024	Washer, Door
4	W10618107	Glass, Inner				13	W10884775	Badge
5	W11302730	Spacer, Air Divider	9	3196183	Screw	14		Handle, Door
6	W11174095	Retainer, Air Divider Glass	10	W11317731	Screw (Black)		W11497438	Stainless


INTERNAL OVEN PARTS

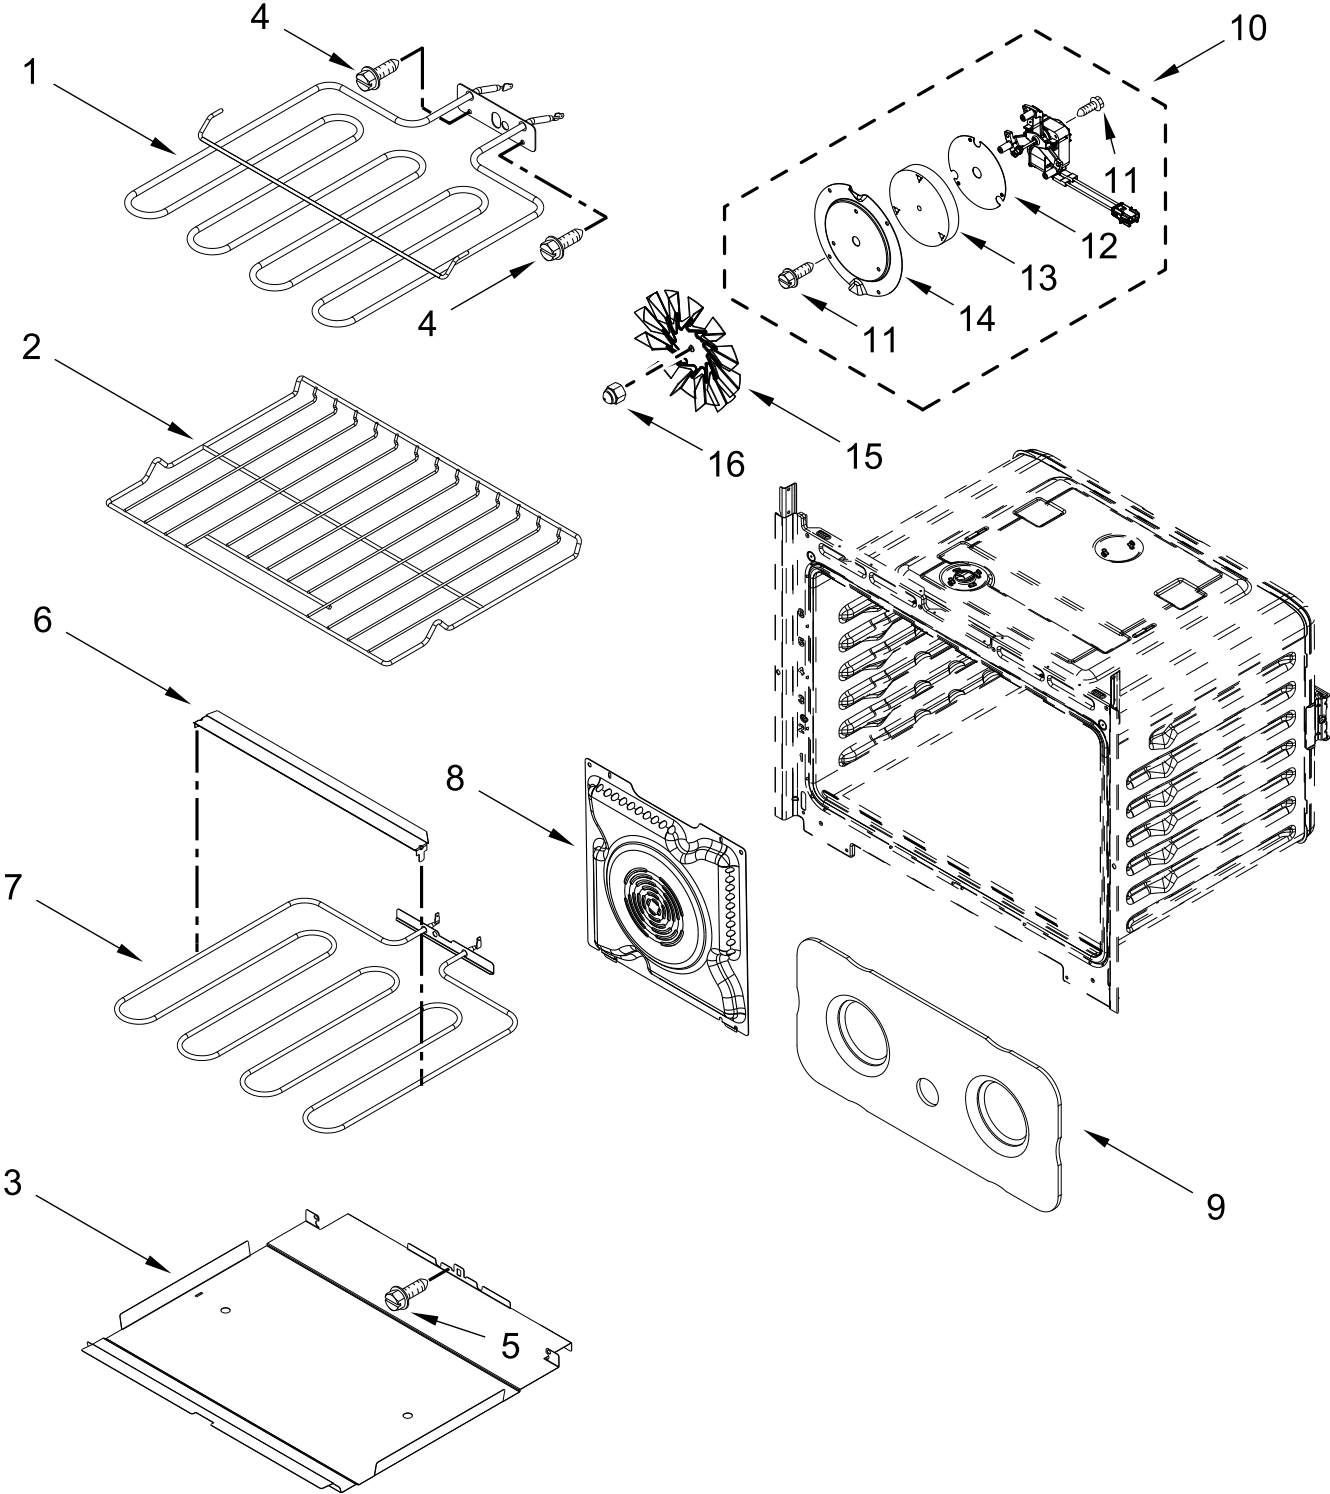

INTERNAL OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11238160	Element, Broil	8	W10359278	Baffle, Convection	14	W11398057	Cover, Convect Plate
2	W11122597	Rack, Oven	9	W11489860	Plate, Ring Element	15	W11425715	Blade, Fan
3	W10318198	Tray, Hidden Bake	10	W11398058	Convect Motor Assembly	16	W11433702	Nut, Acorn (LH)
4	7101P434-60	Screw	11	W10720084	Screw			
5	7101P426-60	Screw	12	W11251715	Plate, Convect Motor			
6	W10282957	Crossbar, Hidden Bake Tray	13	W11251716	Insulation, Convect Motor			
7	W11292248	Element, Bake						


MICROWAVE DOOR PARTS

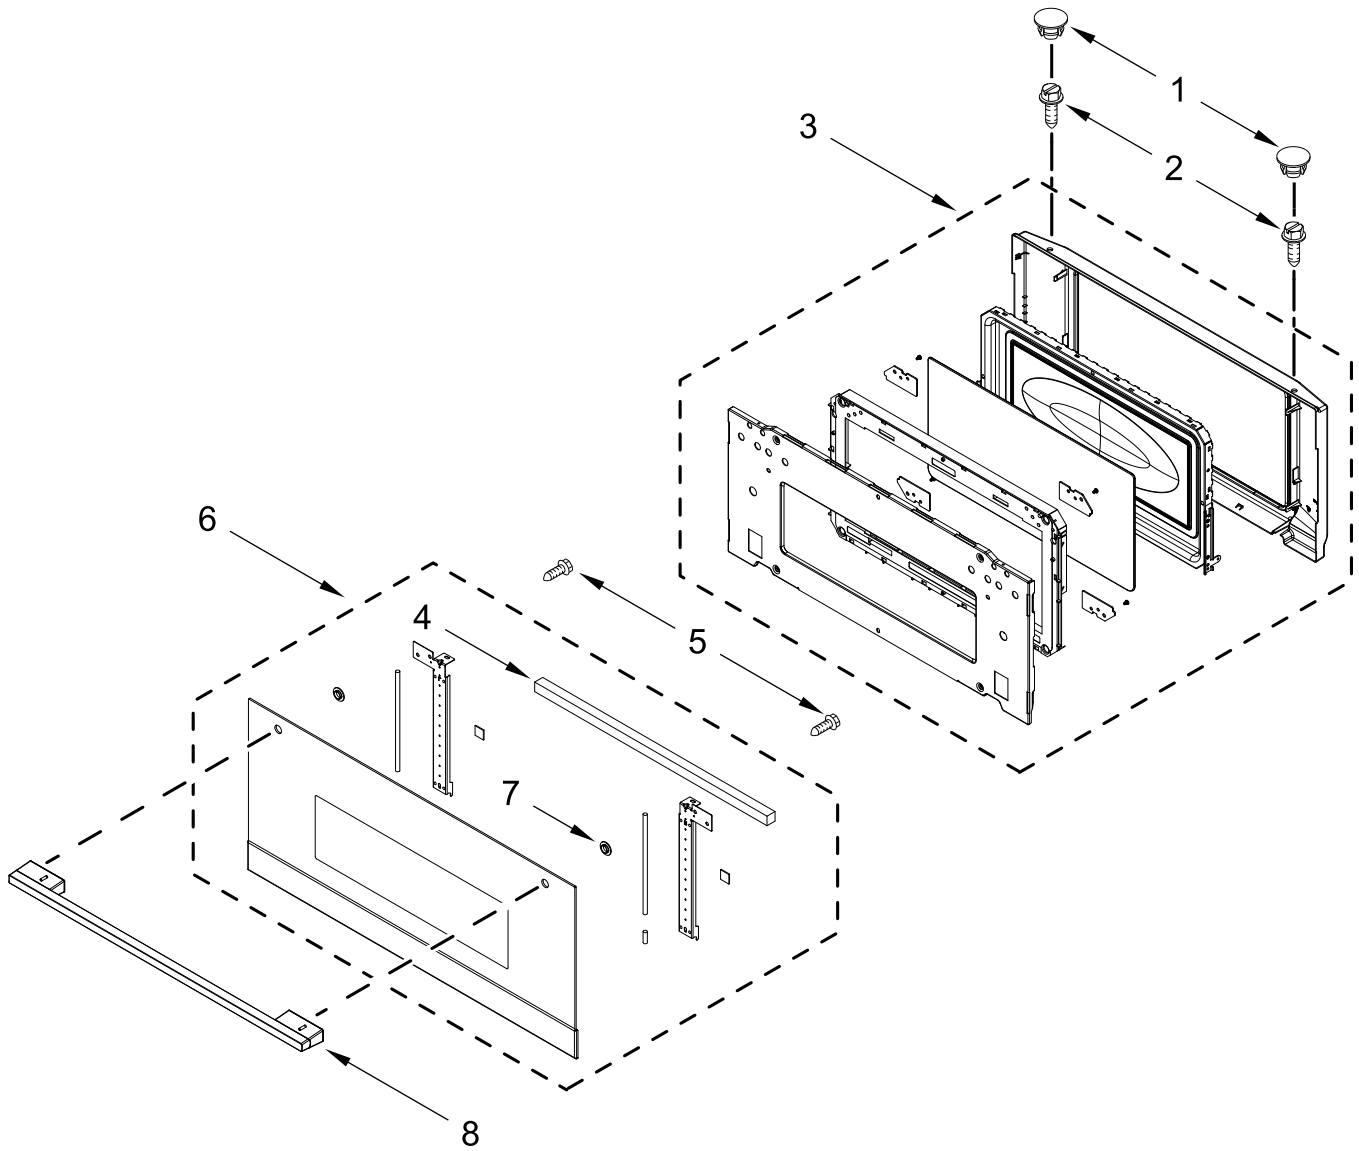

MICROWAVE DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	8304588BL	Cap, Screw	5	W11317731	Screw (Black)	8		Handle, Door
2	7101P338-60	Screw	6		Outer Door Assembly	W11497438		Stainless
3	W11639555	Inner Door Assembly		W11500262	Stainless			
4	W10359769	Foam, Door Handle	7	W10319024	Washer, Door			


CABINET AND STIRRER PARTS

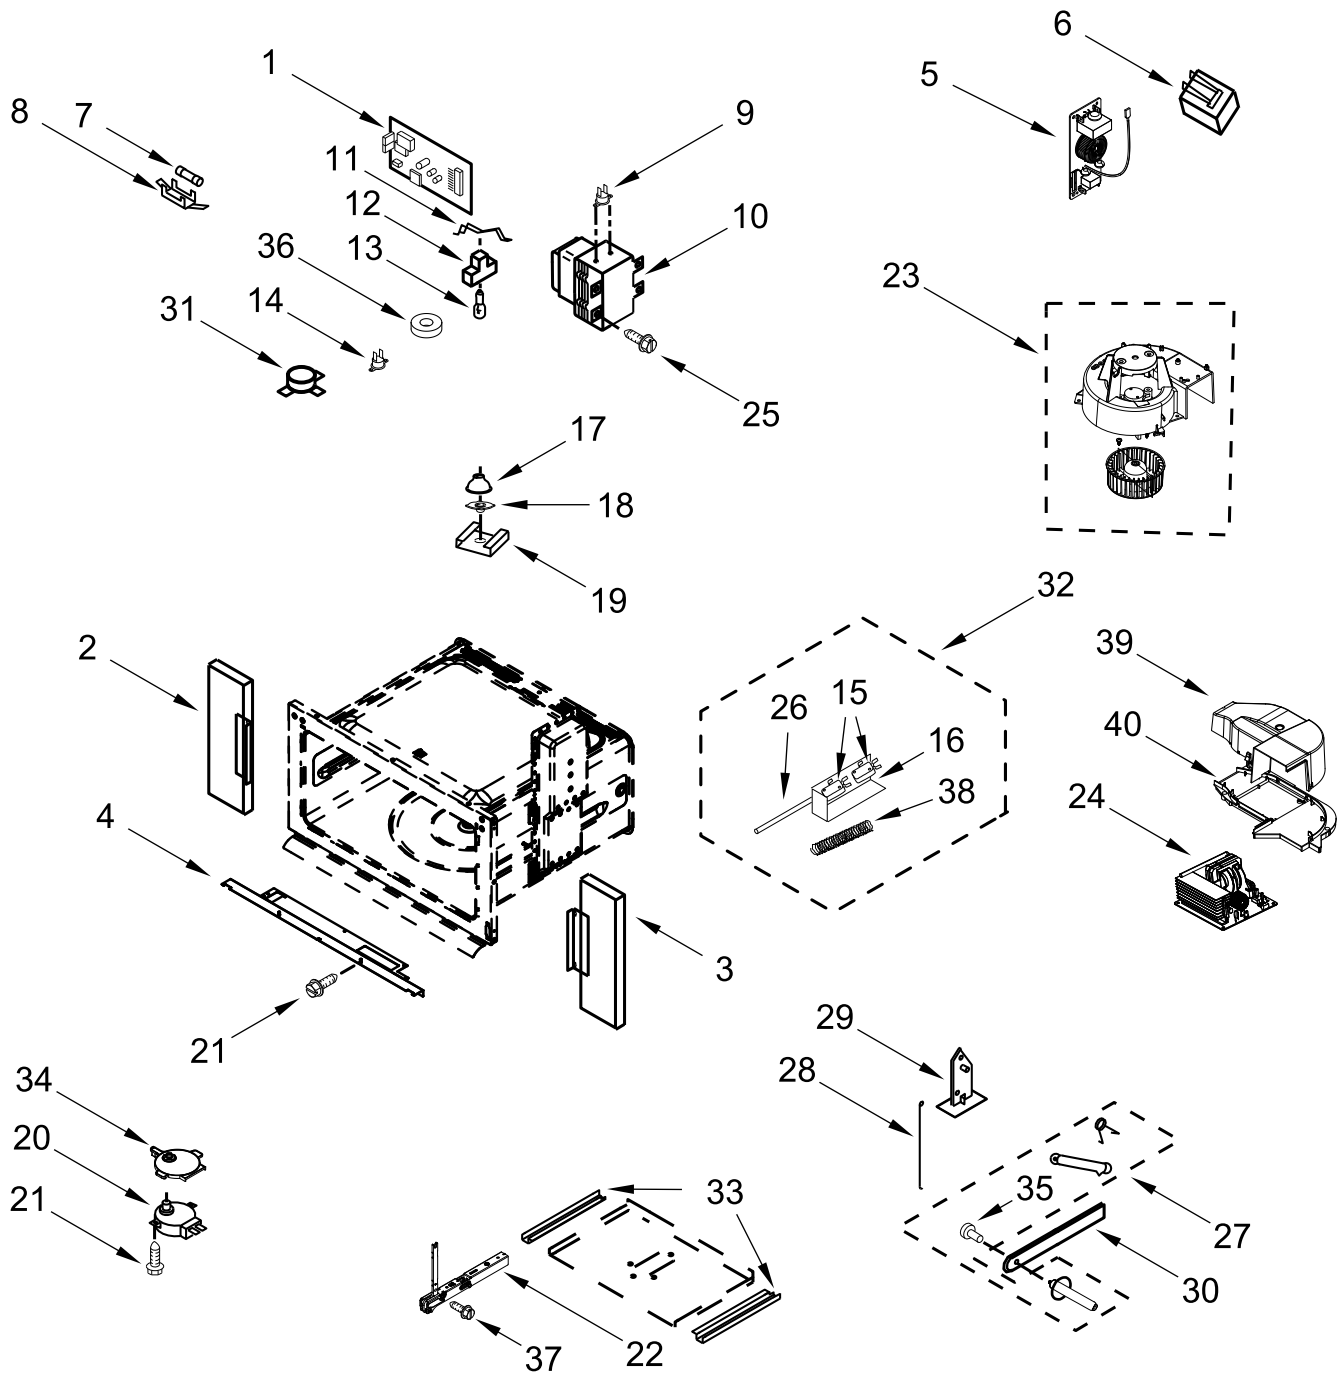

CABINET AND STIRRER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11290002	Control, Electric	15	461967848881	Switch	31	W10460457	Sensor, Humidity
2	461967017491	Trim, Side (Left)	16	W10876593	Holder, Switch	32	W10358241	Assembly, Interlock Switch
3	461967017481	Trim, Side (Right)	17	423107022541	Reflector	33	461967008461	Support, Bottom
4	W11334716	Vent, Top Microwave	18	423107720491	Lens, Lamp	34	461967753742	Adapter, Turntable Motor
5	W11505129	Filter, Noise	19	W11440819	Clip, Spring	35	461967510191	Bushing
6	461967848621	Transformer, Light (20V)	20	461967848971	Motor, Turntable	36	W10769147	Sealing, Lamp
7	241908600053	Fuse	21	461967825321	Screw	37	461967825781	Screw (Shoulder)
8	4375231	Block, Fuse	22	W11319465	Hinge, Door	38	423107570871	Spring, Release Rod
9	461967846741	Thermostat, Magnetron	23	W11131760	Cooling Fan Assembly	39	W11591019	Housing, Upper Inverter
10	W11504545	Magnetron	24	W11504539	Inverter	40	W11591018	Housing, Lower Inverter
11	W10465869	Spring, Lamp	25	461967825971	Screw			
12	W10490593	Holder, Lamp	26	461967750464	Rod, Push			
13	W10795595	Lamp, Halogen	27	W10128850	Assembly, Sliding Arm			
14	W10389447	Thermostat	28	461967570351	Spring, Torsion			
			29	461967750494	Support			
			30	W11213889	Arm, Sliding			


TOP VENTING PARTS

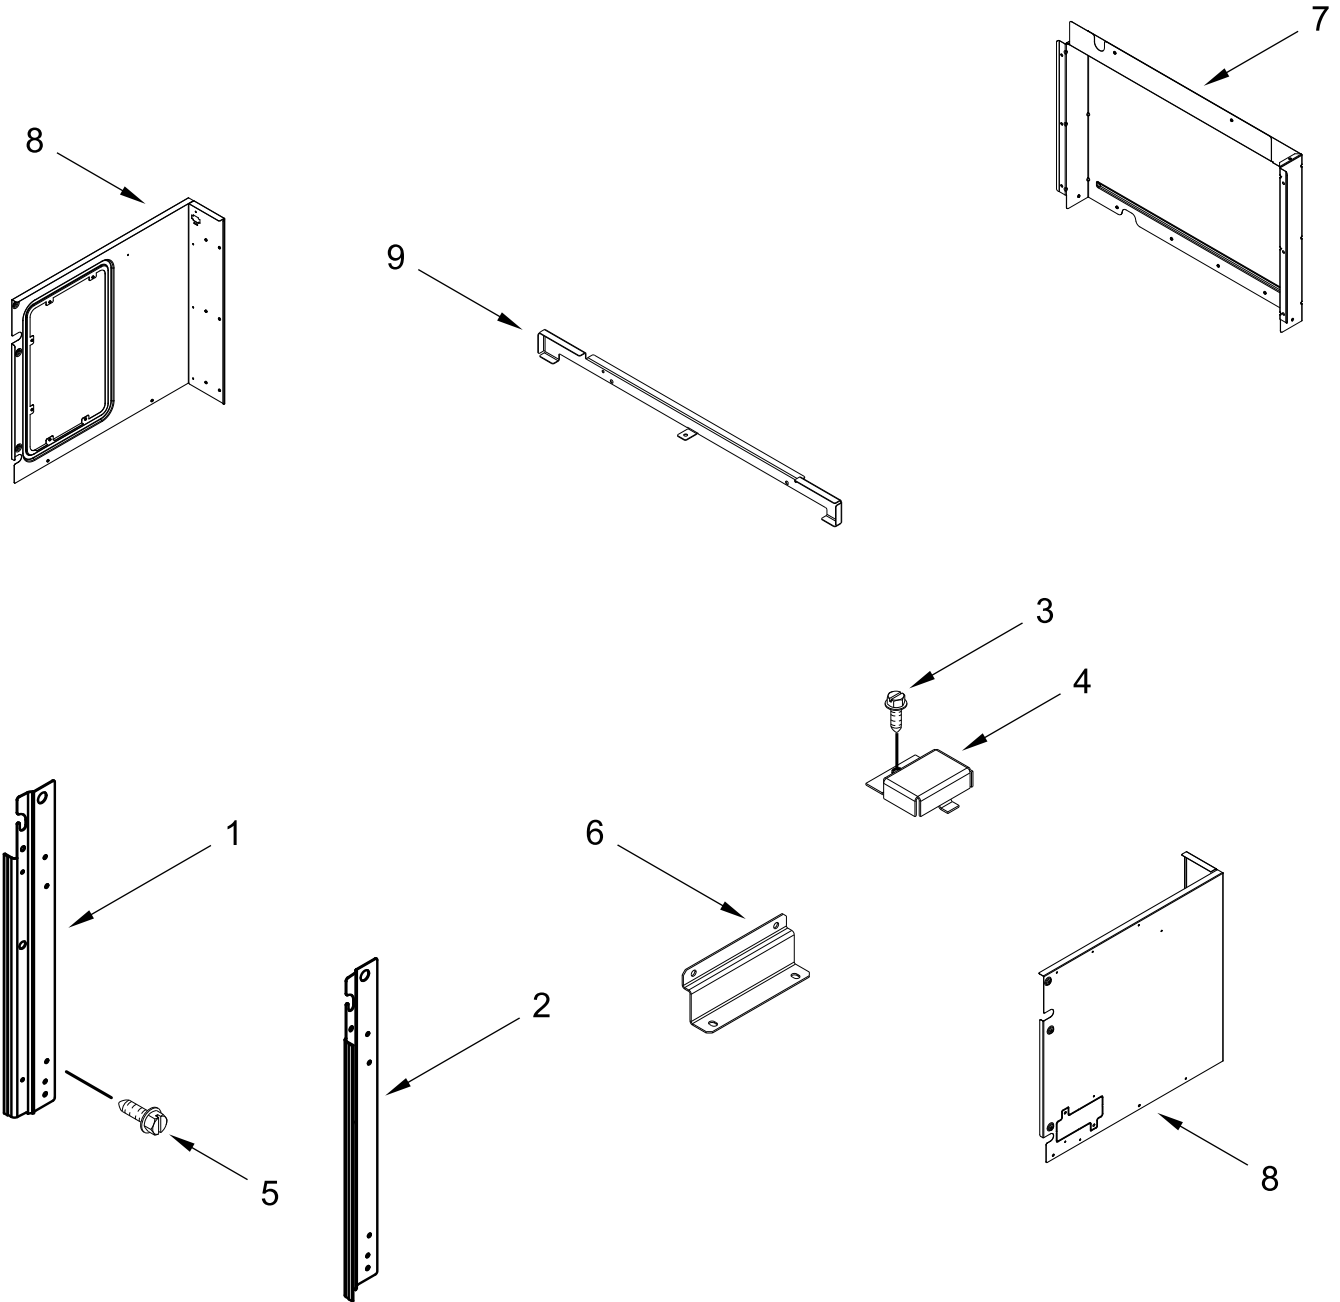

TOP VENTING PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11627410	Siderail, Combo (Left)	4	8285593	Cover, Connector	8	W11171909	Side, Combo Chassis (Left)
2	W11627411	Siderail, Combo (Right)	5	7101P633-60	Screw (Black)		W11171919	Side, Combo Chassis (Right)
3	7101P426-60	Screw	6	W10283024	Side, Bracket	9	W10283022	Support, Crossbar
			7	W11171004	Cover, Combo Chassis Back Duct			

INTERNAL MICROWAVE PARTS

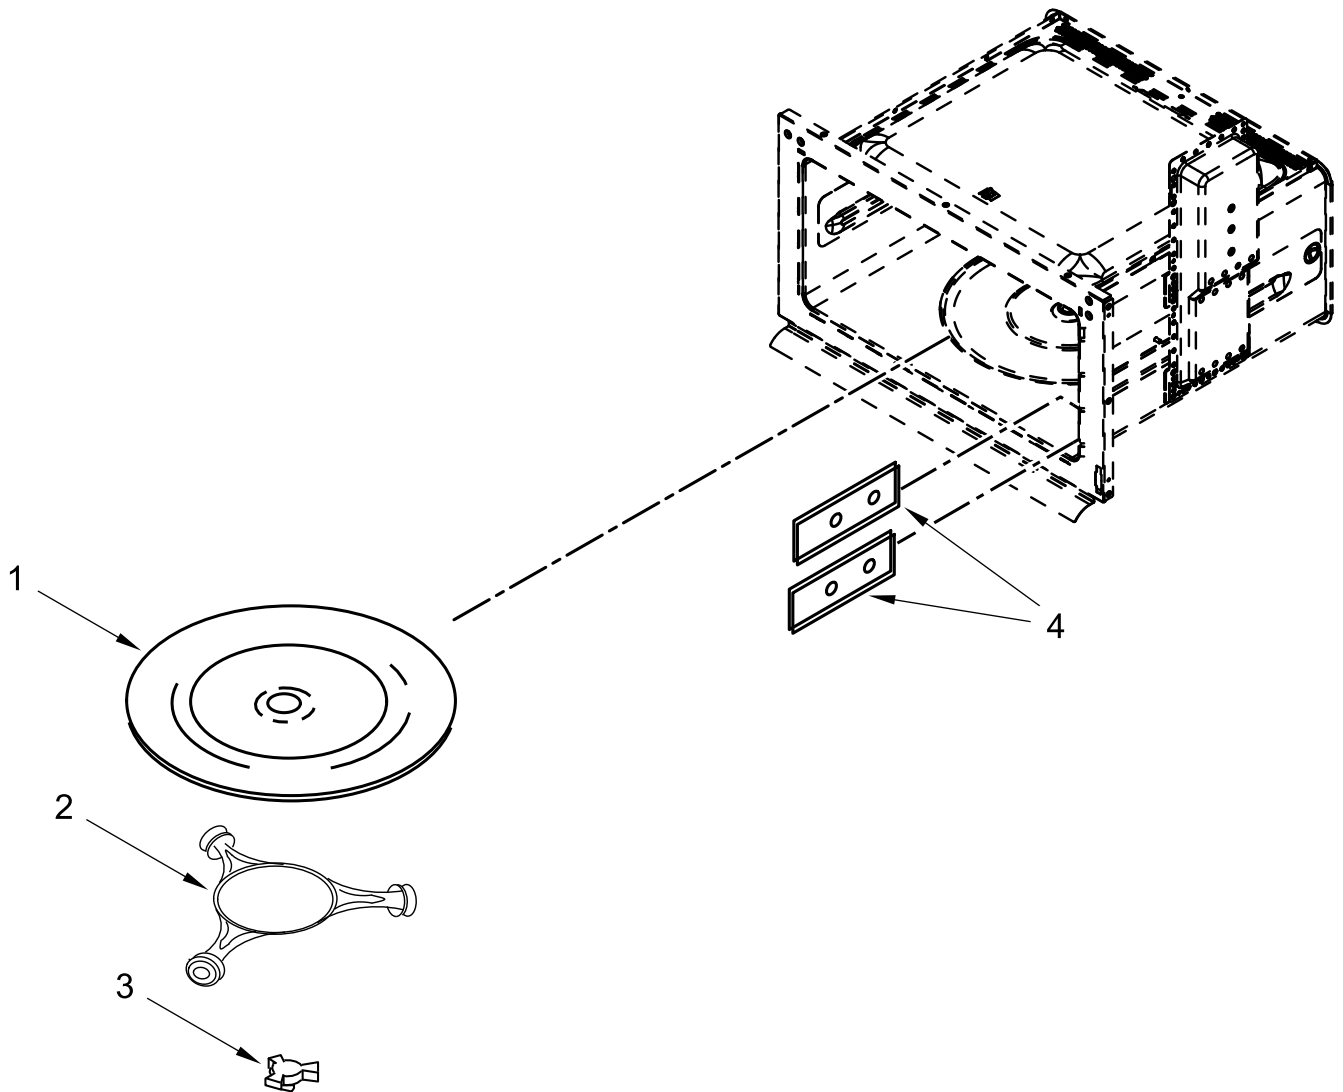

INTERNAL MICROWAVE PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11340342	Turntable, Glass	3	W10545578	Drive, Turntable
2	W10367316	Ring, Turntable	4	461967451001	Plate, Cover

OPTIONAL PARTS (NOT INCLUDED)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		ACCESSORY PARTS
		Deflector, Bottom Vent
W11551866		Stainless Trim, Bottom Vent
W11570321		Stainless Trim, Tall Vent
W11570325		Black
W11570323		Stainless PAINT, TOUCH-UP (1/2oz.)
	72017	White
	72032	Black PAINT, SPRAY
	350930	White
	261900	Citrine White
	830864	Black
		ADHESIVE
	482338	Sealer, Silastic