

 


GAS COOKTOP

MODELS:

WCGK5030PB00 (Black)


COOKTOP, BURNER AND GRATE PARTS

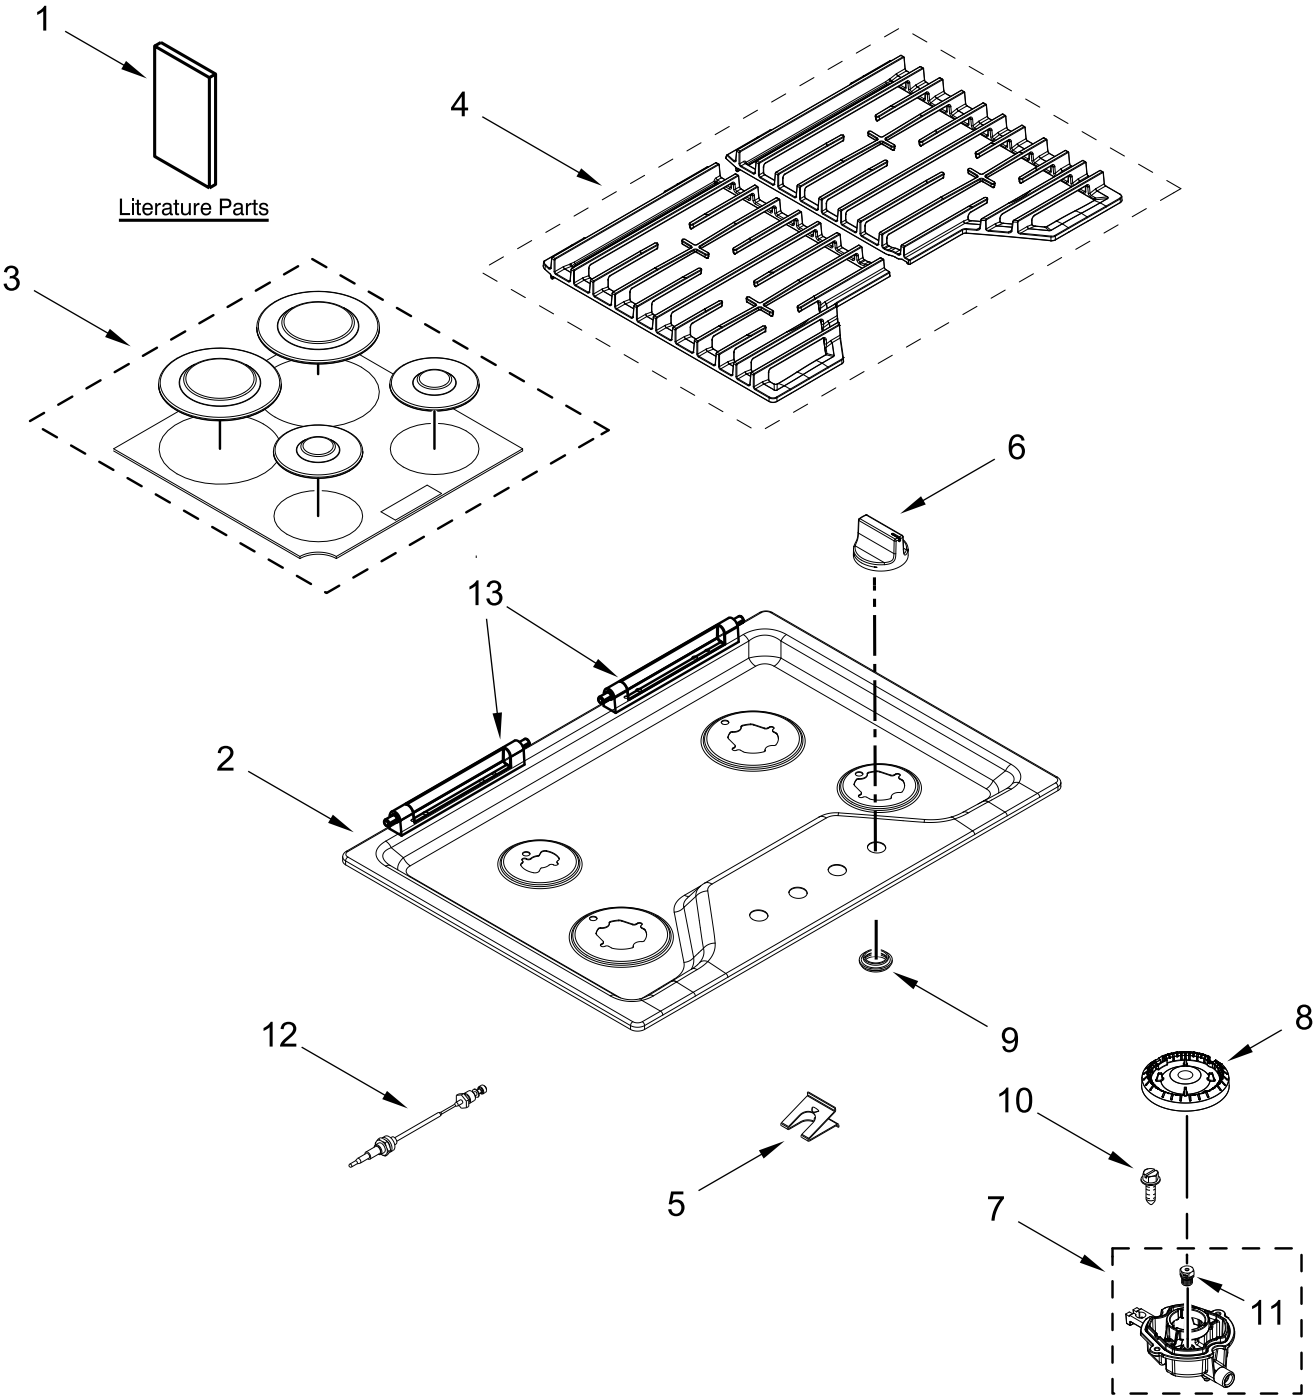

COOKTOP, BURNER AND GRATE PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	8	W11352193	Flame Spreader (Left Front and Right Rear)	13		Hinge, Grate (Not Serviced)
	W11613935	Owner's Manual						
	W11635589	Quick Start Guide		W11352197	Flame Spreader (Left Rear)			FOLLOWING PARTS NOT ILLUSTRATED
2		Cooktop		W11352195	Flame Spreader (Right Front)	W11632720		Harness (Switch), Main
	W11591933	Black			Grommet	W10878749		Harness, Spark Module
3		Burner Cap Kit	9					
	W11498499	Black (Set of 4)		W10625915	Black		3400015	Screw, Grounding
4		Grate Kit	10	W10758282	Screw	W10392003		Cord, Power
	W11567398	Black (Set of 2)	11	W10723360	Orifice (Left Front)	W10132200		Relief, Strain
5	W10827923	Electrode, Spring			Orifice (Left Rear)		313438	Clip, Harness
6		Knobs, Cooktop		W11364991	Orifice (Left Rear)	W11573776		LP Conversion Kit
	W11566380	Black			Orifice (Right Front)		3801F935-51	Bracket, Tie Down
7	W11567145	Holder, Orifice (12K) (Left Front)		W11631338	Orifice (Right Front)		7101P062-60	Screw (For Tie Down Bracket)
	W11567151	Holder, Orifice (5K) (Left Rear)		W11610057	Orifice (Right Rear)			
	W11567146	Holder, Orifice (9.1K) (Right Front)	12	W11640975	Wiring, Electrode (440MM)			
	W11567144	Holder, Orifice (18K) (Right Rear)						

 BURNER BOX, GAS VALVES AND SWITCH PARTS

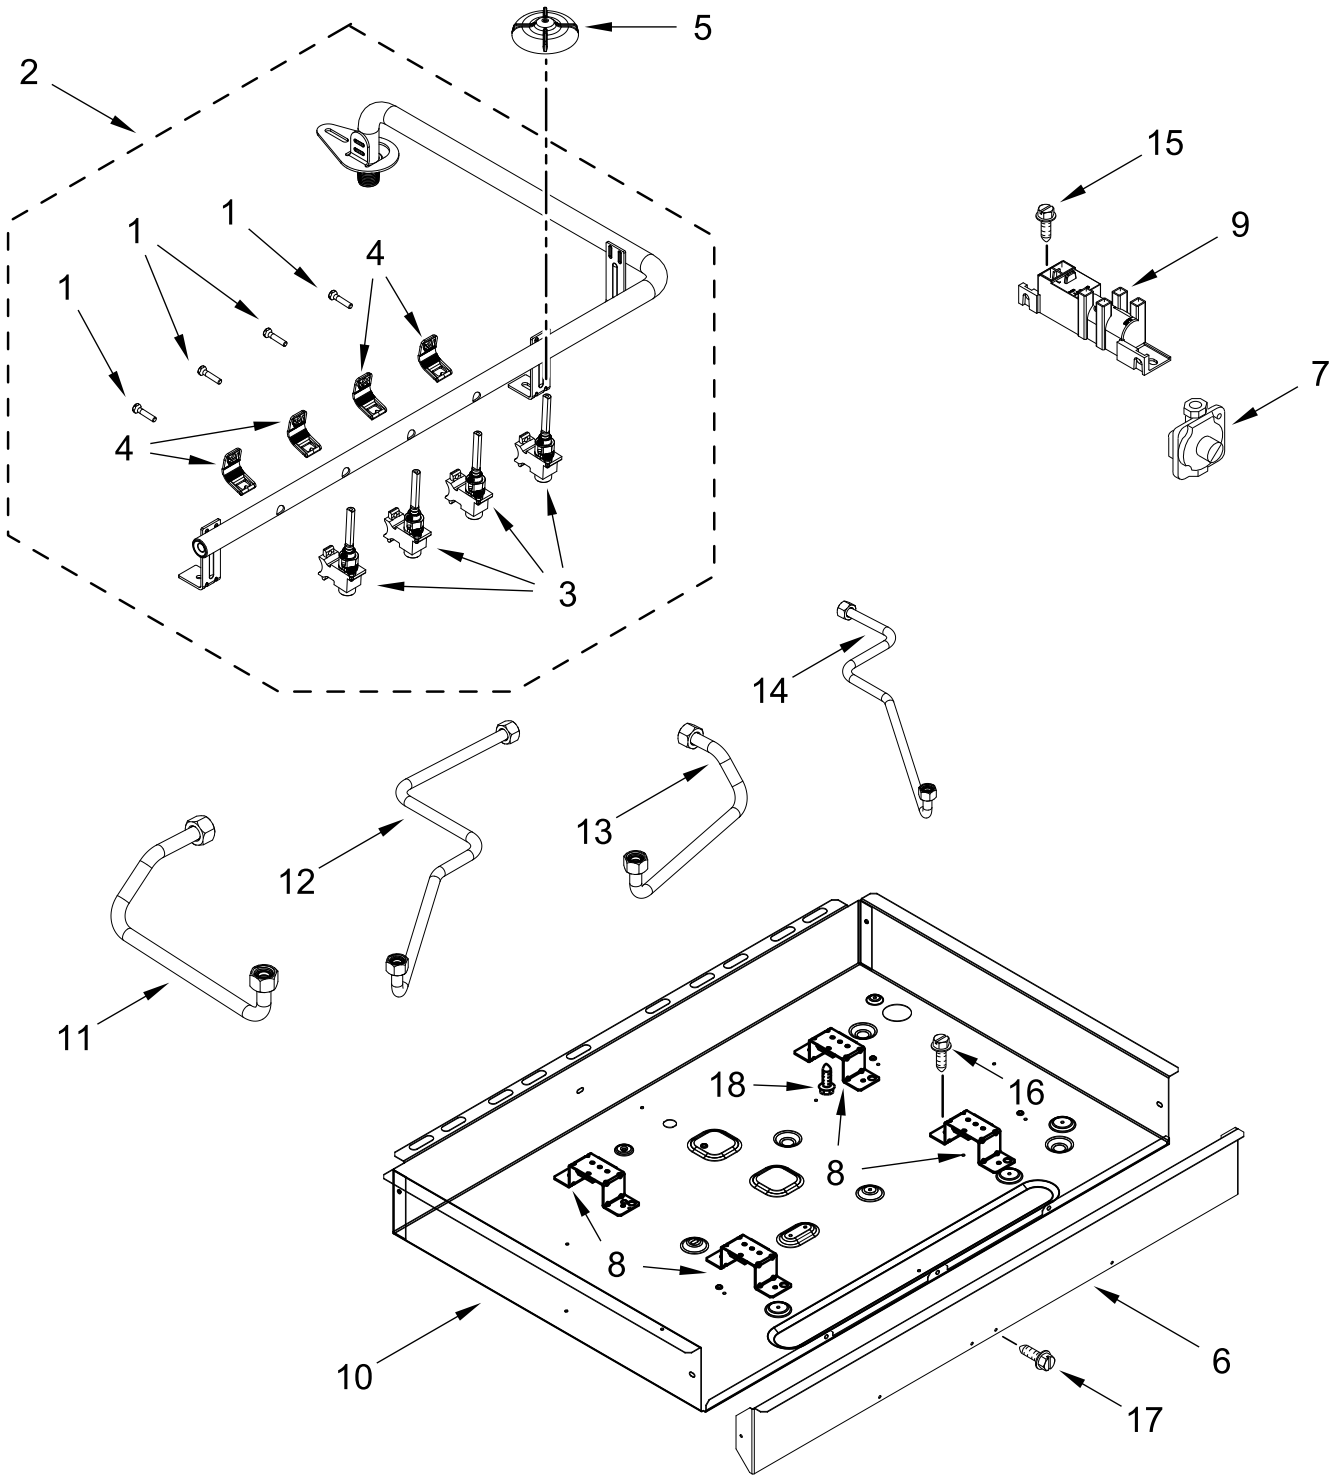

BURNER BOX, GAS VALVES AND SWITCH PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10743274	Screw	7	W10449143	Regulator, Pressure	14	W11573971	Tube, Gas (Right Rear)
2	W11573986	Manifold Assembly	8	W11566469	Bracket, Orifice Holder	15	7101P426-60	Screw
3	W11629615	Valve, Single (Left Front and Right Rear)	9	W11349967	Module, Spark	16	W10443110	Screw
	W11629616	Valve, Single (Left Rear)	10		Box, Burner (Not Serviced)	17	3196537	Screw
	W11629617	Valve, Single (Right Front)	11	W11573969	Tube, Gas (Left Front)	18	8286921	Screw, Burner Rail (M4)
4	8287055	Bracket, Single Valve	12	W11573970	Tube, Gas (Left Rear)			OPTIONAL ACCESSORY PART (NOT INCLUDED)
5	W11507167	Seal, Switch Shaft	13	W11573974	Tube, Gas (Right Front)	W10685483		Griddle
6	W11620860	Panel, Front						