



 
GAS COOKTOP

MODELS:

WCGK5036PB00 (Black)

WCGK5036PW00 (White)


COOKTOP, BURNER AND GRATE PARTS

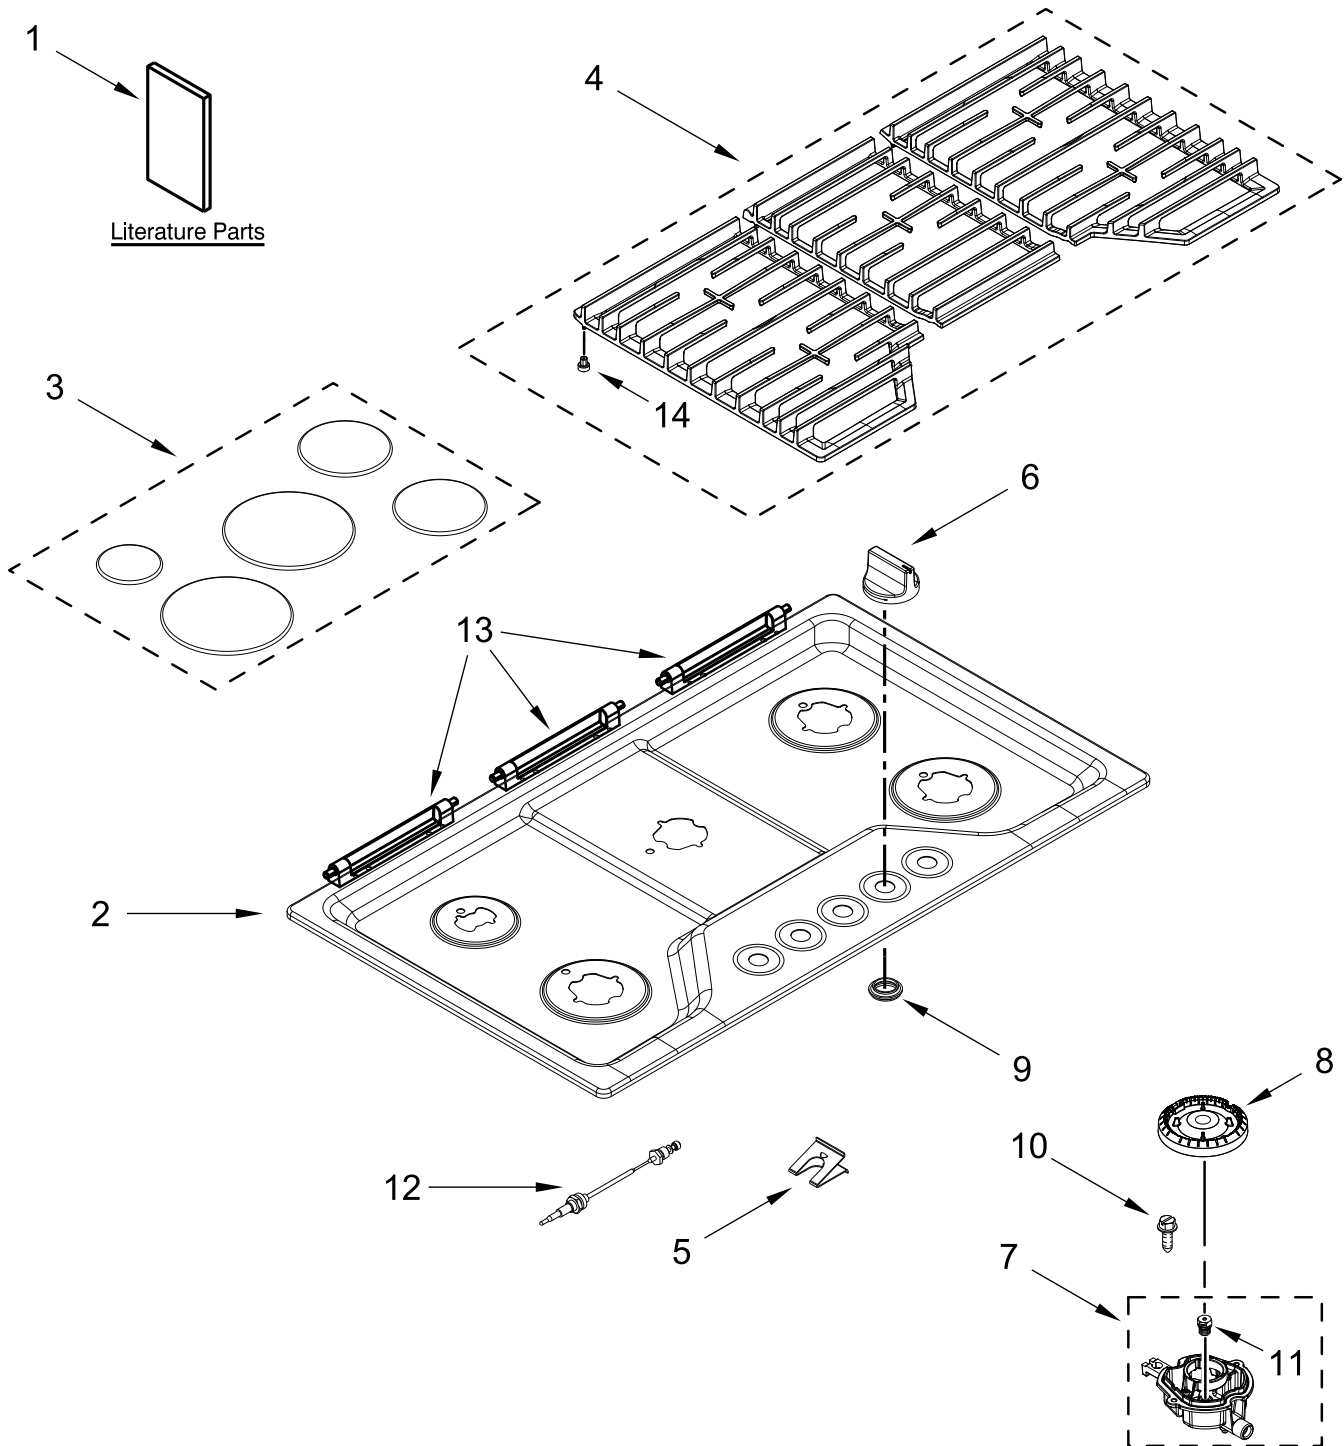

COOKTOP, BURNER AND GRATE PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	8	W11352193	Flame Spreader (Left Front and Center)	14	W10598131	Foot Pad, Grate (Outer)
	W11613935	Owner's Manual						
	W11635589	Quick Start Guide		W11352197	Flame Spreader (Left Rear)			FOLLOWING PARTS NOT ILLUSTRATED
2		Cooktop		W11352195	Flame Spreader (Right Front and Right Rear)		W11632719	Harness (Switch), Main
	W11591935	Black					W10878749	Harness, Spark Module
	W11591936	White					3400015	Screw, Grounding
3		Burner Cap Kit	9		Grommet		W10392003	Cord, Power
	W11596821	Black (Set of 5)		W10625915	Black		W10132200	Relief, Strain
4		Grate Kit	10	W10758282	Screw		313438	Clip, Harness
	W11591618	Black (Set of 3)	11	W10723360	Orifice (Left Front)		W11573776	LP Conversion Kit
5	W10827923	Electrode, Spring		W11364991	Orifice (Left Rear)		3801F935-51	Bracket, Tie Down
6		Knobs, Cooktop		W11610057	Orifice (Center)		7101P062-60	Screw (For Tie Down Bracket)
	W11566380	Black		W11631338	Orifice (Right Front and Right Rear)			
	W11576415	White						
7	W11567145	Holder, Orifice (12K) (Left Front)	12	W11640975	Wiring, Electrode (440MM)			
	W11567151	Holder, Orifice (5K) (Left Rear)		W11642338	Wiring, Electrode (636MM)			
	W11567144	Holder, Orifice (18K) (Center)	13		Hinge, Grate (Not Serviced)			
	W11567146	Holder, Orifice (9.1K) (Right Front and Right Rear)						

 BURNER BOX, GAS VALVES AND SWITCH PARTS

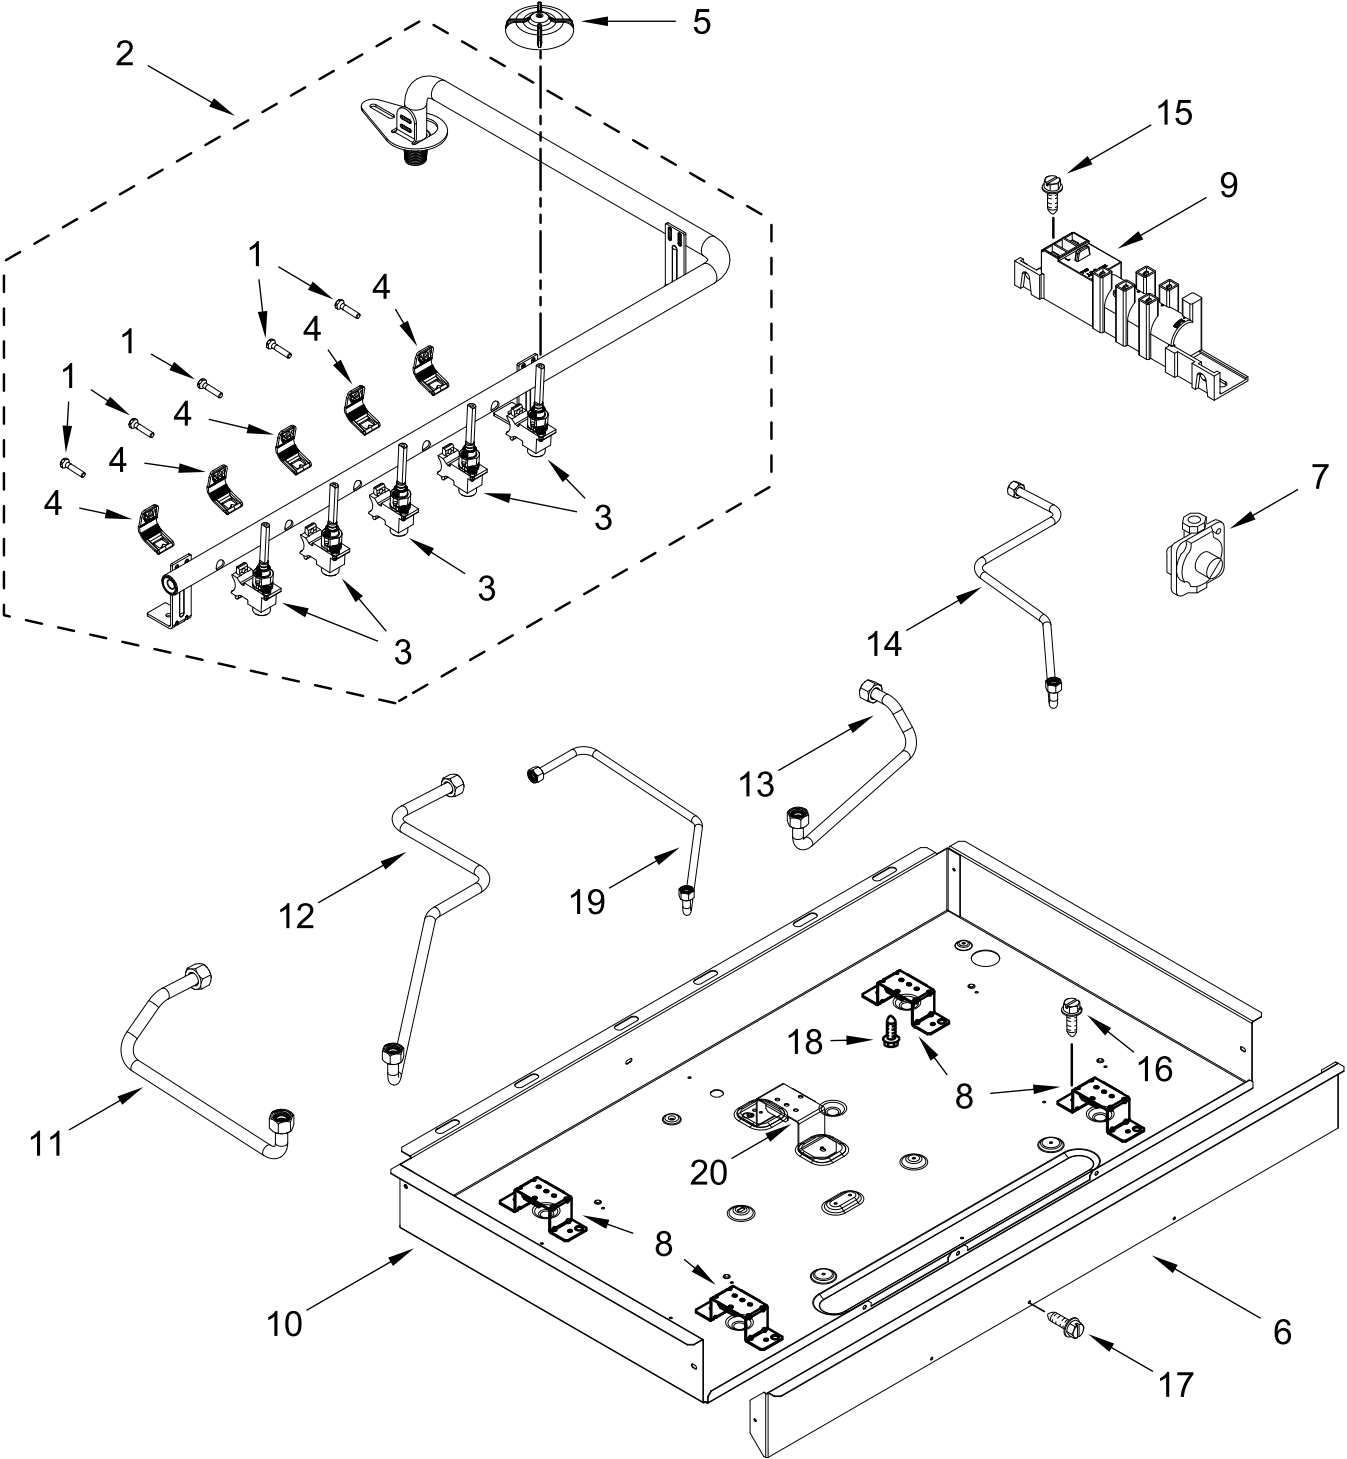

BURNER BOX, GAS VALVES AND SWITCH PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10743274	Screw	8	W11566469	Bracket, Orifice Holder	17	3196537	Screw
2	W11576641	Manifold Assembly	9	W11350452	Spark Module	18	8286921	Screw, Burner Rail (M4)
3	W11629615	Valve, Single (Left Front and Center)	10		Box, Burner (Not Serviced)	19	W11573983	Tube, Gas (Center)
	W11629616	Valve, Single (Left Rear)	11	W11573975	Tube, Gas (Left Front)	20	W11704153	Bracket, Orifice Holder Center Burner
	W11629617	Valve, Single (Right Front and Right Rear)	12	W11573977	Tube, Gas (Left Rear)			INSULATION PARTS NOT ILLUSTRATED
4	8287055	Bracket, Single Valve	13	W11573979	Tube, Gas (Right Front)	W11631590		Insulation, Burner Box High Temp
5	W11507167	Seal, Switch Shaft	14	W11573978	Tube, Gas (Right Rear)			OPTIONAL ACCESSORY PART (NOT INCLUDED)
6	W11620861	Panel, Front	15	7101P426-60	Screw			
7	W10449143	Regulator, Pressure	16	W10443110	Screw	W10685483		Griddle