




ELECTRIC RANGE

MODELS:

JES1750ML1 (Stainless)


COOKTOP PARTS

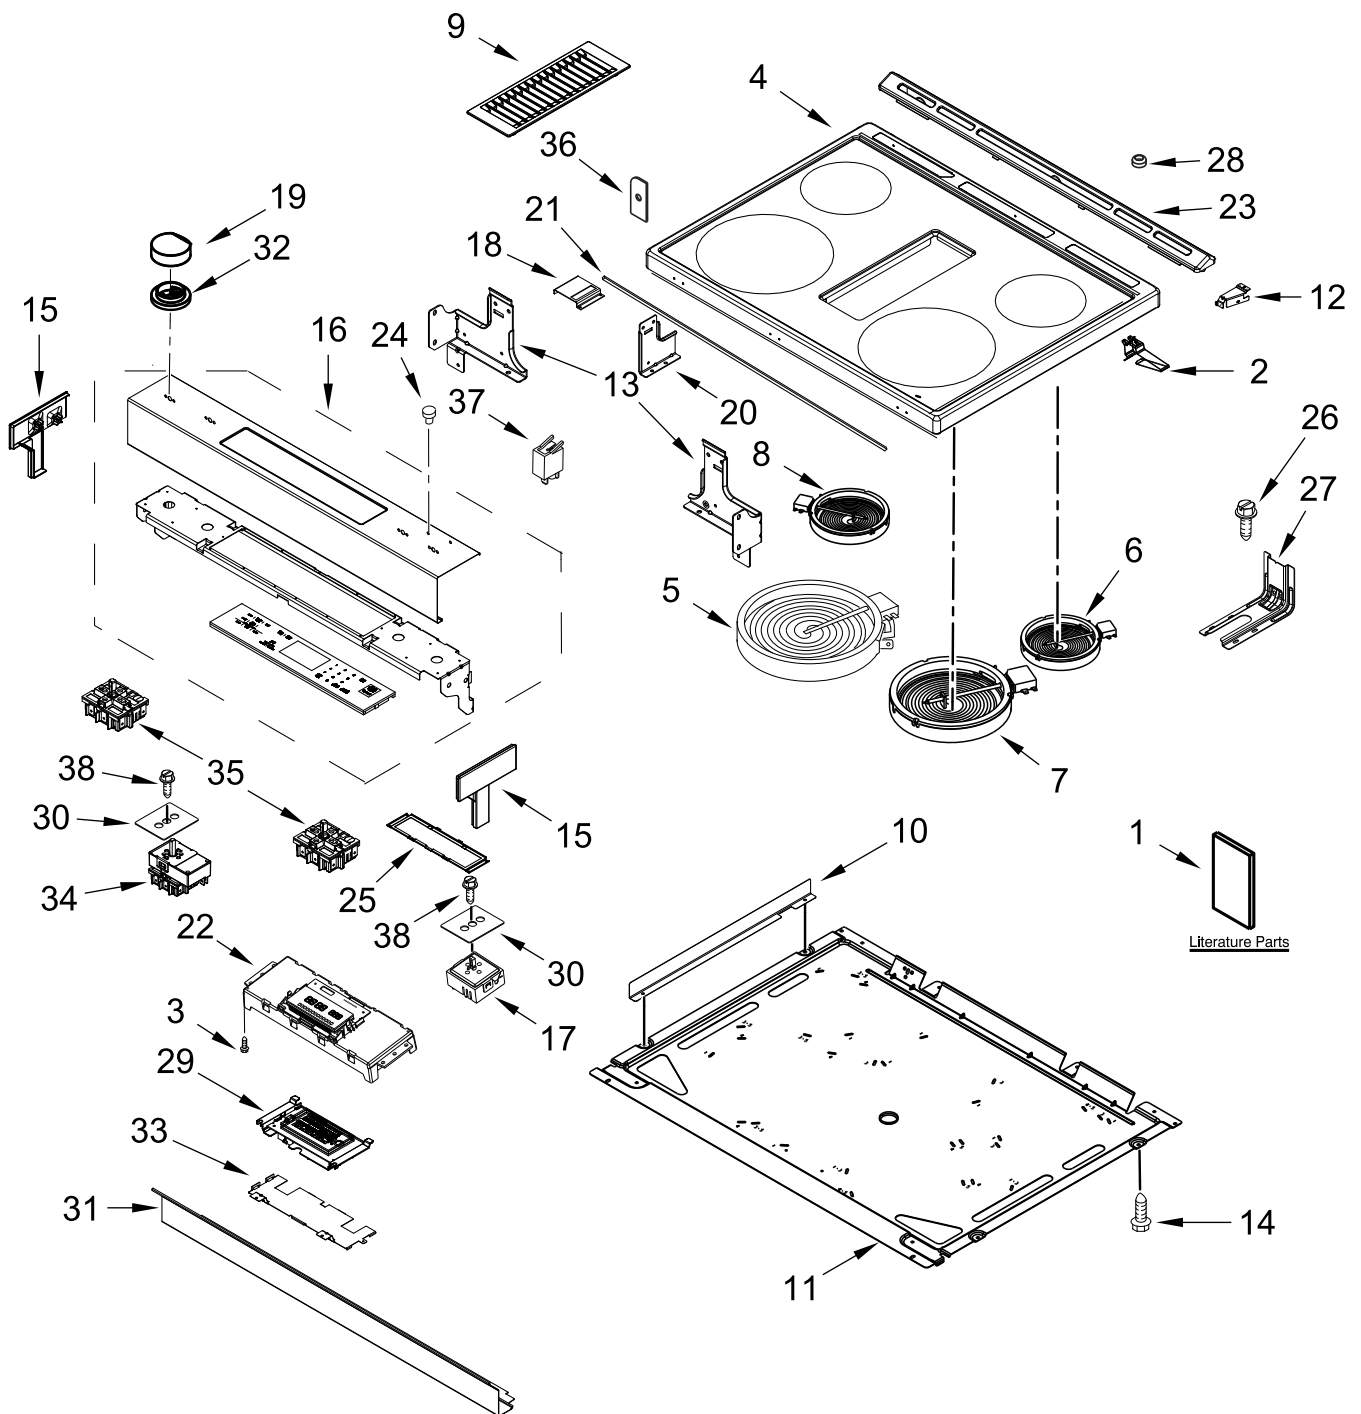

COOKTOP PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	14	3196173	Screw	32		Bezel
	W11615555	Dimension Guide	15		Endcap		W11592977	Stainless
	W11602518	Owners Manual		W10557751	Stainless (Left)	33	W10558372	Bracket, Control
	W11382123	Tech Sheet		W10557754	Stainless (Right)	34	W10437092	Switch, Infinite (Left Front)
	W11602532	Quick Start Guide	16		Console	35	W10437094	Switch, Infinite (Right Front and Left Rear)
	W11604187	Control Guide		W11606818	Stainless			
	W10817089	Downdraft Template	17	W10578768	Switch, Infinite (Right Rear)	36	W10882900	Gasket
2	W11600012	Spring, Element	18	W11158783	Shield, Keypad	37	8523265	Light, Indicator (125V)
3	3196178	Screw	19		Knob	38	W10498399	Screw
4		Cooktop		W10505763	Stainless			FOLLOWING PARTS NOT ILLUSTRATED
	W10536331	Stainless	20	W10598048	Bracket, Console (Center)		W11451596	Harness, Main
5	W10275048	Element (3000 and 1400W)					W10575120	Harness, Keypad
		(Left Front)	21	W10612719	Gasket, Console and Cooktop		W11172426	Harness, Display
6	W10248261	Element (1200W) (Right Rear)	22	W11603771	Control, MRC2		W11172418	Harness, Console
7	W10251108	Element (3200W) (Right Front)	23		Vent, Trim Top		W11171878	Harness, Cooktop
				W10636529	Stainless		W10664316	Clip, Harness (Cooktop)
8	W10342780	Element (1300W) (Left Rear)	24	3196068	Lens, Indicator		W11198274	Harness, Down Draft Fan Jumper
			25	W10557780	Bracket, Control			
9	W10575593	Grill, Air	26	7101P485-60	Screw, Anti-Tip Kit			
10	W11175271	Bracket, Radiant	27	W11379947	Bracket, Anti-Tip			
11	W10561812	Pan, Radiant	28	W10854253	Bumper			
12	W10162253	Brace, Corner (Left)	29	W10759326	Display, Assembly			
	W10162252	Brace, Corner (Right)	30	7201P077-60	Gasket, Infinite Switch			
13	W10289169	Support, Cooktop (Right)	31		Console, Lower Panel			
	W10289170	Support, Cooktop (Left)		W10743281	Stainless			


CHASSIS PARTS

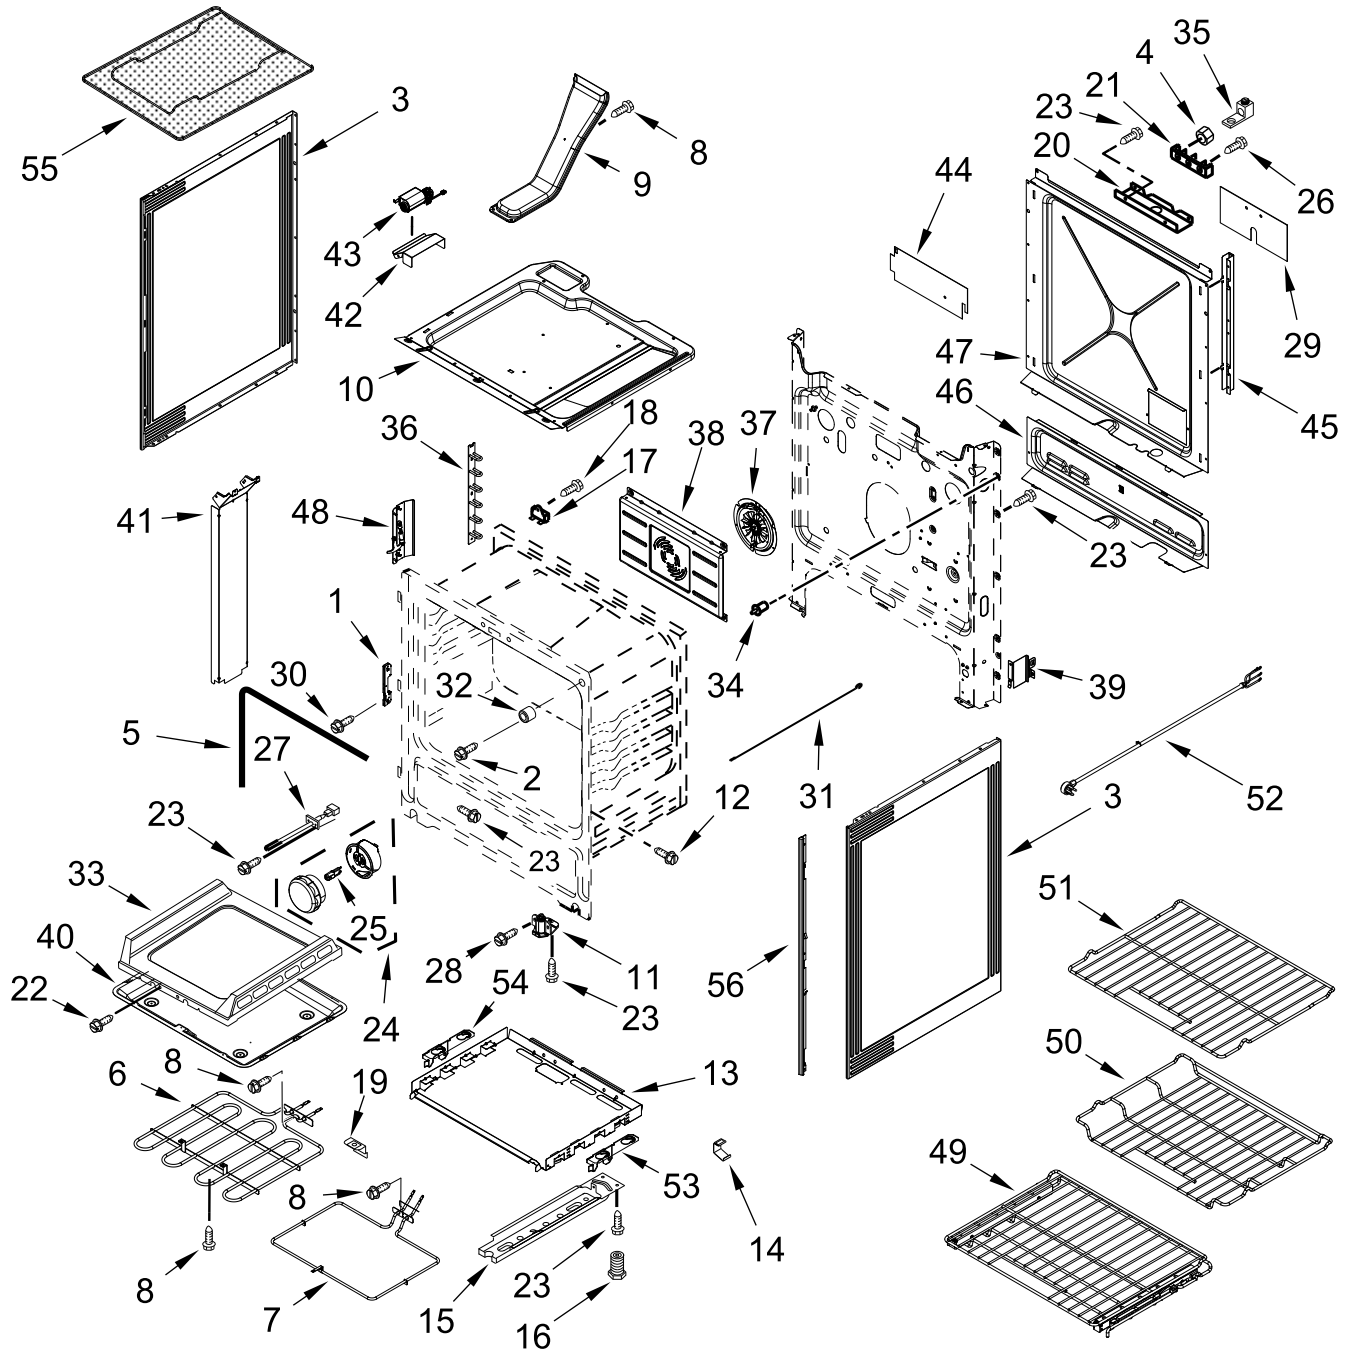

CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10634238	Hinge, Receiver	23	3196178	Screw	46	W10162248	Cover, Wire
2	3196560	Screw	24	W11634772	Light Assembly	47	W11379354	Cover, Back
3		Panel, Side	25	W10571723	Bulb, Halogen 40 Watts	48	W10605411	Receiver, Slow Close Hinge
	W10162245	Black						
4	7103P027-60	Nut	26	3400016	Screw	49	W10911366	Rack, Sliding
5	W11491752	Gasket, Door	27	W10586204	Sensor	50	W10554006	Rack, Maximum Capacity
6	W10544952	Element, Broil	28	3196169	Screw			
7	W10774342	Element, Bake	29	W10655441	Shield, Power Cord	51	W10554005	Rack, Heavy Duty
8	W10362924	Screw	30	W10031780	Screw	52	W10624592	Cord, Power
9	W11122085	Assembly, Flue	31	W10273192	Rod, Door Switch	53	W10828882	Bracket, Panel (Right)
10	W10289168	Box, Burner SI	32	9758701	Spacer, Door	54	W10828883	Bracket, Panel (Left)
11	W10341186	Front Foot Assembly	33	W10774446	Bottom, Oven	55	W11661815	Basket, Airfry
12	W10067840	Screw	34	W11511828	Switch, Door	56	W11510561	Barrier Rail, Rubber (Front Left)
13	W10541959	Shield, Bake	35	W10281322	Kit, Bare Wire Adapter Block			
14	W10137382	Clip, Panel	36	W10603482	Rack, Ladder		W11510562	Barrier Rail, Rubber (Front Right)
15	W10390008	Base Rail Assembly (Left)	37	W11353932	Convection Assembly			FOLLOWING PARTS NOT ILLUSTRATED
	W10390007	Base Rail Assembly (Right)	38	W10554262	Baffle, Full Convection			
16	W10058460	Foot, Leveling	39	W10273002	Bracket, Oven Support	W10289173		Insulation, Wrap
17	3196548	Fuse, Thermal	40	W11379357	Bake Pan	W10575374		Insulation, Bottom
18	3196172	Screw	41	W10162255	Duct, Cover	4820F015-59		Insulation, Strap
19	W10035900	Support, Oven Bottom	42	W10162254	Duct, Cooling	W10162240		Insulation, Back
20	3186034	Bracket, Service	43	W11467246	Cooling Fan	7111P017-60		Clamp, Wire
21	W10246624	Block, Terminal	44	W11117035	Shield, Wire			
22	W10516115	Screw	45	W10162241	Channel, Rear			


BLOWER PARTS

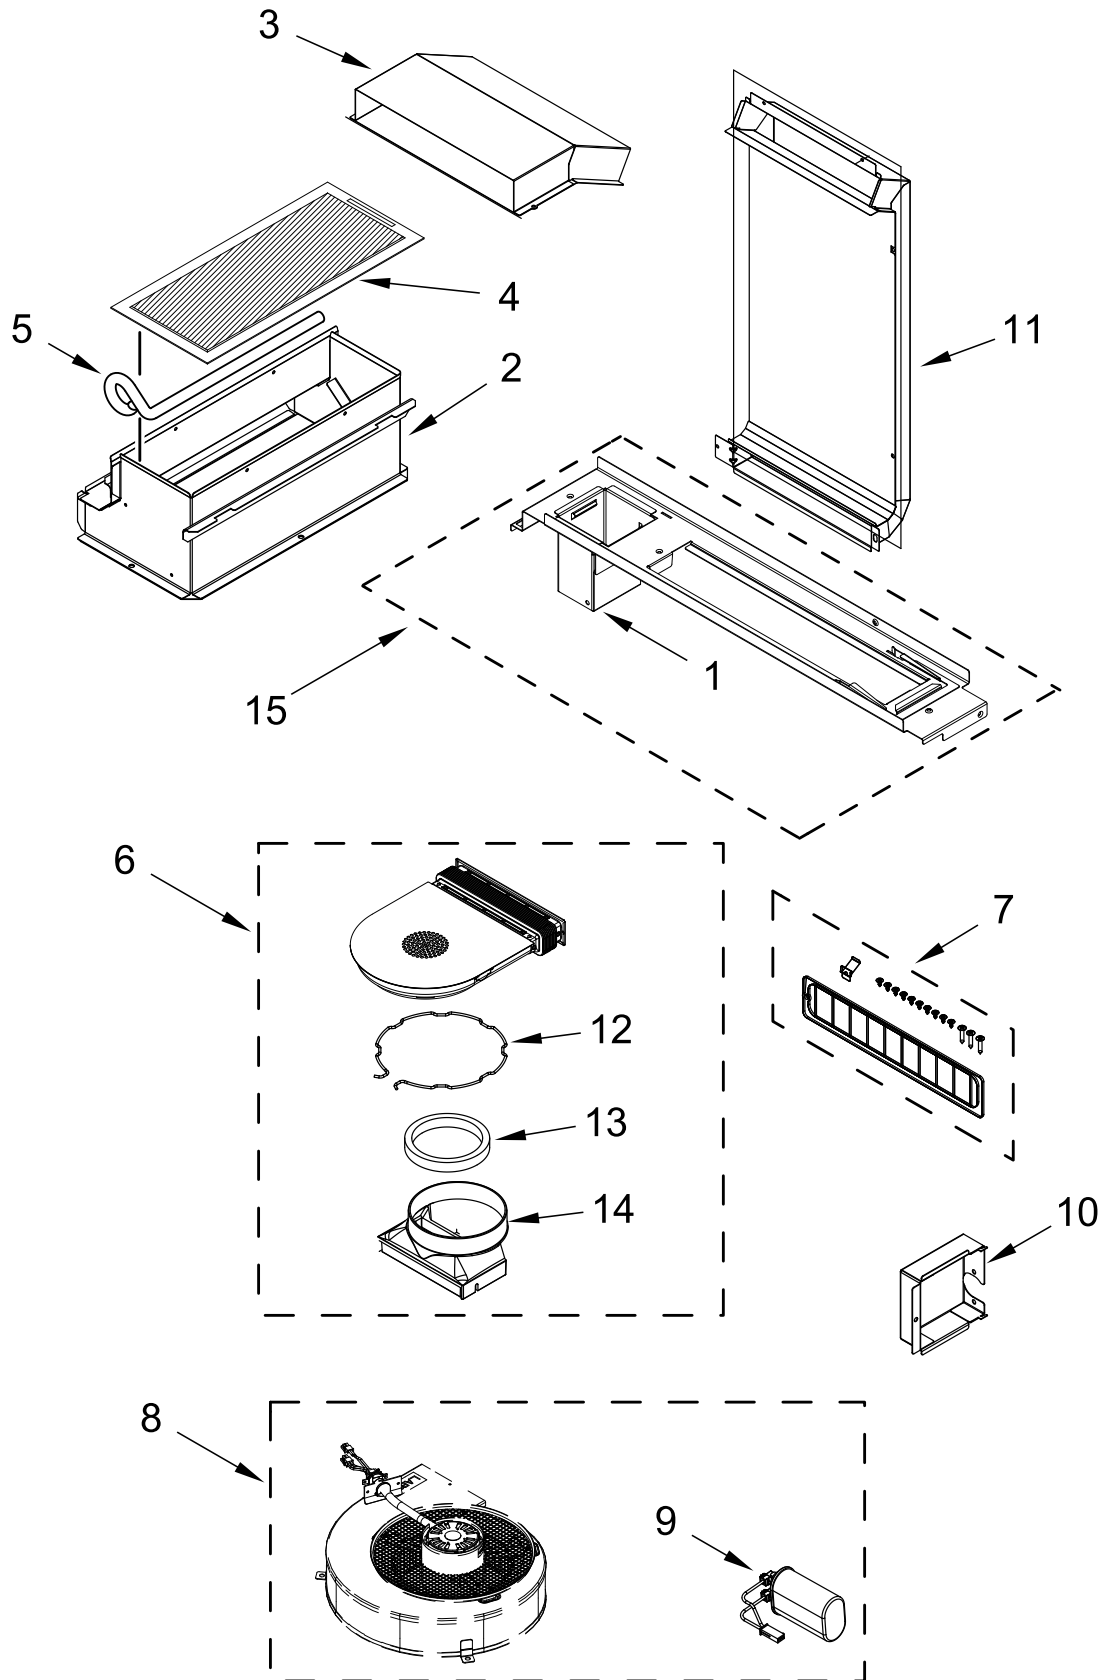

BLOWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10661156	Enclosure, Blower	7	W10789391	Kit, Blower Installation	12	W10702071	Retainer
2	W10572224	Plenum, Intake	8	W10810492	Kit, Blower	13	W10759311	Gasket, Blower
3	W10572145	Plenum, Upper	9	W10788527	Assembly, Capacitor	14	W10642096	Adaptor, Exhaust
4	W10575379	Grease, Filter	10	W10787917	Cover, Capacitor	15	W10789390	Assembly, Plenum Support Bracket
5	W10575393	Guard, Filter	11	W10661835	Plenum, Side			
6	W10789431	Kit, Plenum Transition						

DOOR PARTS

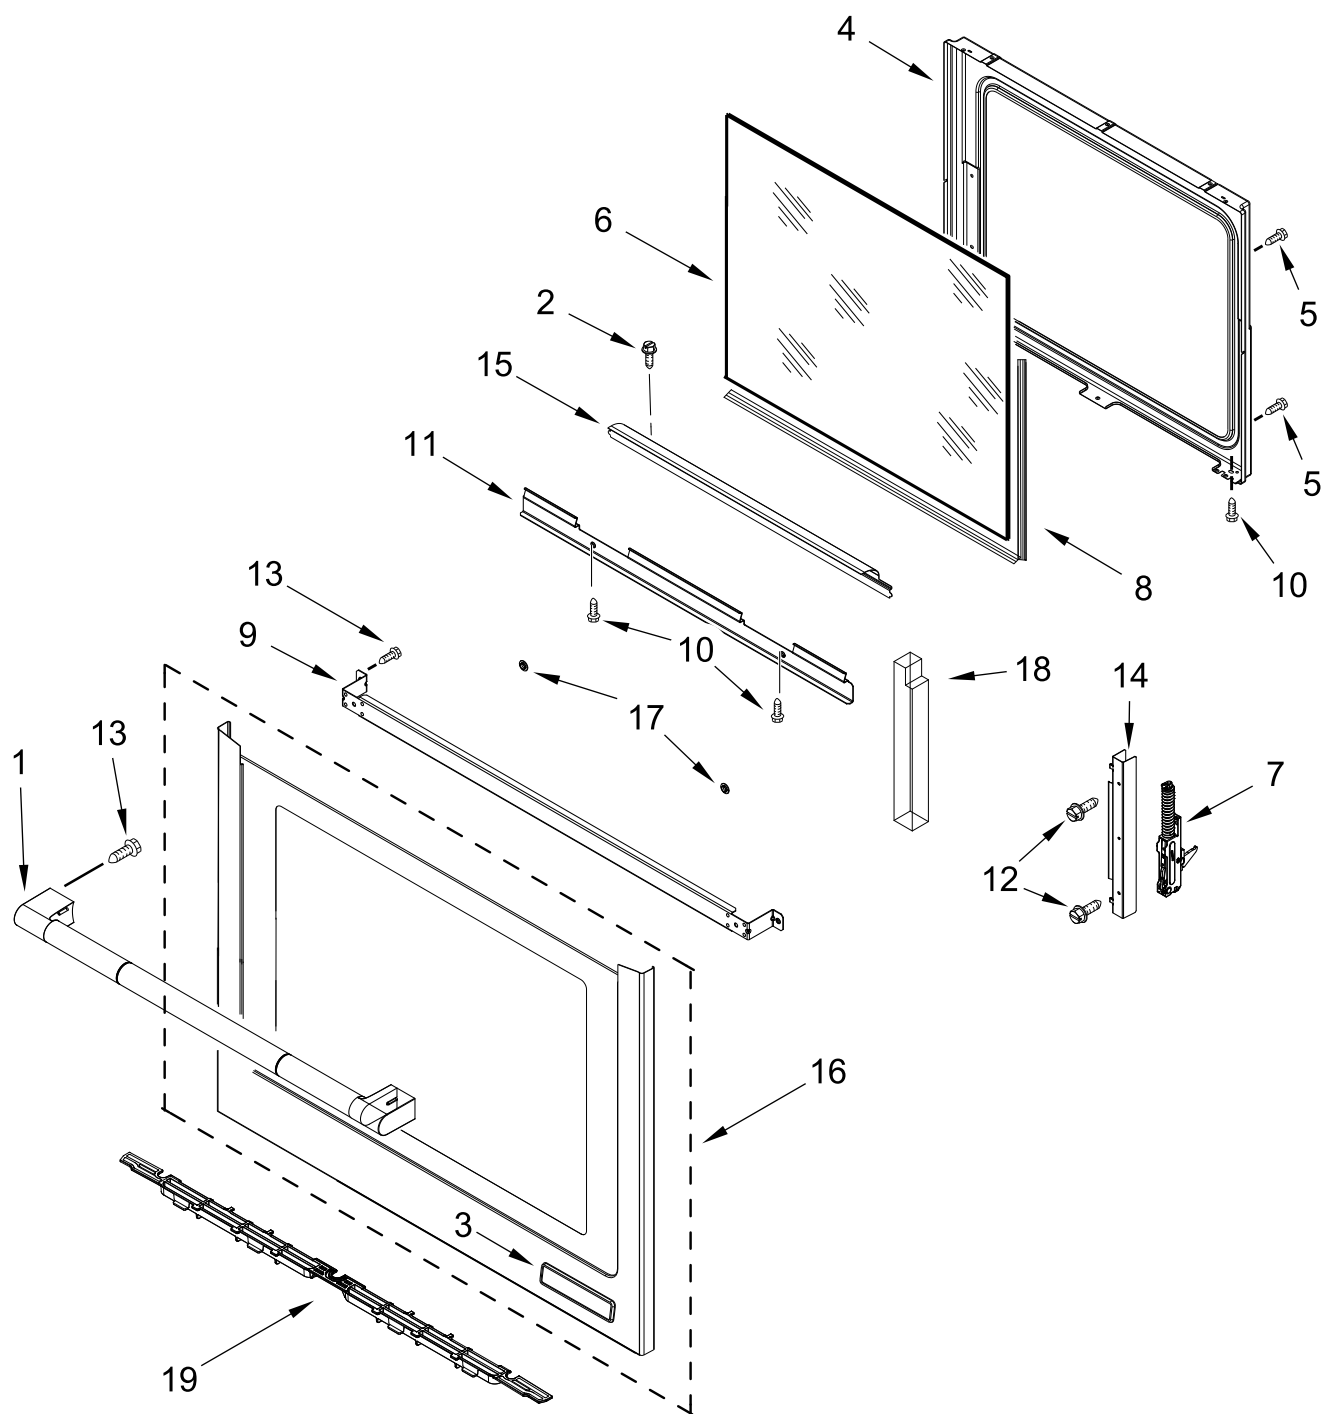


DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Assembly, Door Handle
	W11600908	Stainless
2	9780274	Screw
3		Badge
	W11238658	Stainless
4	W10826568	Liner, Door
5	W10031790	Screw
6	W11223202	Glass, Inner

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
7	W11592970	Hinge, Slow Close
8	W11379948	Glass Spacer
9	W10541911	Bracket, Glass Upper Handle
10	W10327235	Screw
11	W10813140	Rail, Horizontal Support
12	W10031780	Screw
13	W11091878	Screw

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
14	W10813139	Rail, Vertical Support
15		Scoop, Door
	W10551024	Stainless
16		Assembly, Outer Door
	W11618950	Stainless
17	W10319024	Washer, Door
18	W10766562	Insulation, Door
19	W11440161	Bottom, Door Cover

DRAWER PARTS

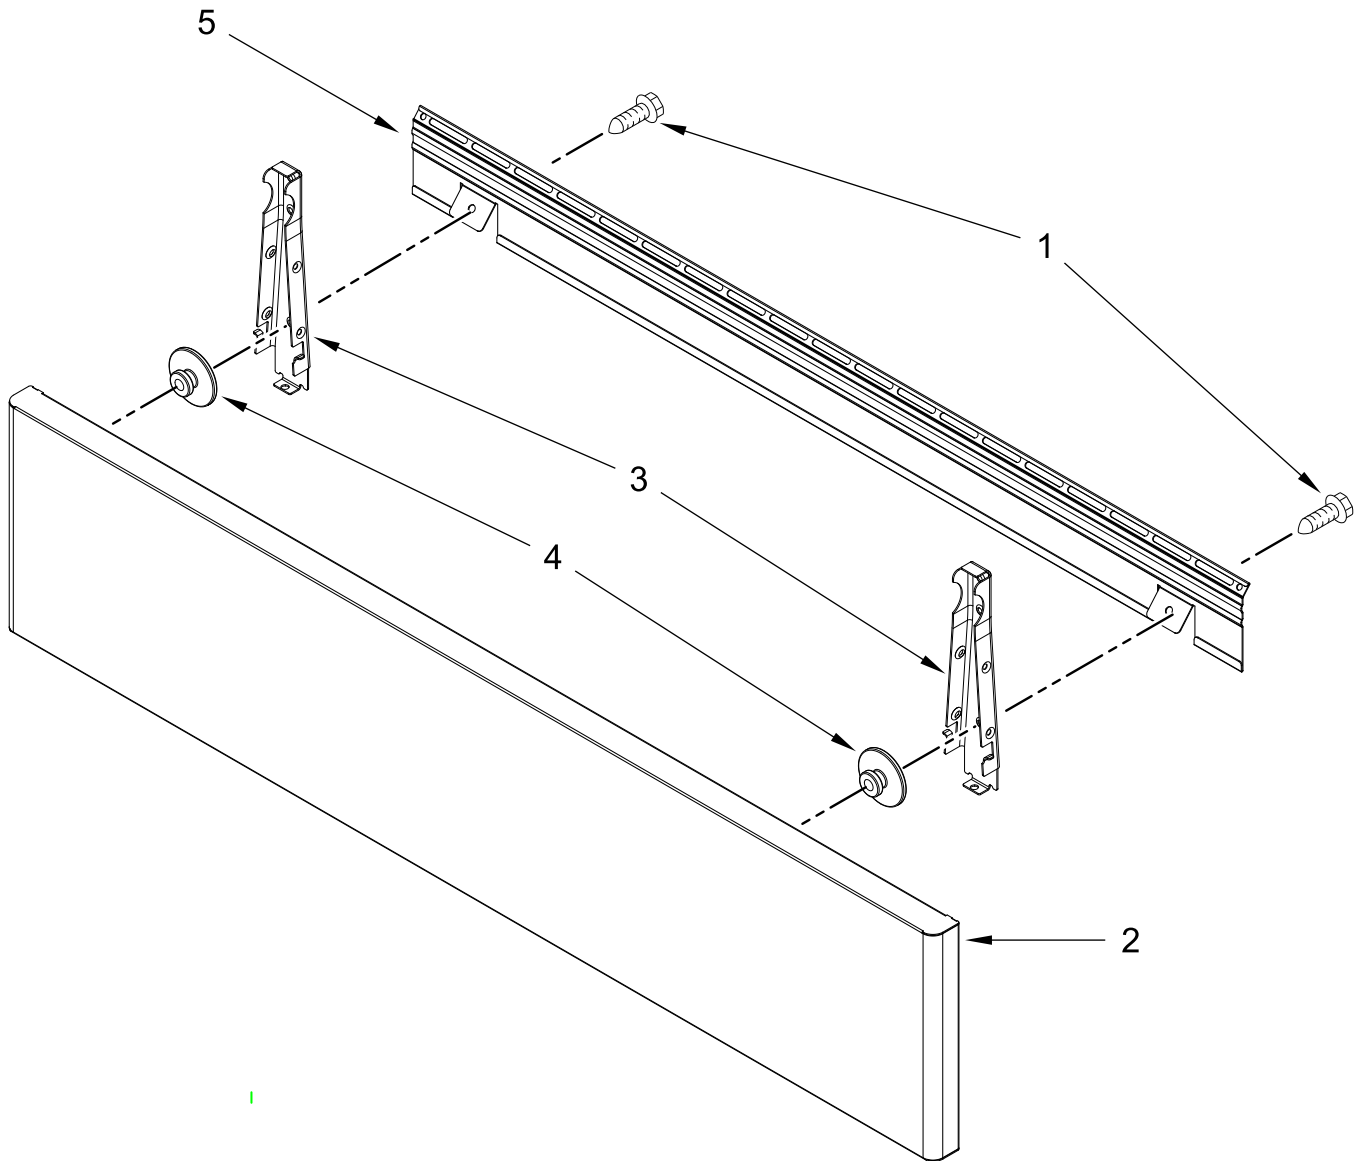

DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	3196169	Screw	3	W10318026	Bracket, Mounting
2		Panel, Drawer Front	4	8004P024-60	Spacer, Side Panel
	W10602484	Stainless	5	W11452957	Baffle, Drawer Panel

OPTIONAL PARTS (NOT INCLUDED)

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	72032	Black
	4392899	Biscuit and Bisque
	511873	White Porcelain (2 oz.)

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	285006	Black
	4392901	Biscuit and Bisque

PAINT, BULK (1 QT.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

REFINISHING MATERIAL

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

INSULATION

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	261514	Insulation (1-1/2 x 24 x 120 in)
	240132	Insulation (2-1/2 x 22 x 120 in)

ACCESSORY PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		CLEANERS AND POLISHES
	31605	Kit, Cooktop Care
	W10355051	Cleaner, Cooktop
	W10355016	Cleaner, Stainless Steel
	WA906B	Scraper, Cooktop
	W10432019	Alt Cleaning Kit
	W10391473	Pad, Cooktop Cleaning
		MISCELLANEOUS
	4396923	Broiler Pan and Grid
	W10123240	Rack, Broiler Pan and Roasting
	W10432539	Griddle
	W10432545	Kit, Grill
		TRIM KITS
	W10675026	Black
	W10675027	White
	W10675028	Stainless
		BACKSPLASH ASSEMBLY
	W10655449	Black
	W10655448	White
	W10655450	Stainless