




ELECTRIC RANGE

MODELS:

AER6603SFW6 (White)


COOKTOP PARTS

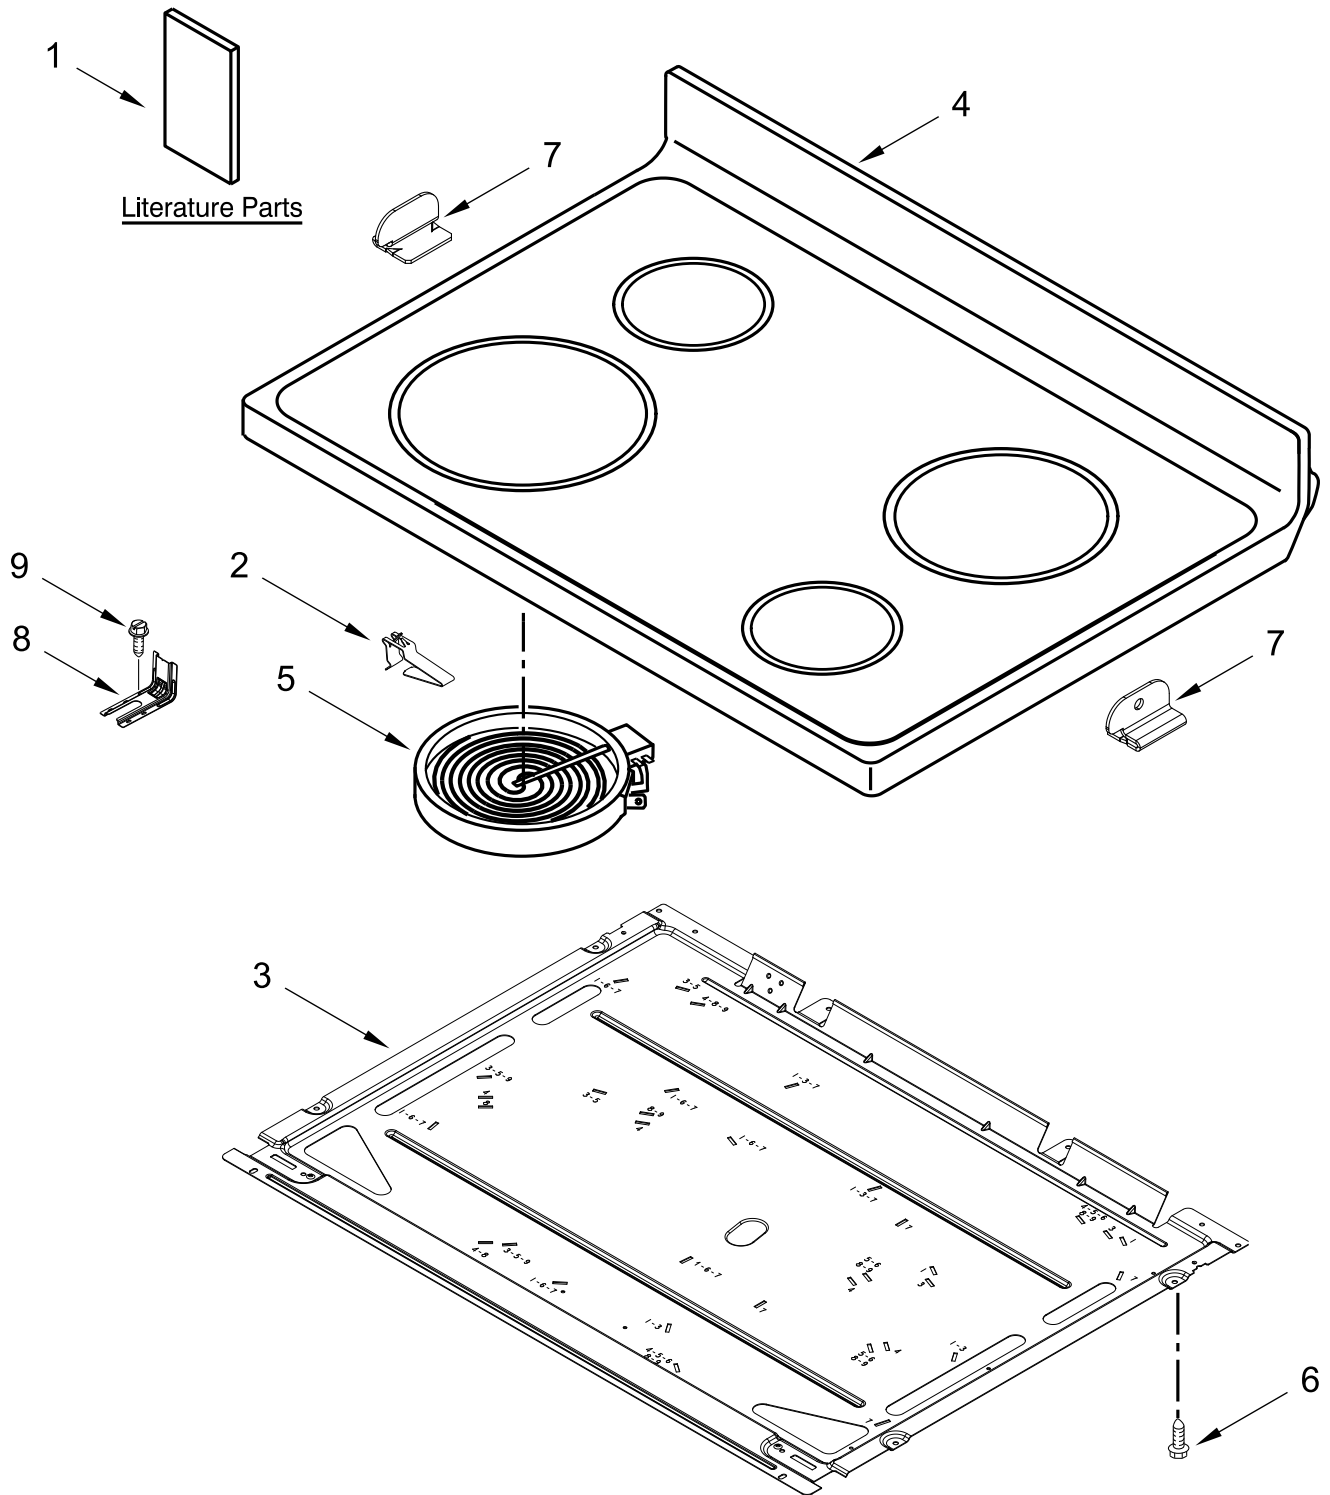

COOKTOP PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	5	W10275048	Element (3000 and 1400W)	8	W11379945	Bracket, Anti-Tip
	W11469631	Quick Start Guide			(Left Front)	9	7101P485-60	Screw, Anti-Tip Kit
	W11509598	User Instructions		W10248261	Element (1200W)			FOLLOWING PARTS NOT ILLUSTRATED
	W11393929	Sheet, Tech			(Left Rear and Right Front)		W11452623	Harness, Main
2	W11600012	Spring, Element		8273993	Element (1800W)		W11134603	Harness, Cooktop (Left)
3	W10691223	Pan, Radiant Element			(Right Rear)		W11134551	Harness, Cooktop (Right)
4		Cooktop	6	3196169	Screw			
	W10853443	White	7	W10607641	Bracket, Cooktop (Left)			
				W10607642	Bracket, Cooktop (Right)			


CONTROL PANEL PARTS

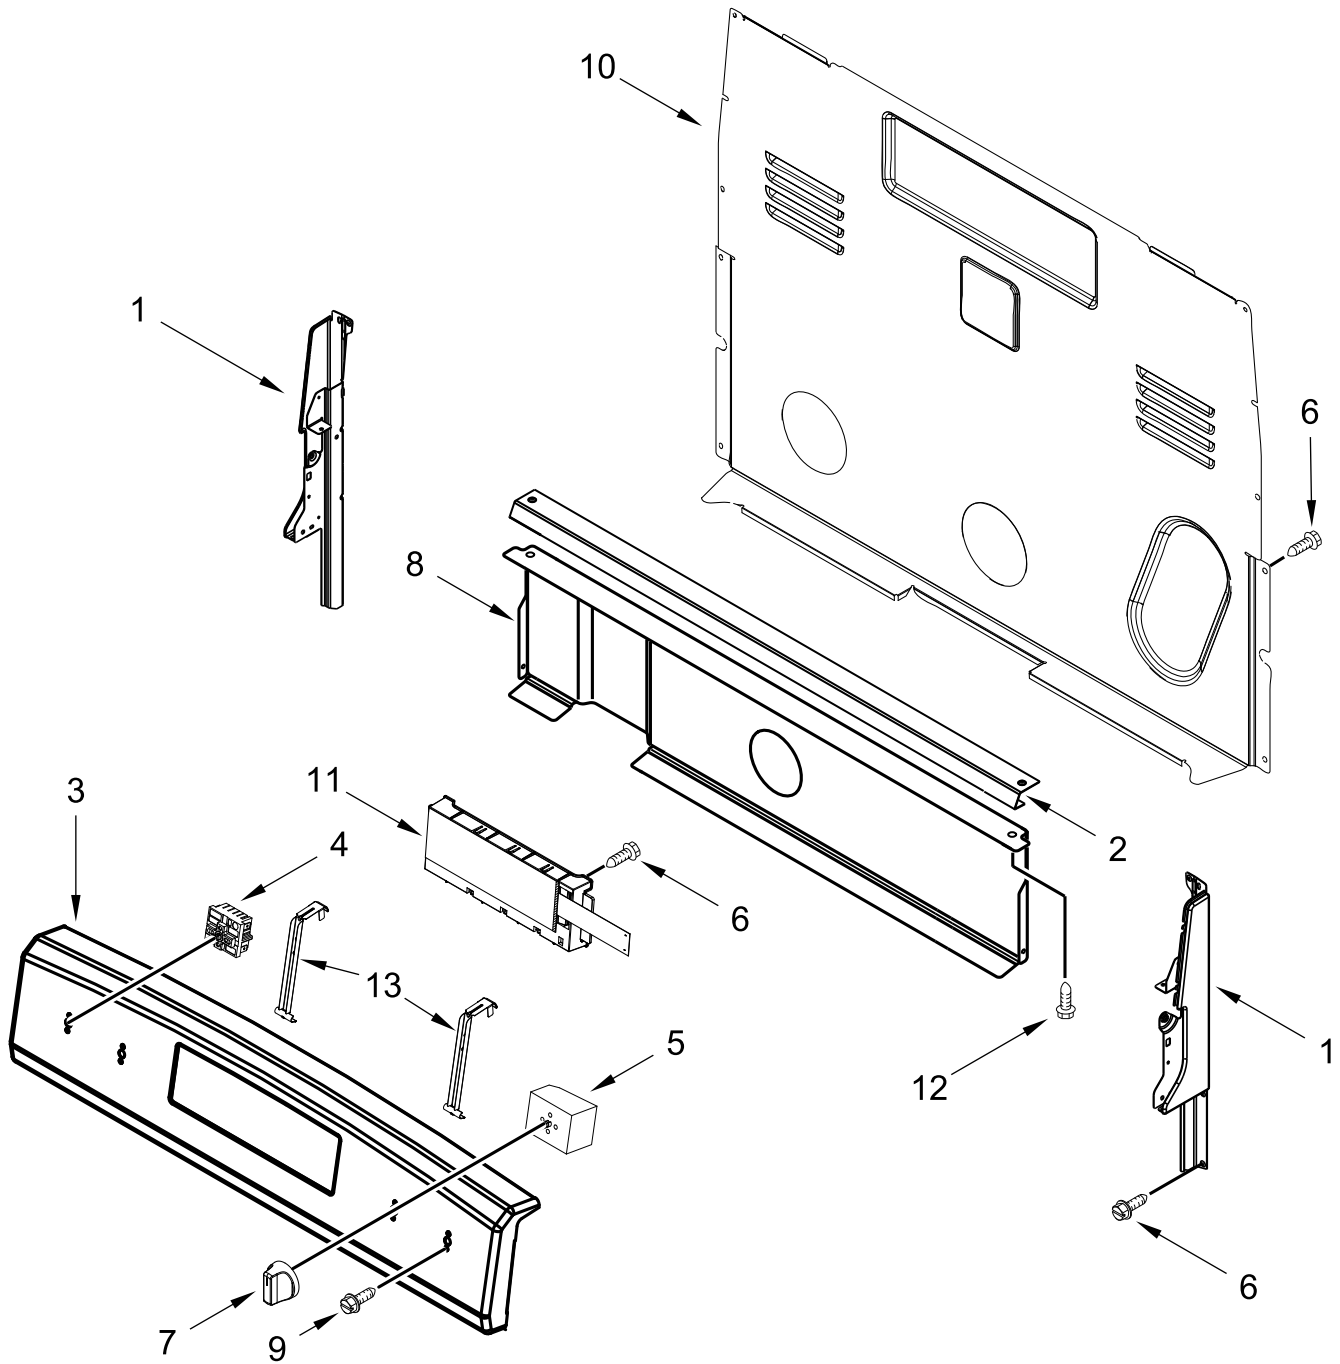

CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Endcap	5	3148951	Switch, Infinite	9	3400882	Screw
	W11130371	White (Left)			(Left Rear and Right Front)	10	8272473	Cover, Upper Rear
	W11130378	White (Right)				11		Control, Electronic (LCX)
2	W10525121	Bracket, Console Mounting		3148953	Switch, Infinite (Green)			
					(Right Rear)		W11515099	White
3		Panel, Console	6	3196178	Screw	12	3196165	Screw
	W11157019	White	7		Knobs	13	W10695491	Bracket, Control
4	W10434452	Switch, Infinite (Dual)		W10844800	White			
		(Left Front)	8	W10134247	Shield, Heat			


CHASSIS PARTS

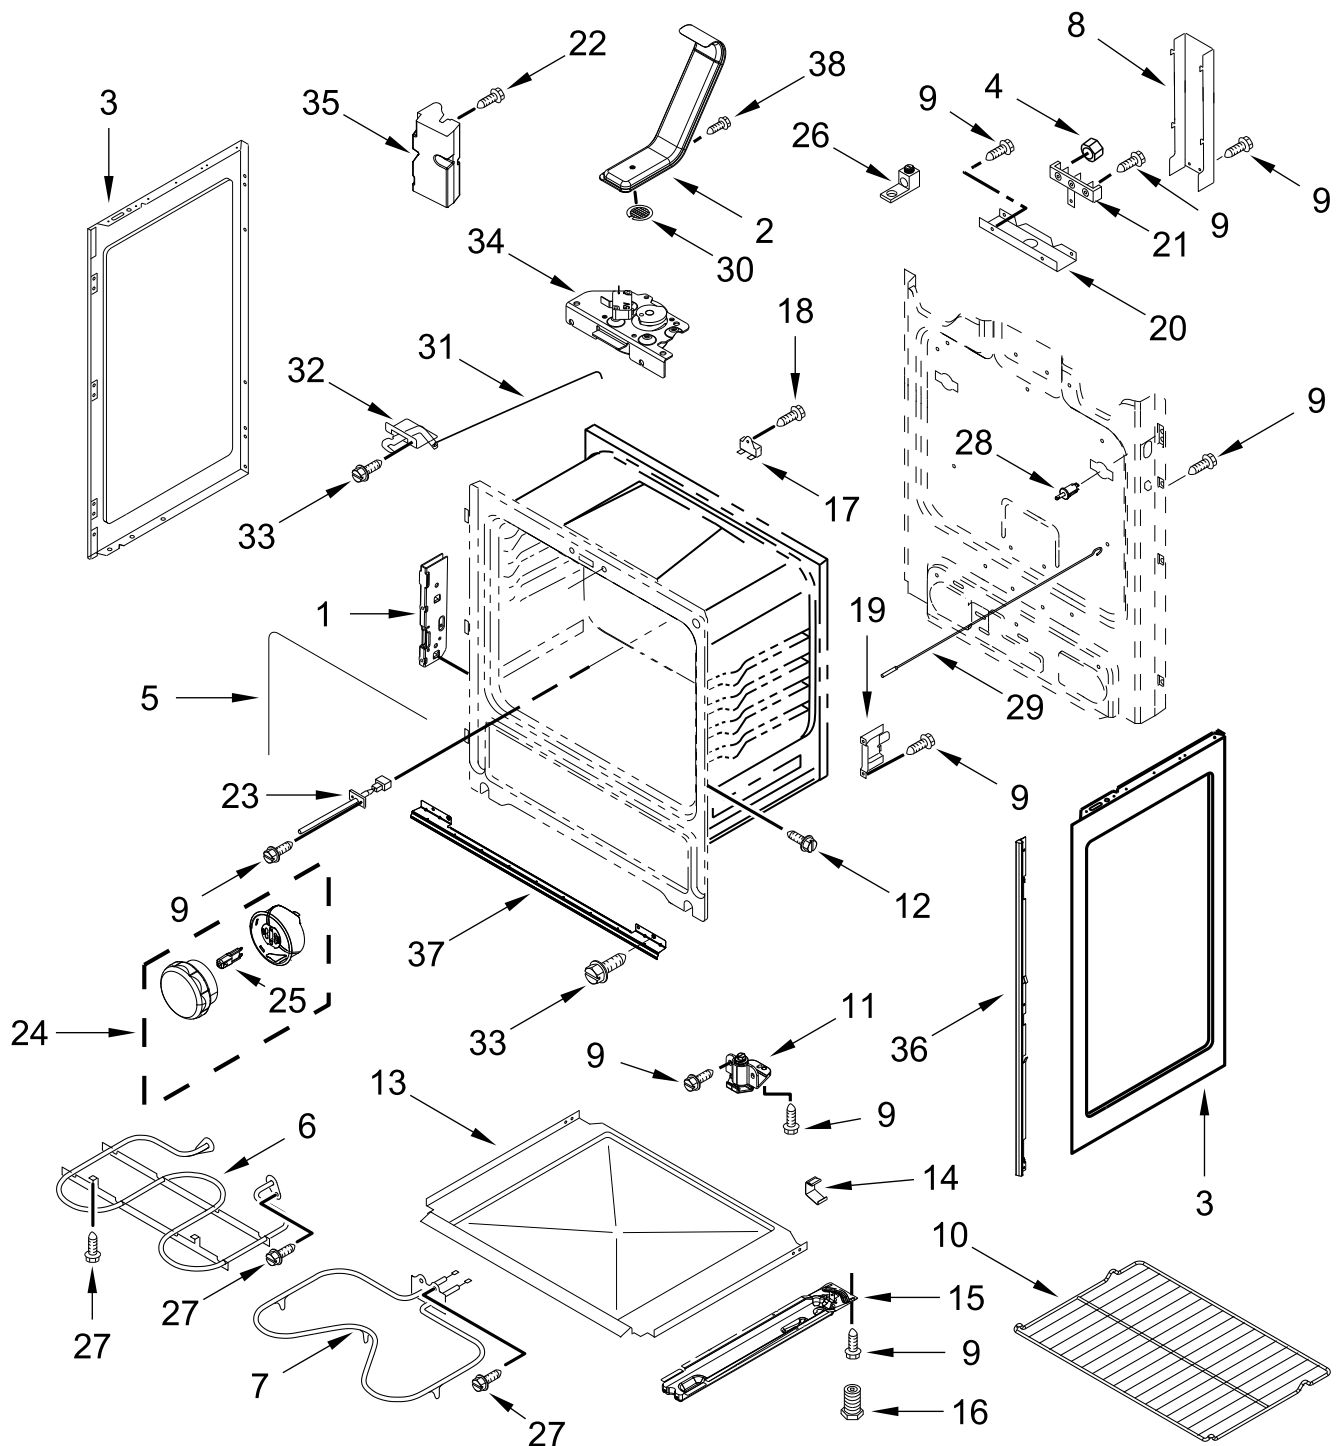

CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10289077	Receiver, Hinge	18	3196172	Screw	36	W11510560	Barrier Rail, Rubber (Left and Right)
2	W10134285	Tube, Vent	19	W10404688	Clip, Oven Support	37	W11464547	Bracket, Front Frame
3		Panel, Side	20	3186034	Bracket, Service	38	W10362924	Screw
	W10575396	White	21	W10245259	Block, Terminal			FOLLOWING PARTS NOT ILLUSTRATED
4	3400029	Nut	22	W11034869	Screw		W10333344	Insulation, Flue
5	W11491751	Seal, Door	23	W10181986	Sensor, Oven		W10774939	Insulation, Wrap
6	9757340	Element, Broil	24	W11634772	Light Assembly		W11127325	Insulation, Back
7	W11111743	Element, Bake	25	W10571723	Bulb, Halogen 40 Watts			
8	W10326122	Cover, Terminal Block	26	W10281322	Kit, Bare Wire Adapter Block			
9	3196169	Screw	27	3196154	Screw			
10	W11173792	Rack, Oven	28	W11511828	Switch, Door			
11	W10341186	Front Foot Assembly	29	9757239	Rod, Door Switch			
12	W10067840	Screw	30	W11092984	Screen, Vent			
13	8054068	Retainer, Insulation	31	W10078380	Rod, Latch			
14	W10137382	Clip, Panel	32	9761013	Front Door Latch Assembly			
15	W10390008	Base Rail Assembly (Left)	33	3196560	Screw			
	W10390007	Base Rail Assembly (Right)	34	W10107820	Rear Door Latch Assembly			
16	W10058460	Foot, Leveling	35	W10910404	Counterweight			
17	3196548	Fuse, Thermal						

DOOR PARTS

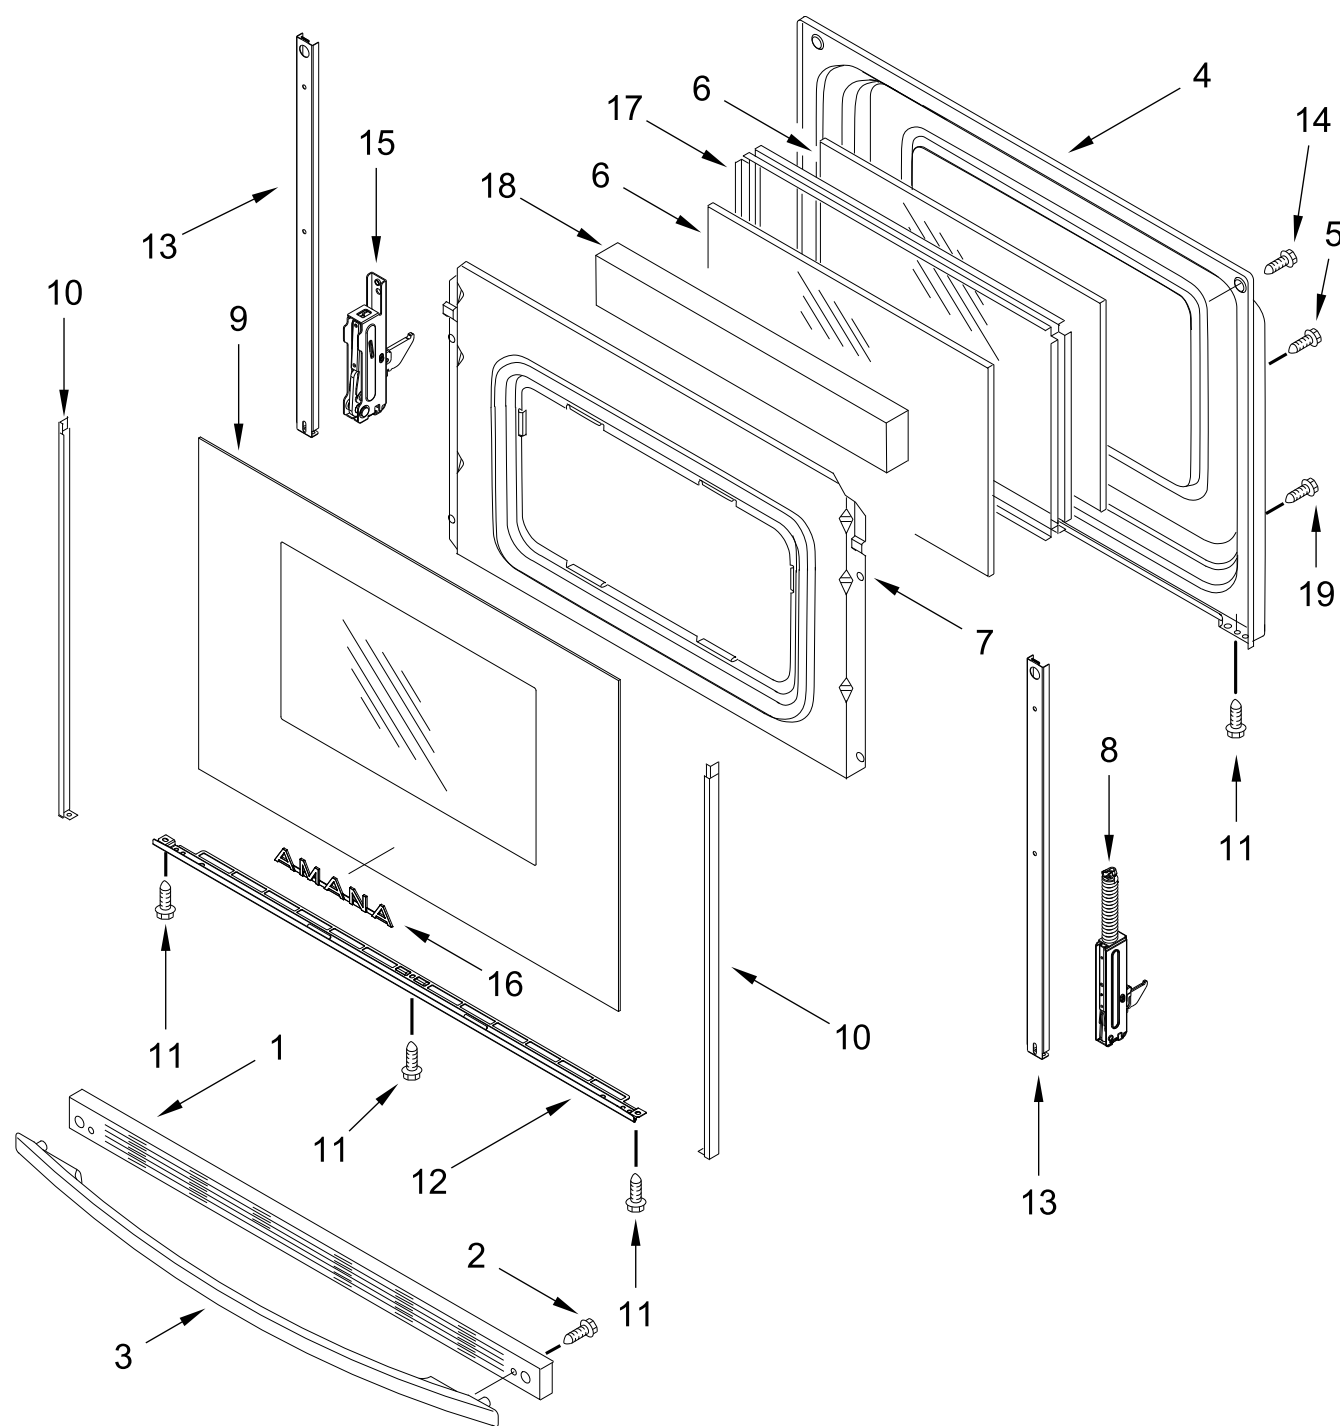


DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Trim, Top
	W10310920	White
2	W10168559	Screw
3		Handle, Door
	W10323588	White
4	9761344	Liner, Door
5	W10031790	Screw
6	9758162	Glass, Inner
7	W11380222	Retainer, Insulation

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
8	W10299226	Hinge, Active
9		Glass, Outer
	W10851723	White
10		Trim, Side
	8523172	White (Left)
	8523166	White (Right)
11	W10327235	Screw
12		Trim, Lower
	W11444042	White

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
13	W11379944	Strap, Door
14	W10200660	Screw
15	W10299227	Hinge, Door (Passive)
16		Badge
	W10849465	White
17	W10316950	Frame, Glass
18	W10278991	Insulation, Door Strip
19	W10031780	Screw

DRAWER PARTS

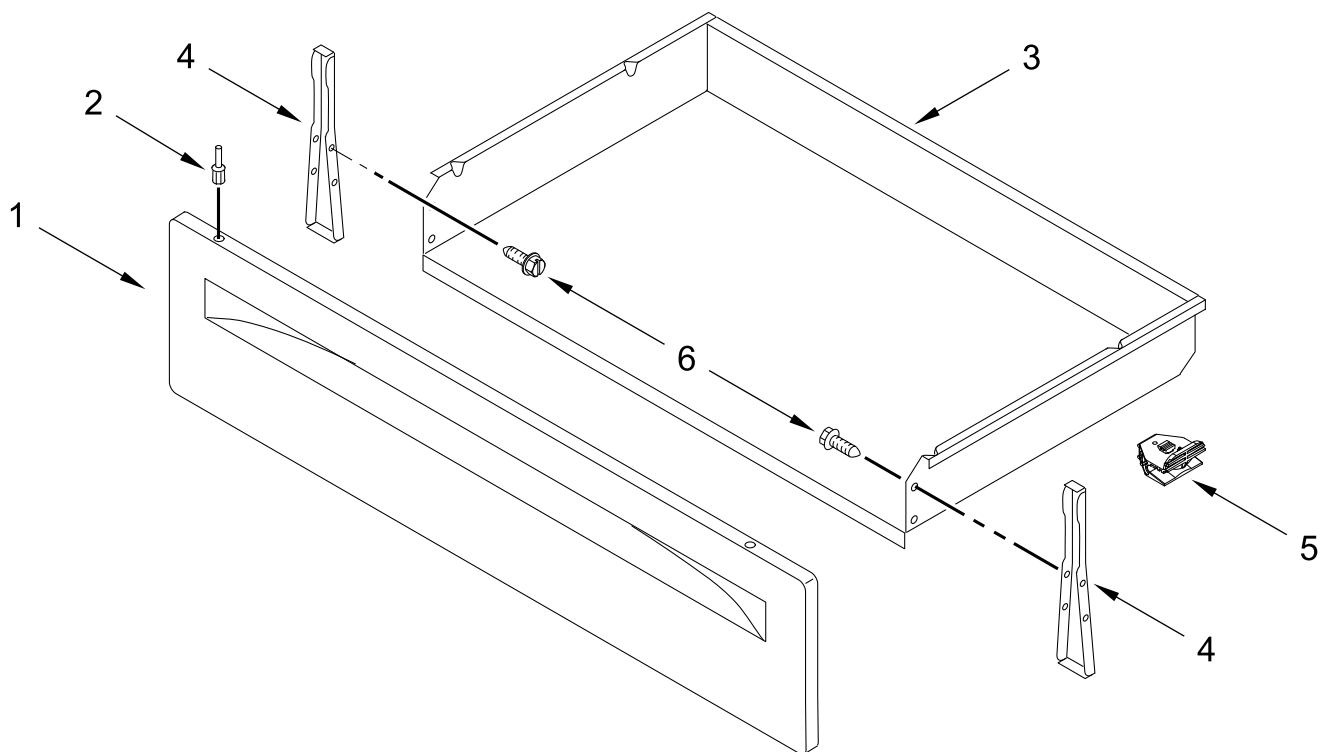

DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Panel, Drawer Front	3	W10688022	Drawer, Storage	5	W10674708	Glide, Drawer Rear
	W11123901	White	4	W10462912	Bracket, Mounting Drawer		W10674705	Glide, Drawer Front
2	3196814	Rivet, Plastic (WHITE)				6	3196169	Screw

OPTIONAL PARTS (NOT INCLUDED)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		REFINISHING MATERIAL
	242756	Oven Liner Touch Up Paint
		INSULATION
	261514	Insulation (1-1/2 x 24 x 120 in)
	240132	Insulation (2-1/2 x 22 x 120 in)
		PAINT, TOUCH-UP (1/2oz.)
	72017	White
	72032	Black
	8212473	Universal Silver
	511873	White Porcelain (2 oz.)
		PAINT, PRESSURIZED SPRAY (12 oz.)
	350930	White
	285006	Black
	206922	Primer (White)
		PAINT, BULK (1 qt.)
	799344	White (Uncut)
		ACCESSORY PARTS
	4396923	Broiler Pan and Grid
	W10355051	Cleaner, Cooktop
	W11042470	Cooktop Cleaning Kit
	4396096RB	Griddle
	PT220	Cord, 4 Inch 40 AMP 3 Wire Range
	PT400	Cord, 4 Inch 40 AMP 4 Wire Range