




ELECTRIC RANGE

MODELS:

ACR4503SFB8 (Black)
ACR4503SFW8 (White)


COOKTOP PARTS

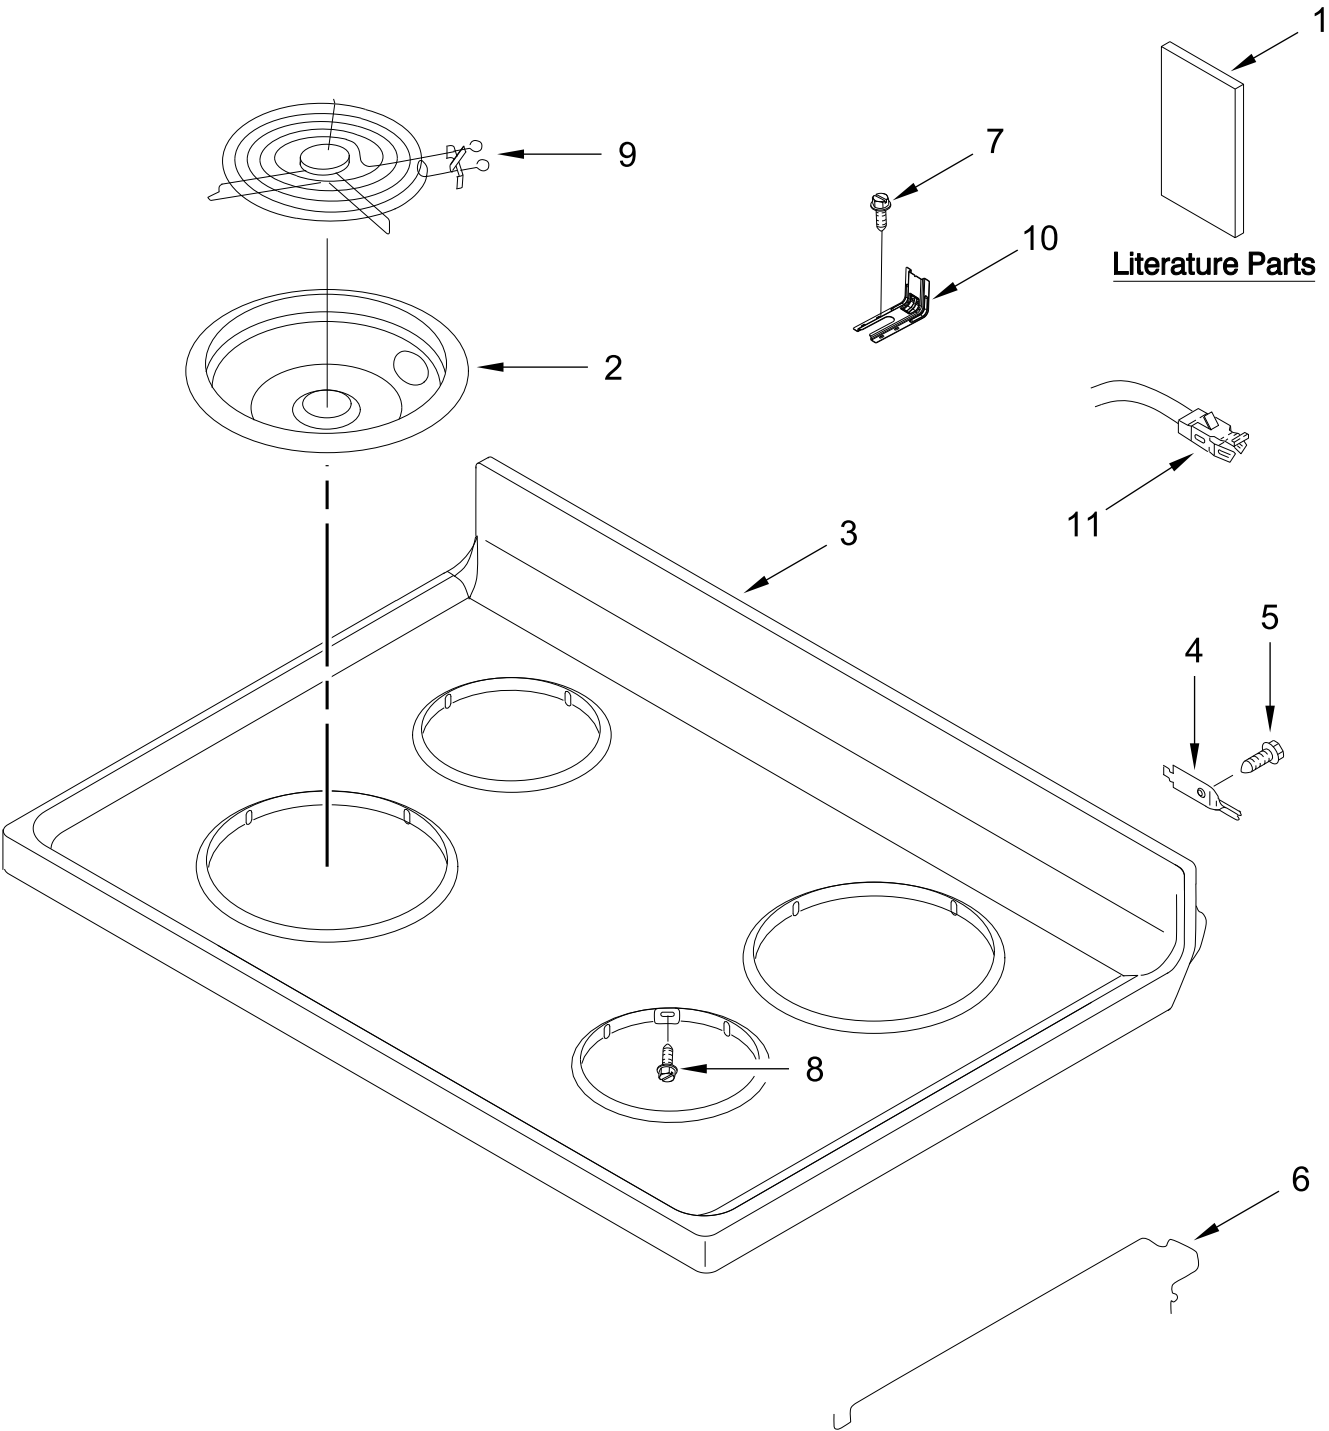

COOKTOP PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	5	3196178	Screw	11	814399	Receptacle, Element
	W11509598	User Instructions	6	3195812	Rod, Support			FOLLOWING PARTS NOT ILLUSTRATED
	W11481066	Quick Start Guide	7	7101P485-60	Screw, Anti-Tip Kit			
	W11401730	Tech Sheet	8	3196154	Screw	W11452636		Harness, Wire (Main)
2	W10196406	Bowl, Drip (6 in)	9	W11364019	Element, Coil Heating (2400W)	W11134595		Harness, Cooktop
		(Right Front and Left Rear)			(Left Front and Right Rear)	4449154		Screw (Used for Cooktop Harness)
	W10196405	Bowl, Drip (8 in)		W11364018	Element, Coil Heating (1500W)	W10281322		Kit, Bare Wire Adapter Block
		(Left Front and Right Rear)			(Right Front and Left Rear)			
3		Cooktop	10	W11379945	Bracket, Anti-Tip			
	3186233	Black						
	3186231	White						
4	3195060	Hinge, Cooktop						


CONTROL PANEL PARTS

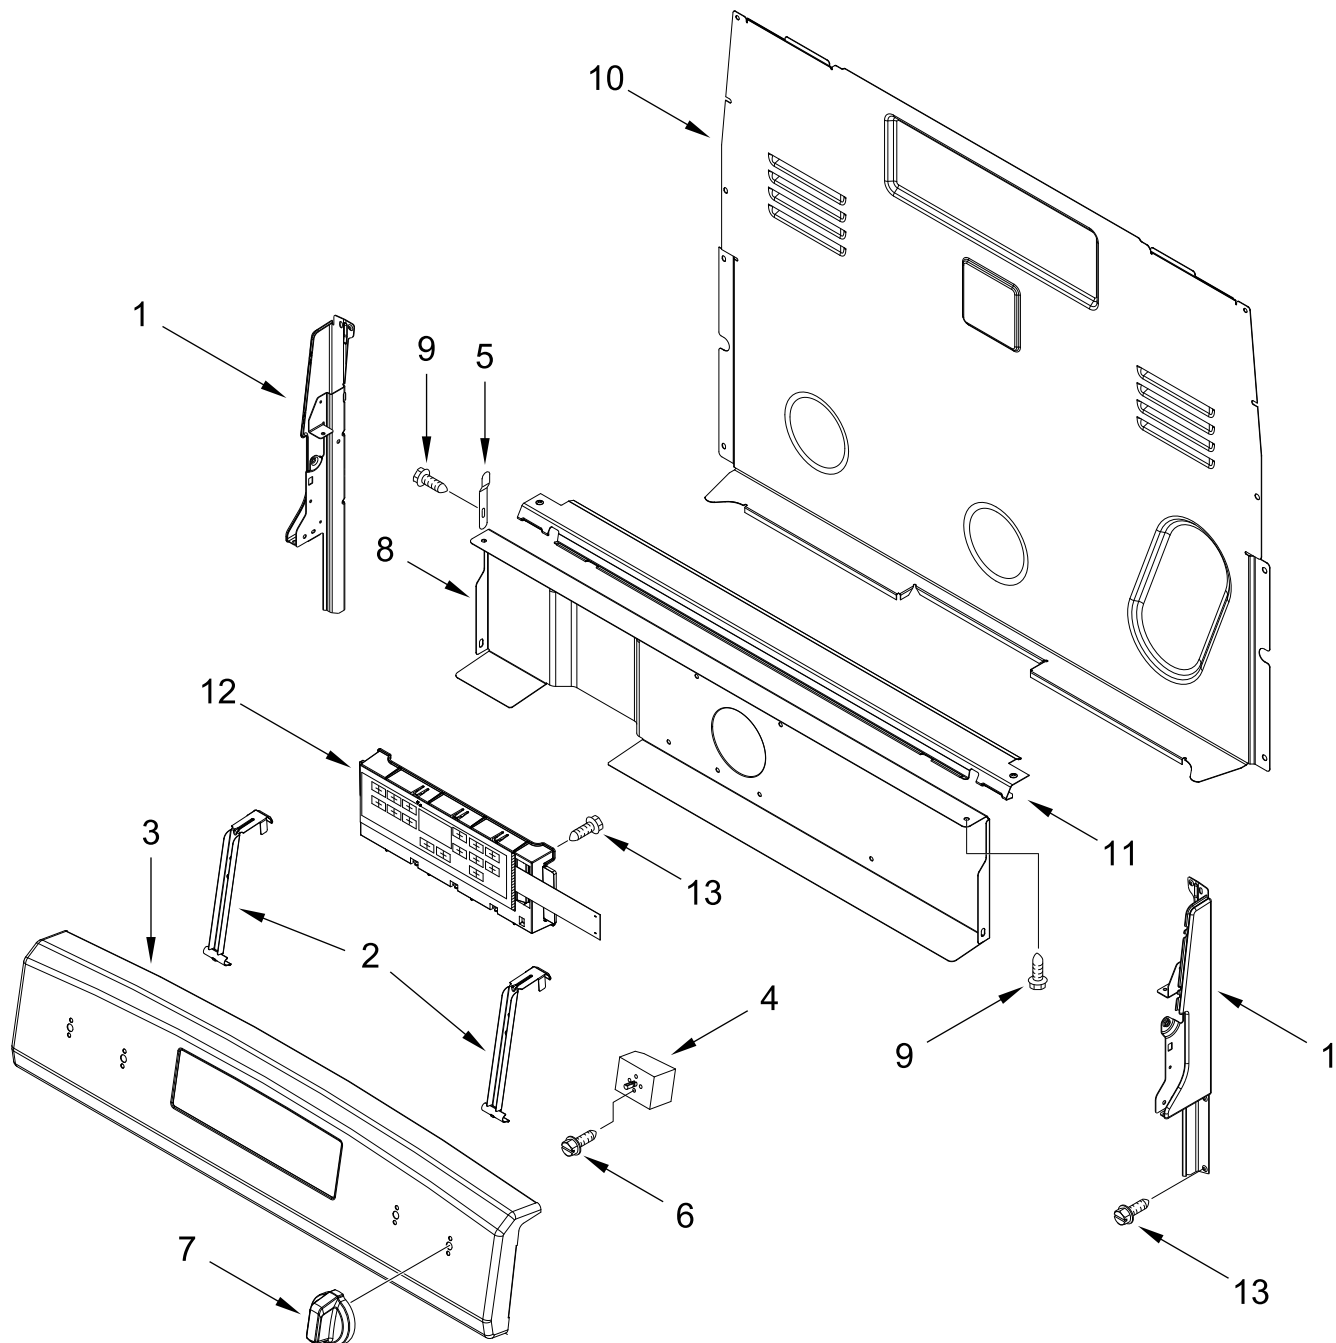

CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Endcap	4	3148952	Switch, Infinite (Yellow)	8	W10134247	Shield, Heat
	W11130372	Black (Left)			(Right Front and Left Rear)	9	3196165	Screw
	W11130379	Black (Right)				10	8272473	Cover, Upper Rear
	W11130371	White (Left)				11	W10525121	Bracket, Console Mounting
	W11130378	White (Right)		3148954	Switch, Infinite (Orange)	12		Control, Electronic (LCX)
2	W10695491	Bracket, Control			(Left Front and Right Rear)		W11515098	Black
3		Panel, Control					W11515099	White
	W11157013	Black	5	3196200	Clip, Spring	13	3196178	Screw
	W11157012	White	6	3400882	Screw			
			7		Knob, Infinite			
				W10844801	Black			
				W10844800	White			


CHASSIS PARTS

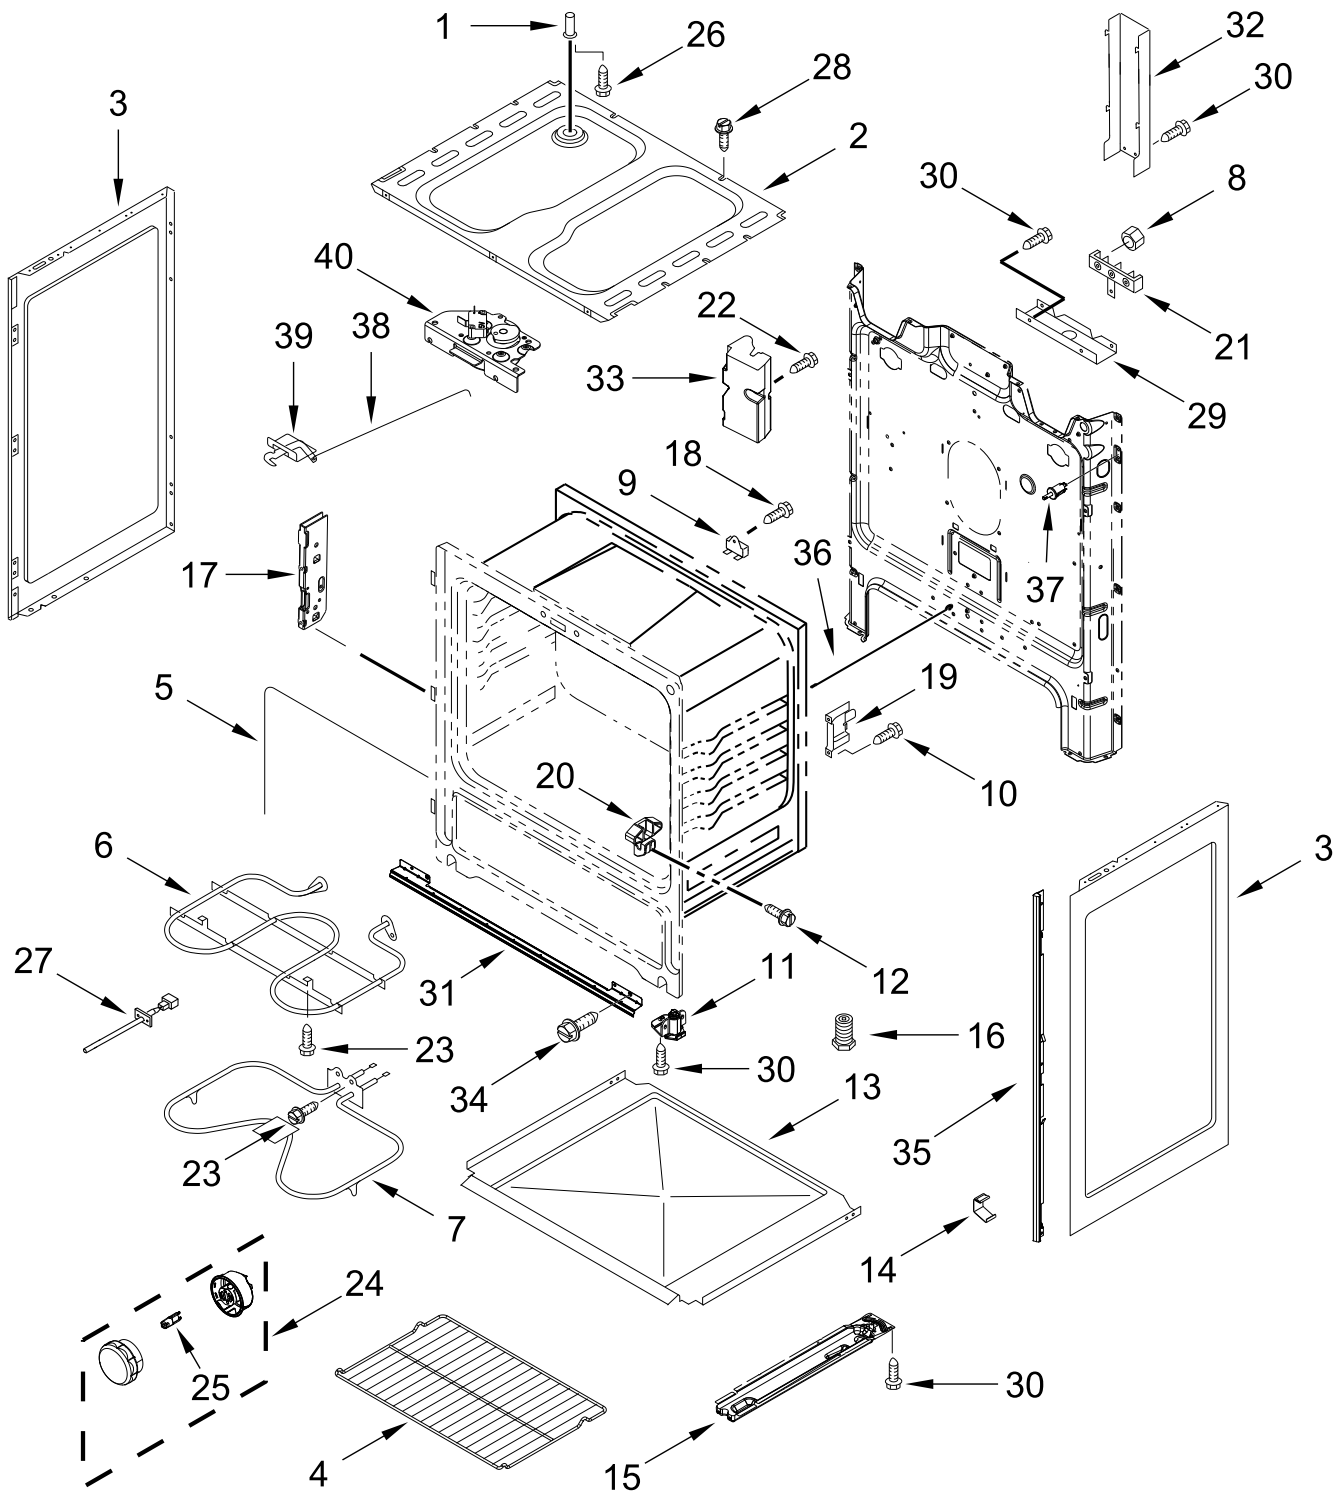

CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11222268	Vent Tube	16	W10058460	Foot, Leveling	34	3196560	Screw
2	W11380208	Box, Burner	17	W10289077	Receiver, Hinge	35	W11510560	Barrier Rail, Rubber (Left and Right)
3		Panel, Side	18	3196172	Screw	36	9757239	Rod, Door Switch
	W10162245	Black	19	W10404688	Clip, Oven Support	37	W11511828	Switch, Door
	W10575396	White	20	W10674705	Glide, Drawer Front	38	W10078380	Rod, Latch
4	W11173792	Rack, Oven	21	W10245259	Block, Terminal	39	9761013	Front Door Latch Assembly
5	W11491751	Seal, Door	22	W11034869	Screw	40	W10107820	Rear Door Latch Assembly
6	W10308476	Element, Broil	23	3196174	Screw			FOLLOWING PARTS NOT ILLUSTRATED
7	W11022836	Element, Bake	24	W11634772	Light Assembly			
8	3400029	Nut	25	W10571723	Bulb, Halogen 40 Watts			
9	3196548	Fuse, Thermal	26	3196567	Screw		W10774939	Insulation, Wrap
10	3196169	Screw	27	W10181986	Sensor, Oven		W11127325	Insulation, Back
11	W10341186	Front Foot Assembly	28	3196165	Screw			
12	W10067840	Screw	29	3186034	Bracket, Service			
13	8054068	Retainer, Insulation	30	3196178	Screw			
14	W10137382	Clip, Panel	31	W11464547	Bracket, Front Frame			
15	W10390008	Base Rail Assembly (Left)	32	W10326122	Cover, Terminal Block			
	W10390007	Base Rail Assembly (Right)	33	W10910404	Counterweight			

DOOR PARTS

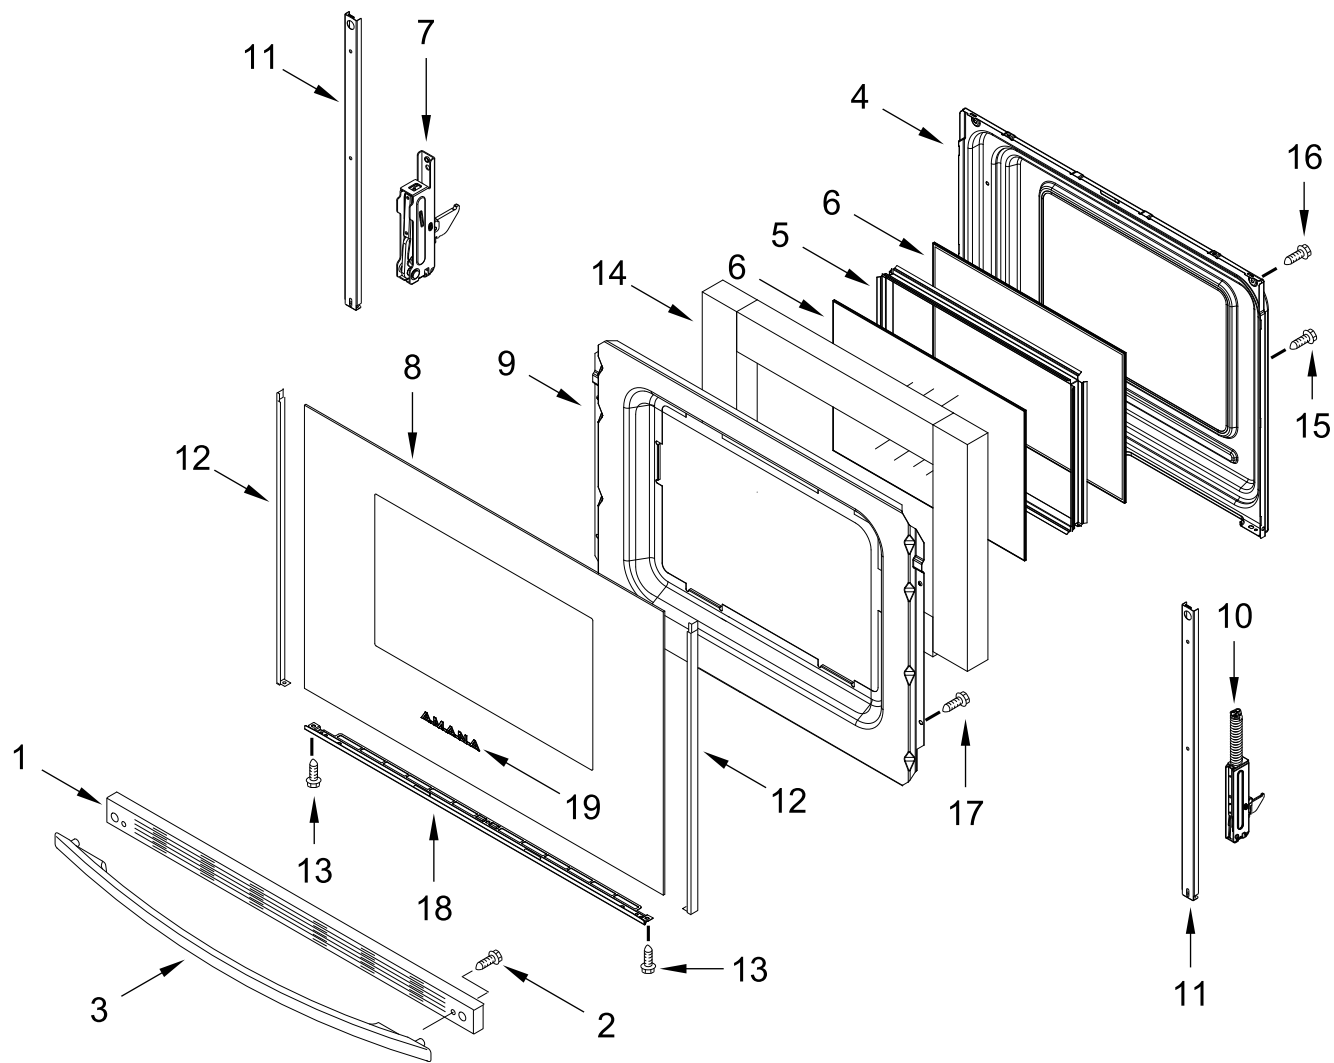


DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Trim, Top
	W10310922	Black
	W10310920	White
2	W10168559	Screw
3		Handle, Door
	W10323589	Black
	W10323588	White
4	9761344	Liner, Door
5	W10316950	Frame, Glass
6	9758162	Glass, Inner
7	W10299227	Hinge, Door (Passive)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
8		Glass Assembly, Outer Door
	W10831686	Black
	W10851723	White
9	W11380222	Retainer, Insulation
10	W10299226	Hinge, Active
11	W11379944	Strap, Door
12		Trim, Side
	W10746436	Black (Left)
	W10746435	Black (Right)
	8523172	White (Left)
	8523166	White (Right)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
13	W10327235	Screw
14	W10278991	Insulation, Door Strip
15	W10031790	Screw
16	W10200660	Screw
17	W10031780	Screw
18		Trim, Lower Door
	W11444043	Black
	W11444042	White
19		Badge
	W10846751	Black
	W10849465	White

DRAWER PARTS

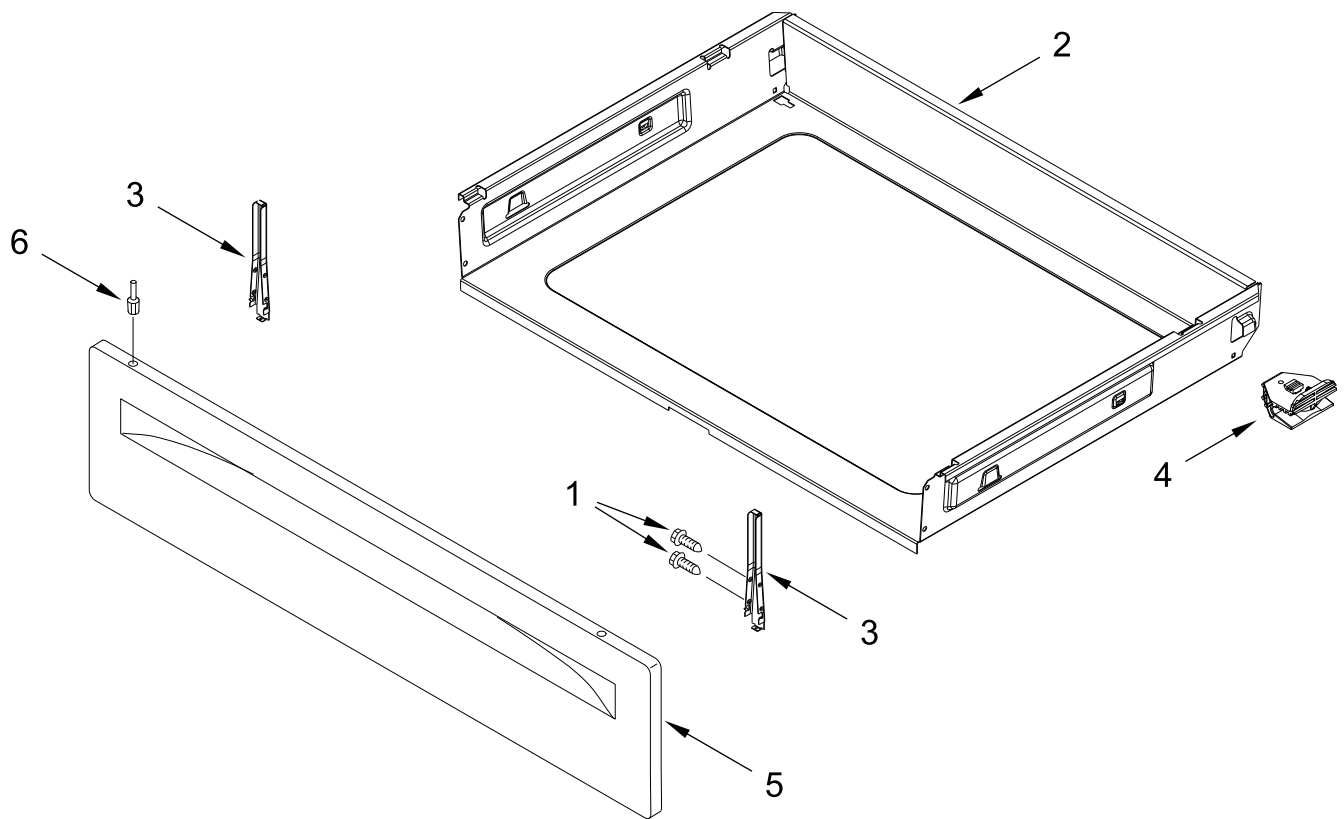

DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	3196169	Screw	5		Panel, Front	6		Rivet, Push
2	W10688022	Drawer, Storage		W11123900	Black		3196813	Black
3	W10462912	Bracket, Mounting Drawer		W11123901	White		3196814	White
4	W10674708	Glide, Drawer Rear						

OPTIONAL PARTS (NOT INCLUDED)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		FOLLOWING PARTS NOT ILLUSTRATED
		REFINISHING MATERIAL
	242756	Oven Liner Touch Up Paint
		INSULATION
	261514	Insulation (1-1/2 x 24 x 120 in)
	240132	Insulation (2-1/2 x 22 x 120 in)
		PAINT, TOUCH-UP (1/2oz.)
	72017	White
	511873	White Porcelain (2 oz.)
		PAINT, PRESSURIZED SPRAY (12 oz.)
	350930	White
	206922	Primer (White)
		PAINT, BULK (1 qt.)
	799344	White (Uncut)
		ACCESSORIES NOT INCLUDED OR ILLUSTRATED
	4396923	Broiler Pan and Grid
	PT220	Cord, 4 Inch 40 AMP 3 Wire Range
	PT400	Cord, 4 Inch 40 AMP 4 Wire Range
	4396096RB	Griddle