




ELECTRIC RANGE

MODELS:

MFES6030RZ0 (Stainless)


COOKTOP PARTS

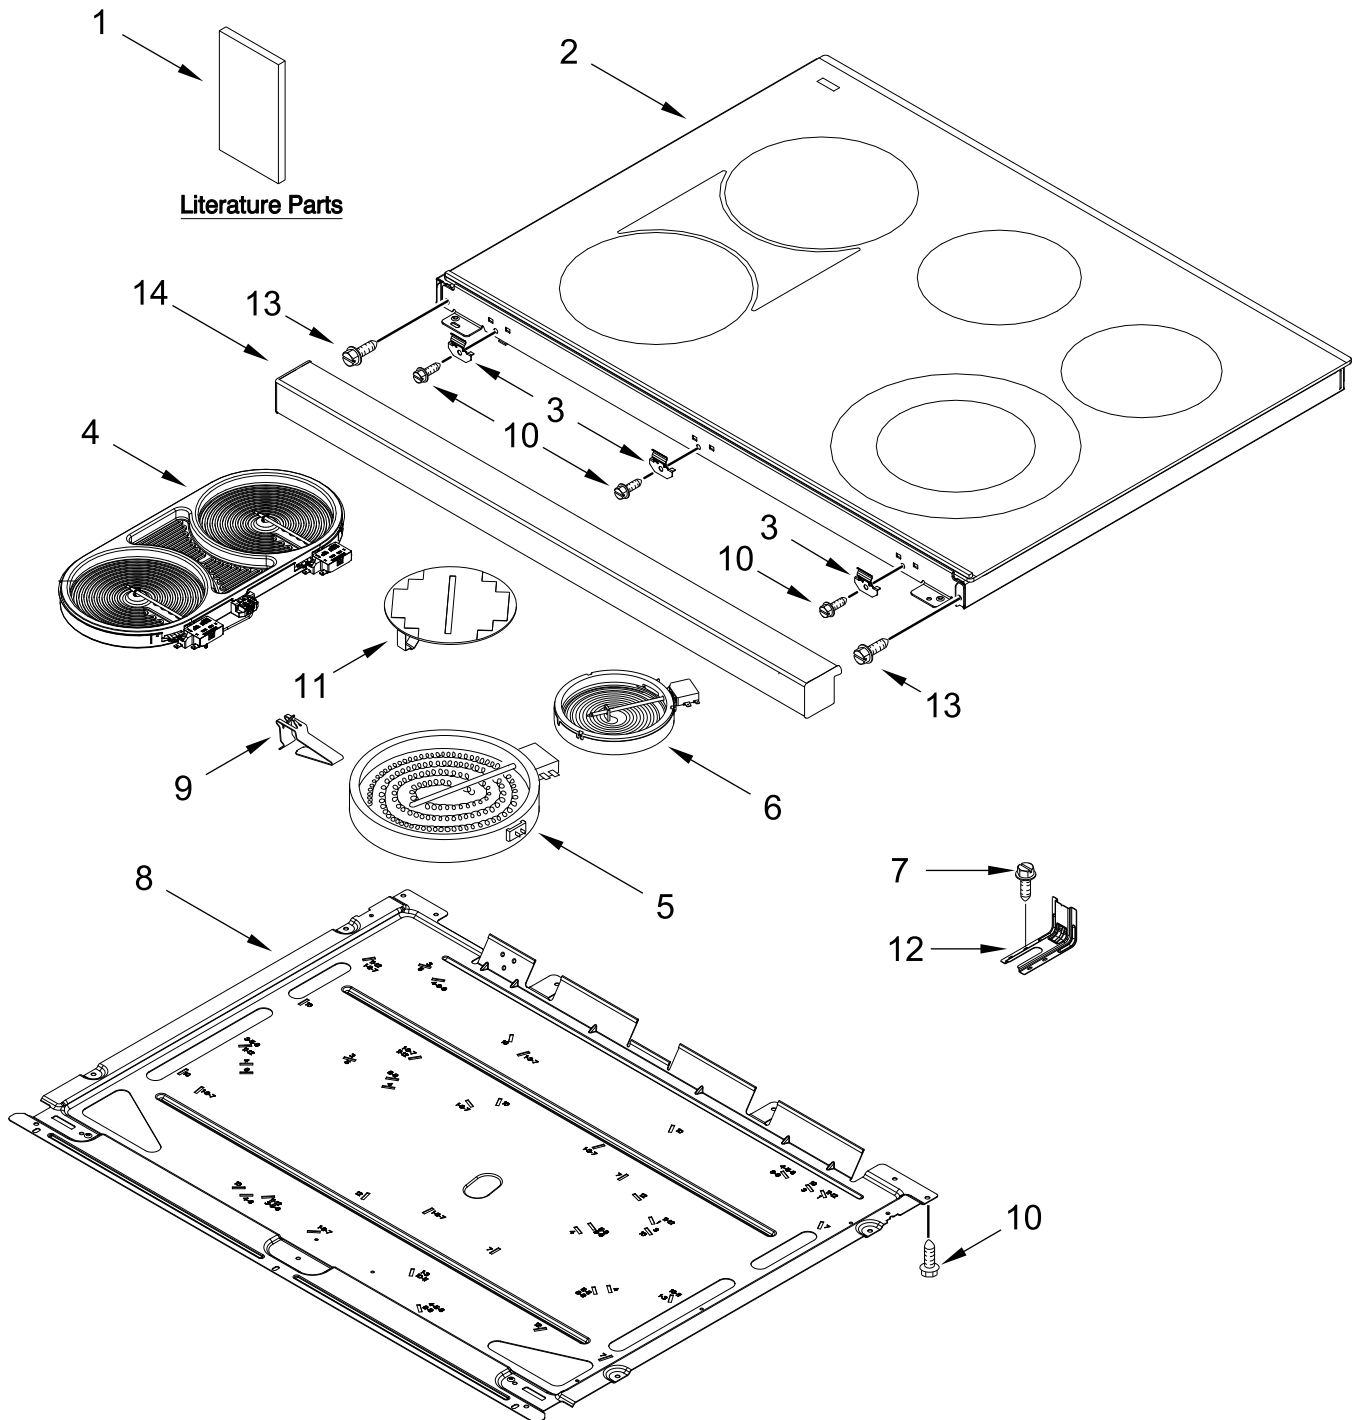

COOKTOP PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	6	8273994	Element (1200W) (Right Rear)	14		Bullnose
	W11640146	Owner's Manual					W11624928	Stainless
	W11638796	Quick Start Guide	7	7101P485-60	Screw, Anti-Tip Kit			FOLLOWING PARTS NOT ILLUSTRATED
	W11639166	Tech Sheet	8	W11640572	Pan, Radiant Element		W11696452	Harness, Main
2		Cooktop	9	W11600012	Spring, Element		W11706939	Harness, Cooktop
	W11633168	Black	10	3196169	Screw		3196896	Clip, Wire
3	W11593284	Bracket, Cooktop	11	W11668631	Element, Warm Zone (Center Rear)		W10298887	Cable Tie
4	W10248259	Element, Bridge (Left Front and Left Rear)	12	W11379945	Bracket, Anti-Tip		W11172528	Harness, Hidden Bake
5	W11282542	Element (3000W Dual) (Right Front)	13	3400080	Screw		W10281322	Kit, Bare Wire Adapter Block


CONTROL PANEL PARTS

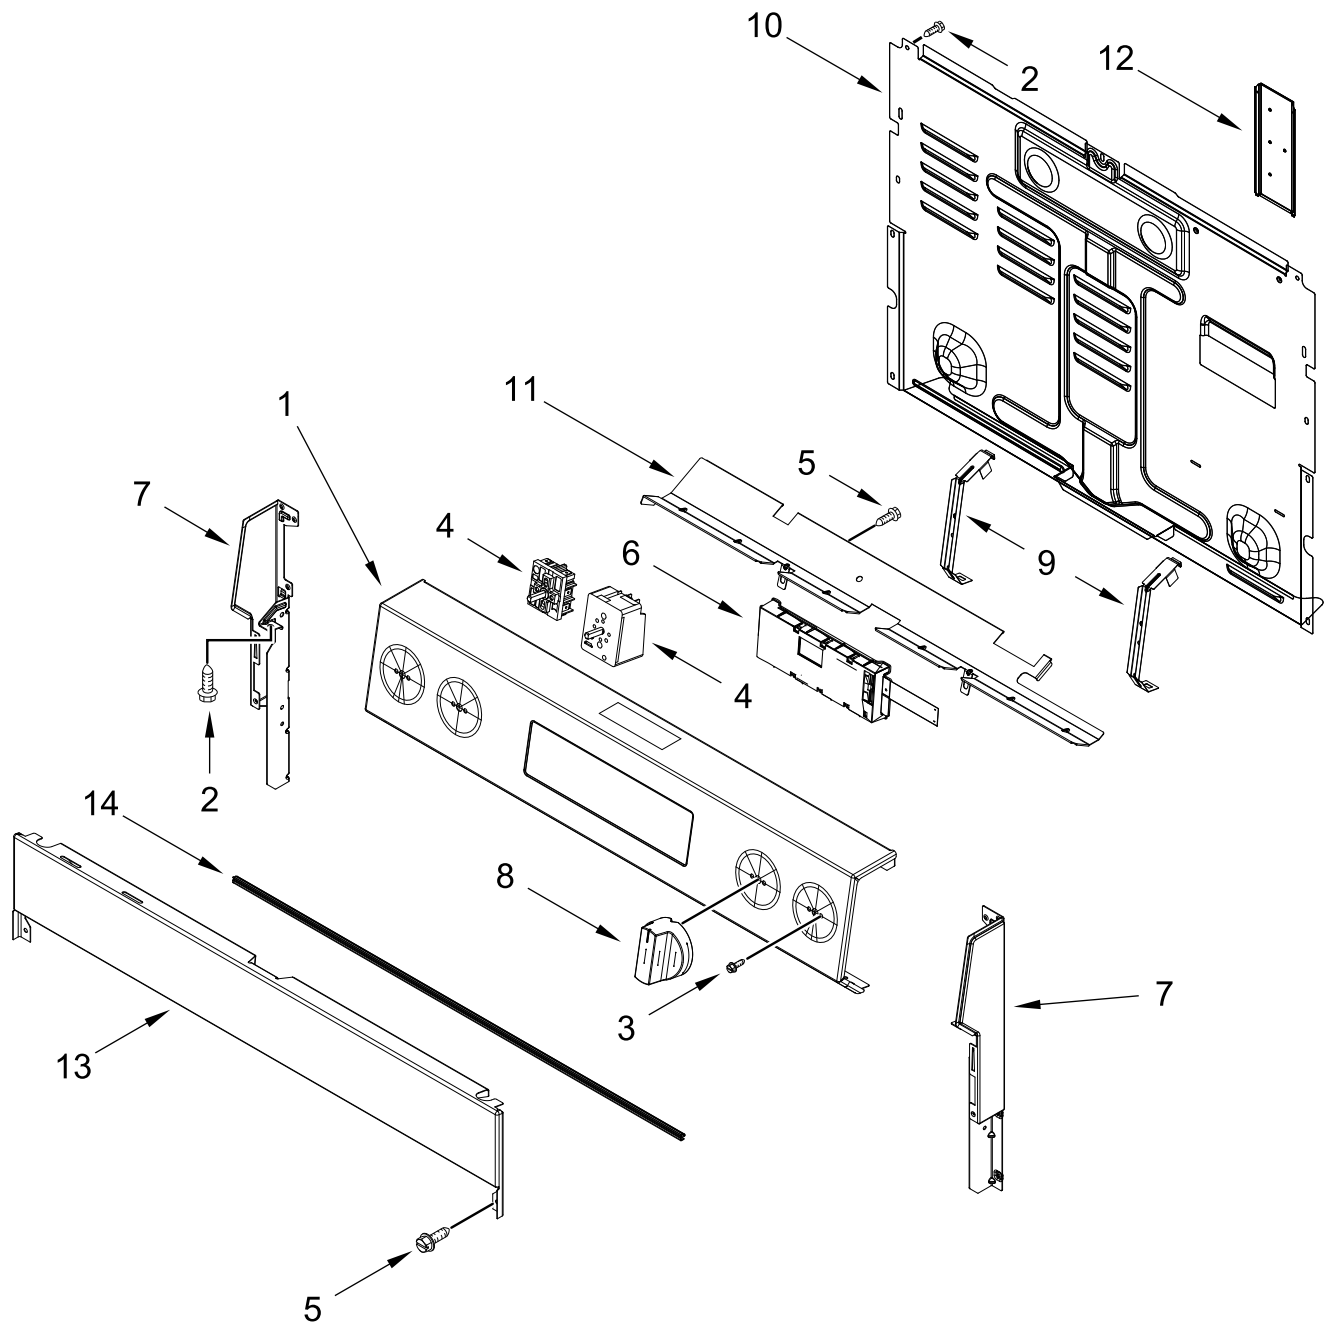

CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Console	6		Board, Control	13		Panel, Lower
	W11730176	Stainless		W11637094	Black		W11625404	Stainless
2	3196178	Screw	7		Endpost, Console	14	W11643797	Gasket, Lower Panel
3	3400882	Screw		W11625424	Stainless (Left)			
4	W10437092	Switch, Infinite (Left Front and Right Front)		W11625421	Stainless (Right)			
			8		Knob			
	W10843843	Switch, Infinite (Left Rear)		W11584001	Stainless			
			9	W11371599	Bracket, Control			
	W10578768	Switch, Infinite (Right Rear)	10	W11393668	Cover, Upper Rear			
5	3196169	Screw	11	W11363806	Shield, Heat			
			12	W11394231	Cover, Rear Flue			


CHASSIS PARTS

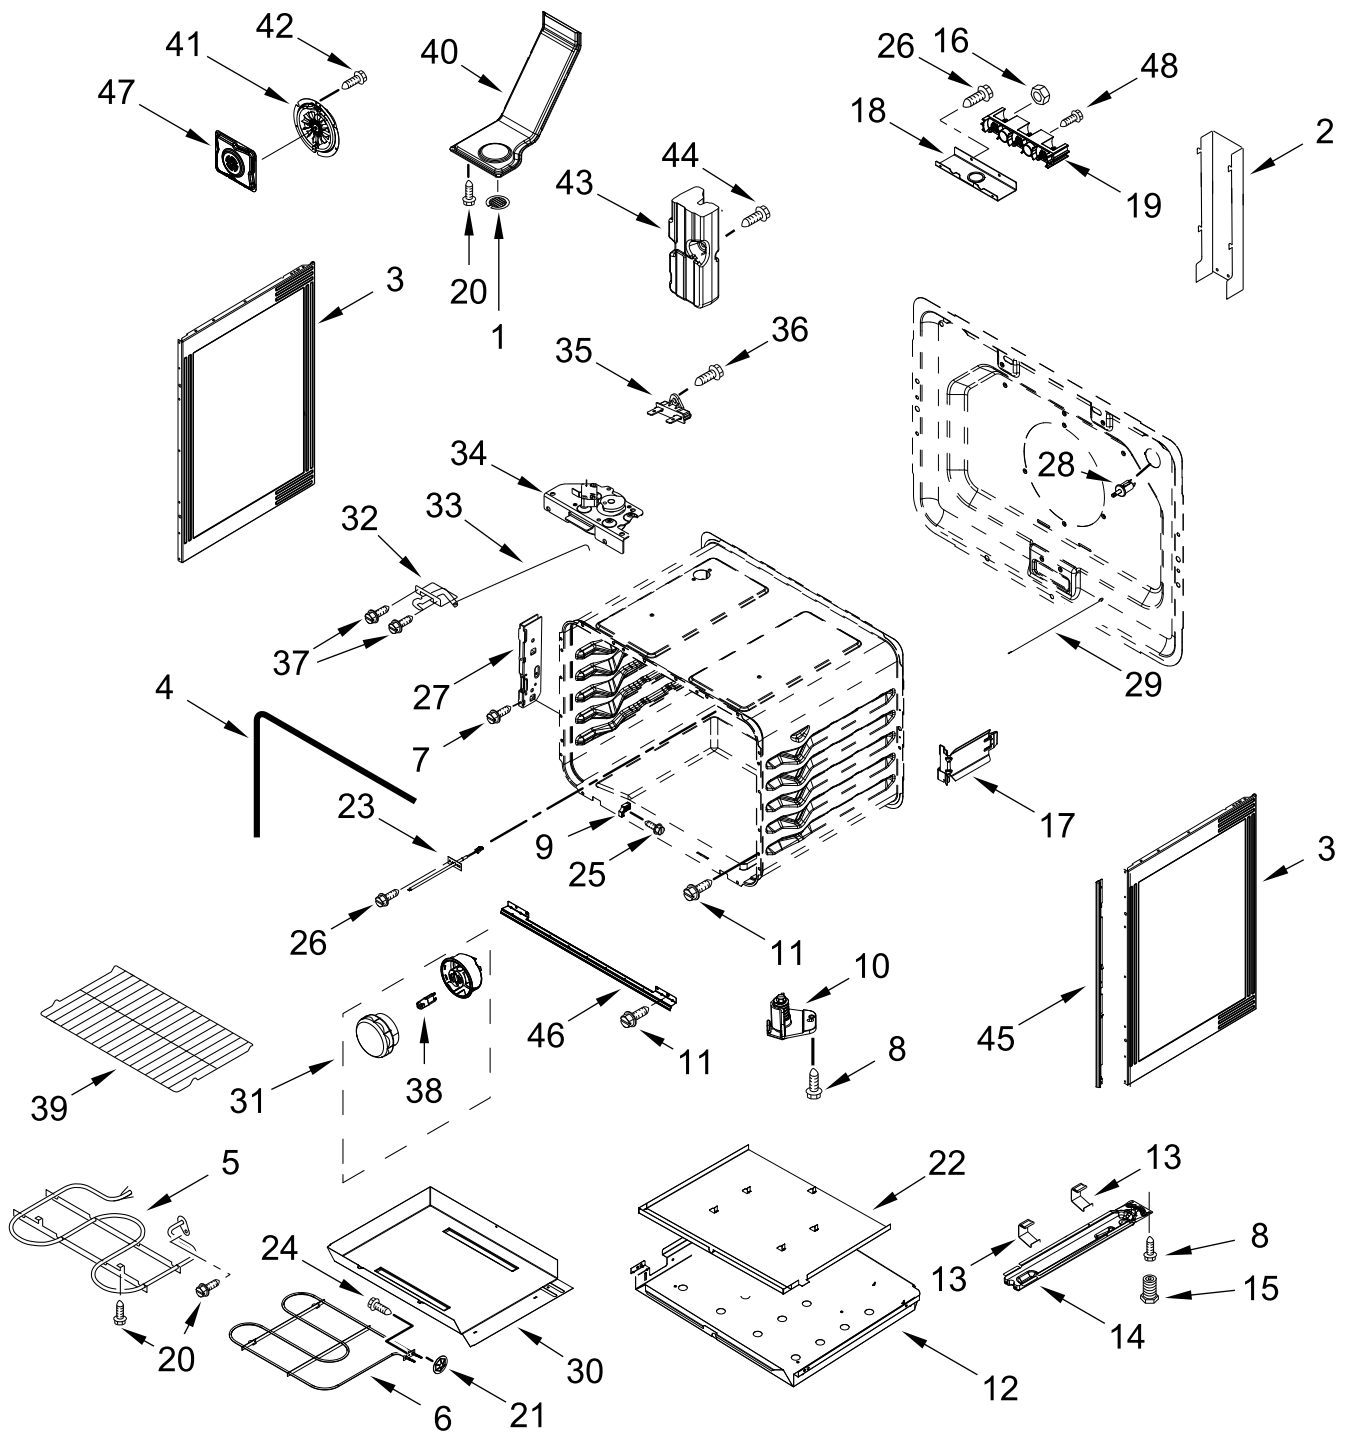

CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11092984	Screen, Vent	19	W11591244	Block, Terminal	39	W11173792	Rack, Oven
2	W10326122	Cover, Terminal Block	20	W10362924	Screw	40	W11621245	Tube, Vent
3		Panel, Side	21	3400968	Nut	41	W11353930	Fan, Convection
	W11445467	Black	22	W10134125	Shield, Heat	42	W10516115	Screw
4	W11491751	Seal, Door	23	W10586204	Sensor	43	W10910404	Counterweight
5	W10308476	Element, Broil	24	3196174	Screw	44	W11034869	Screw
6	9755770	Element, Bake	25	3400080	Screw	45	W11510560	Barrier Rail, Rubber (Left and Right)
7	W10031780	Screw	26	3196169	Screw	46	W11464547	Bracket, Front Frame
8	3196178	Screw	27	W10289077	Receiver, Hinge	47	W11373155	Cover, Conv Fan
9	W10674705	Glide, Drawer Front	28	W11511828	Switch, Door	48	3196173	Screw
10	W10341186	Front Foot Assembly	29	9757239	Rod, Door Switch			FOLLOWING PARTS NOT ILLUSTRATED
11	W10067840	Screw	30	W10183712	Tray, Hidden Bake			
12	W10134121	Tray, Insulation	31	W11634772	Light Assembly		3196520	Clip, Wire
13	W10137382	Clip, Panel	32	9761013	Front Door Latch Assembly		W10646923	Card, Insulator
14	W10390007	Base Rail Assembly (Right)	33	W10078380	Rod, Latch		W10774939	Insulation, Wrap
	W10390008	Base Rail Assembly (Left)	34	W10107820	Rear Door Latch Assembly		W11407378	Insulation, Back
15	W10058460	Foot, Leveling	35	3196548	Fuse, Thermal		W11404469	Insulation, Flue
16	3400029	Nut	36	3196172	Screw			
17	W10404688	Clip, Oven Support	37	3196560	Screw			
18	W11673744	Bracket, Service	38	W10571723	Bulb, Halogen 40 Watts			


DOOR PARTS

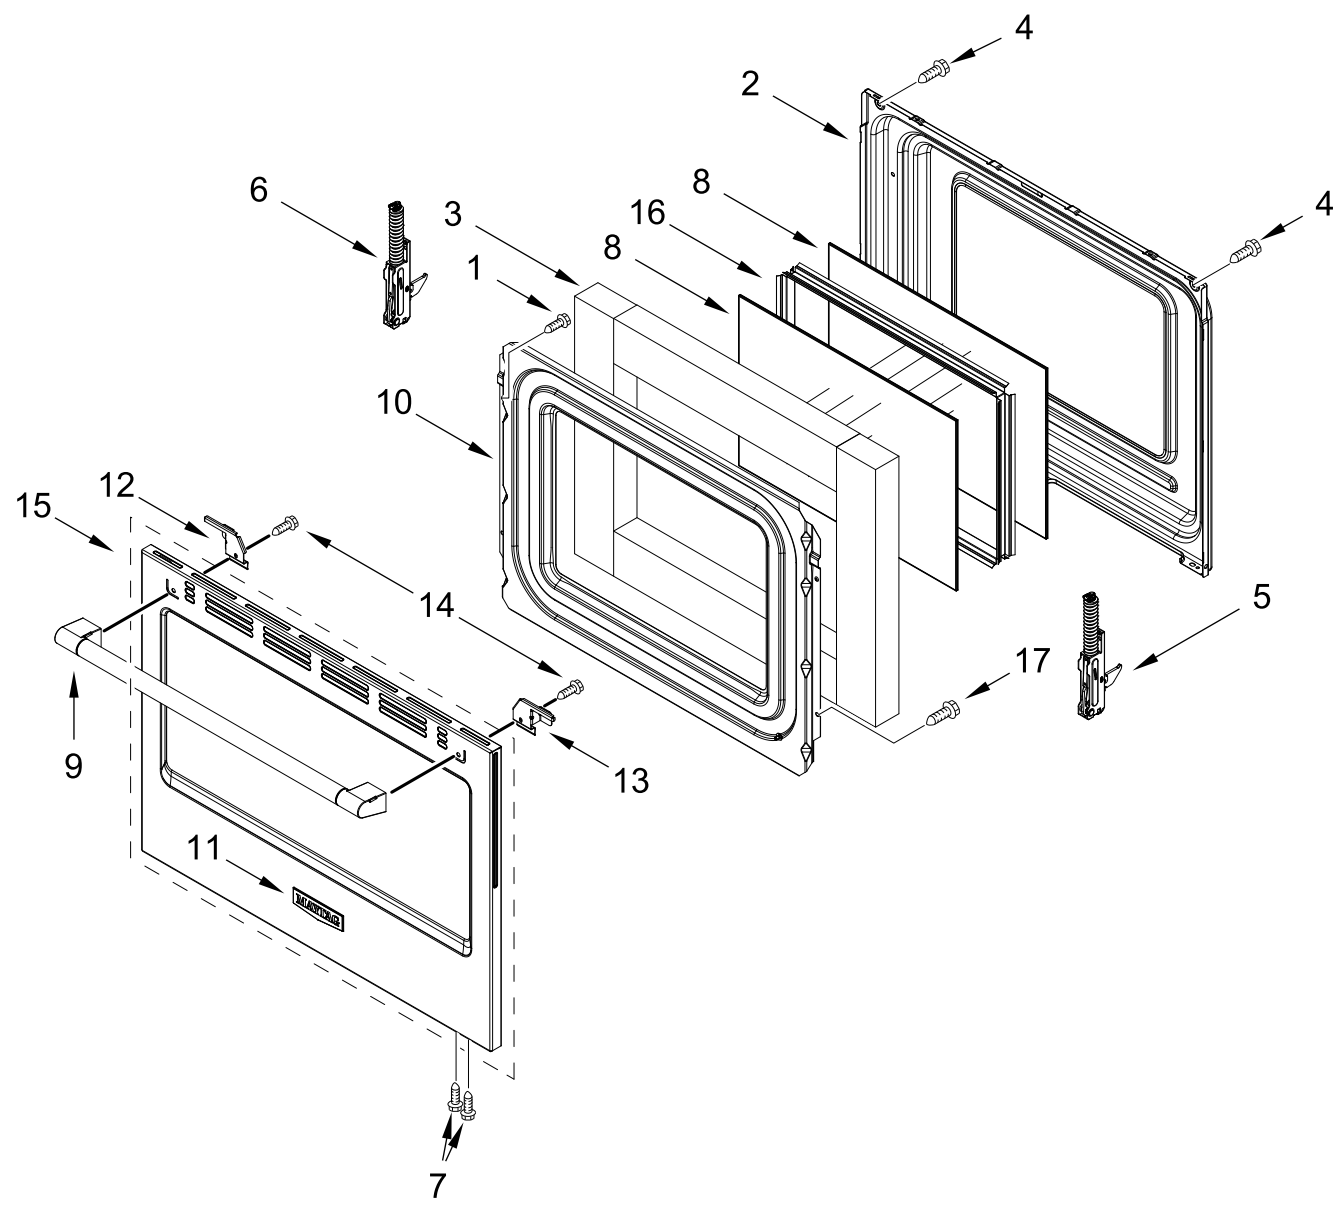

DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10031790	Screw	10	W11380222	Retainer, Insulation	16	W10316950	Frame, Glass
2	9761344	Liner, Door	11	W11628148	Badge	17	W10031780	Screw
3	W10278991	Insulation, Door Strip	12	W11417442	Bracket, Handle Mount (Left)			
4	W10200660	Screw	13	W11157607	Bracket, Handle Mount (Right)			
5	W10388635	Hinge, Door (Active)	14	3196154	Screw			
6	W10440013	Hinge, Door (Active)	15		Outer Door Skin and Glass Assembly			
7	W10327235	Screw		W11631954	Stainless (Includes Badge)			
8	9758162	Glass, Inner						
9		Handle, Oven Door						
	W11495825	Stainless						

DRAWER PARTS

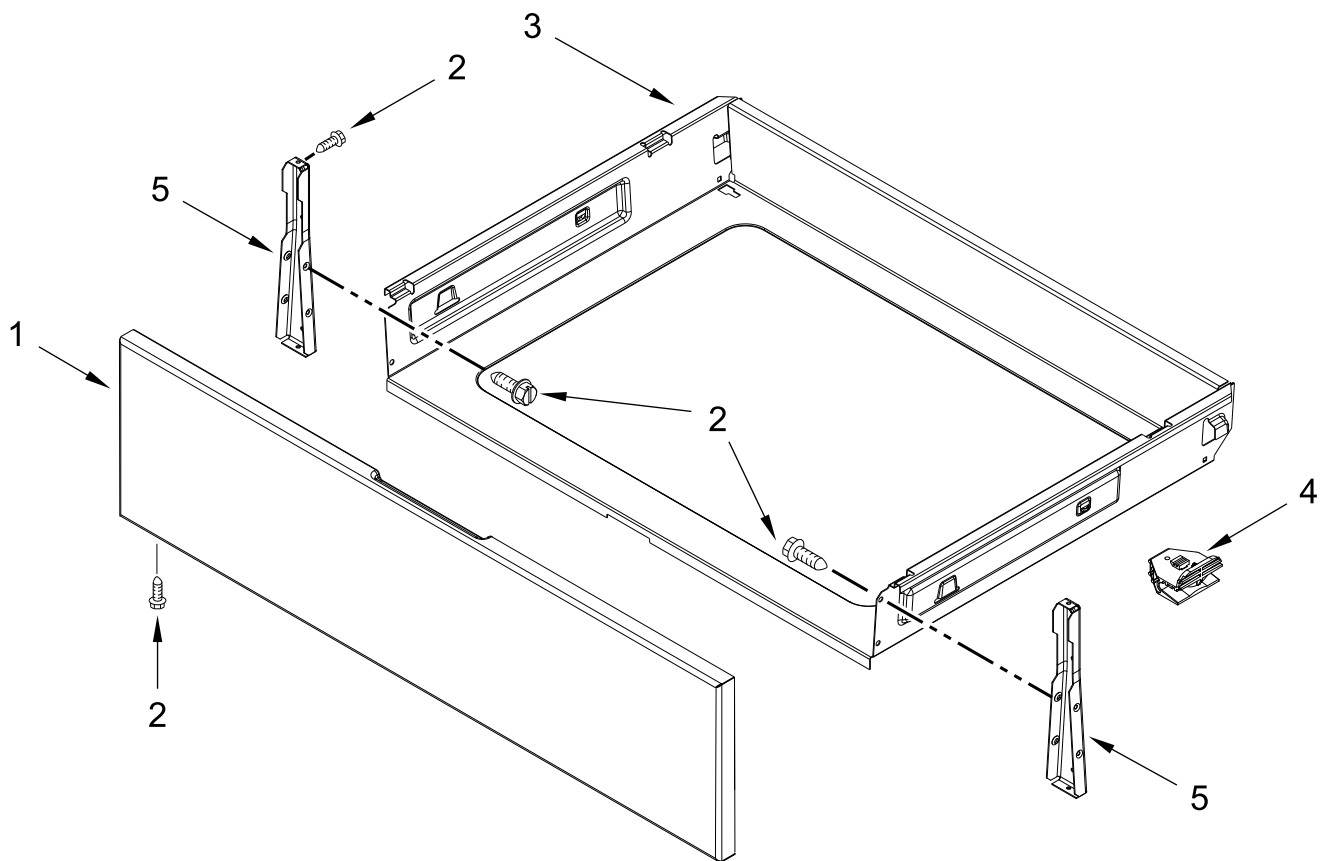

DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Panel, Drawer
	W11449698	Stainless
2	3196169	Screw

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
3	W10688022	Drawer, Storage

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
4	W10674708	Glide, Drawer Rear
5	W10462910	Bracket, Mounting Drawer

OPTIONAL PARTS (NOT INCLUDED)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		FOLLOWING PARTS NOT ILLUSTRATED
		REFINISHING MATERIAL
	242756	Oven Liner Touch Up Paint
		PAINT, TOUCH-UP (1/2oz.)
	72017	White
		PAINT, PRESSURIZED SPRAY (12 oz.)
	350930	White
	285006	Black
		PAINT, BULK (1 qt.)
	799344	White (Uncut)
		ACCESSORY PARTS
	8171394RC	4-Wire Range Power Cord
	PT220	Cord, 4 Inch 40 AMP 3 Wire Range
	PT400	Cord, 4 Inch 40 AMP 4 Wire Range