




ELECTRIC RANGE

MODELS:

ACR4203MNS1 (Stainless)


COOKTOP PARTS

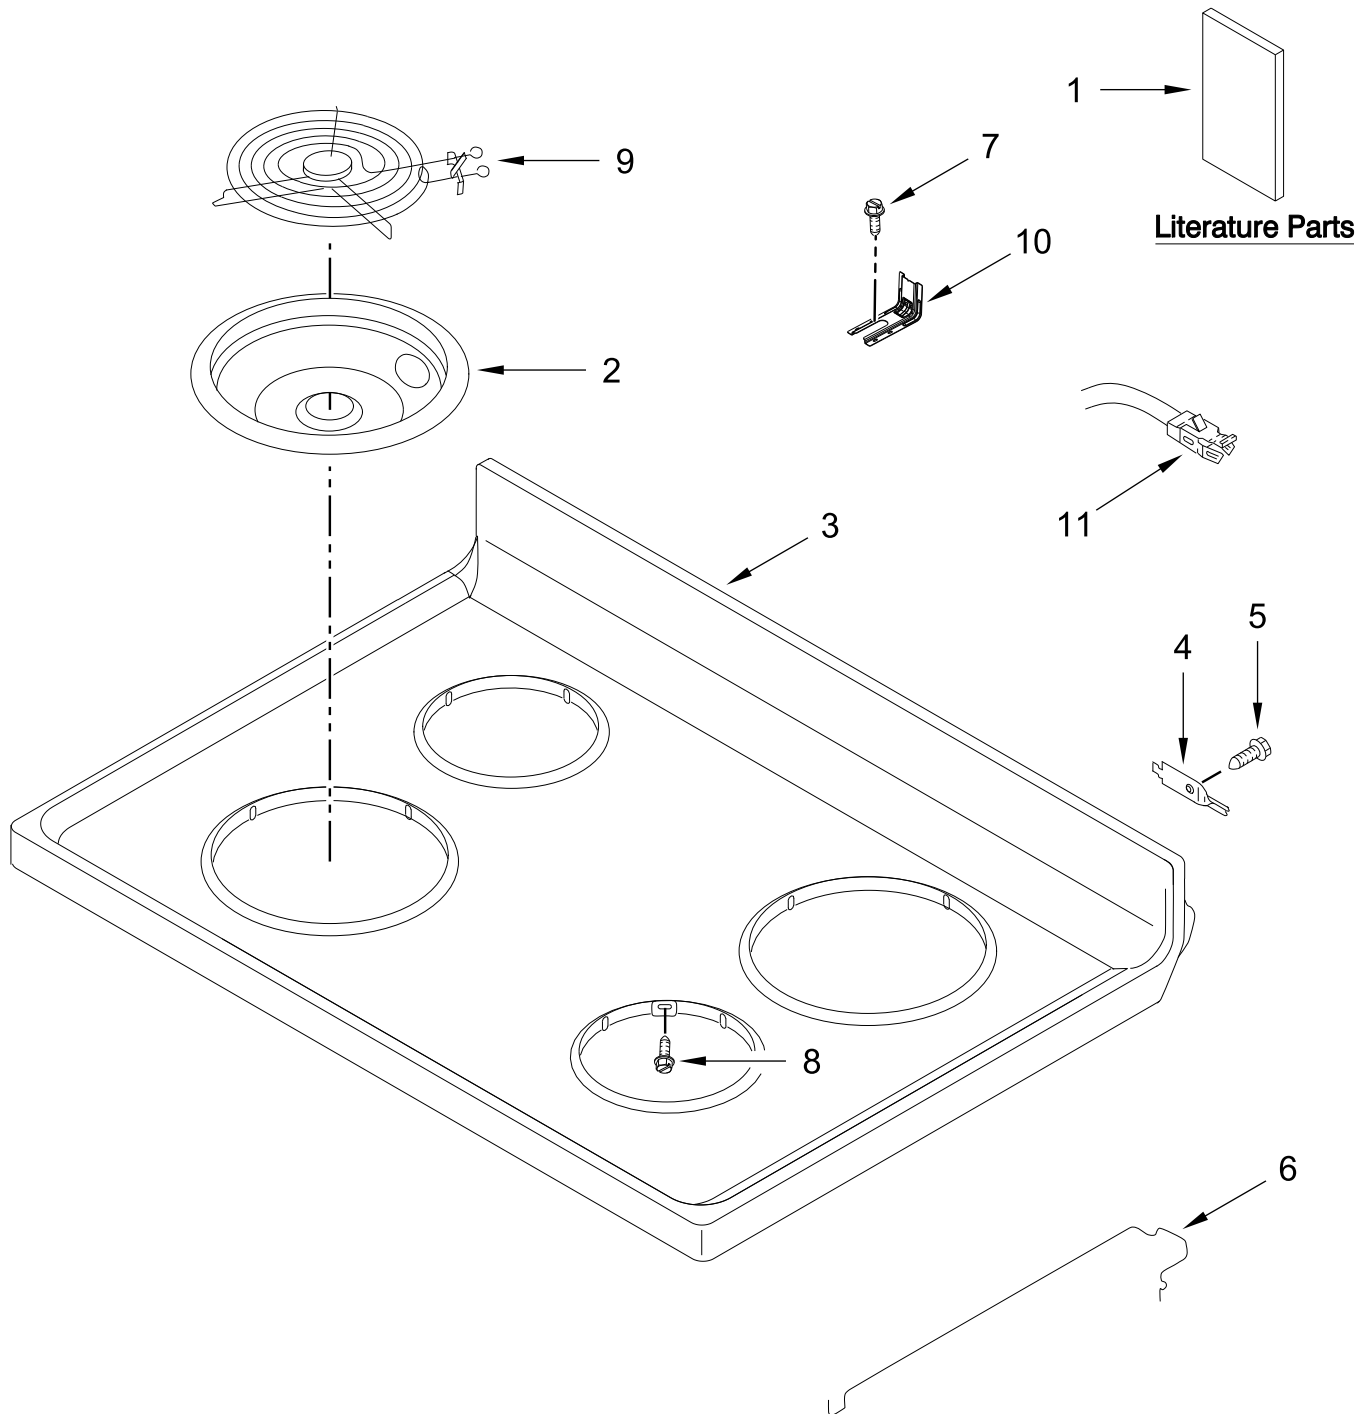

COOKTOP PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	5	3196178	Screw	11	814399	Receptacle, Element
	W11509598	User Instructions	6	3195812	Rod, Support			FOLLOWING PARTS NOT ILLUSTRATED
	W11481065	Quick Start Guide	7	7101P485-60	Screw, Anti-Tip Kit			
	W11488793	Tech Sheet	8	3196154	Screw	W11452639		Harness, Main
2	W10196406	Bowl, Drip (6 in)	9	W11364019	Element, Coil Heating (2400W)	W11134595		Harness, Cooktop
		(Right Front and Left Rear)			(Left Front and Right Rear)	W10281322		Kit, Bare Wire Adapter Block
	W10196405	Bowl, Drip (8 in)		W11364018	Element, Coil Heating (1500W)	3196173		Screw
		(Left Front and Right Rear)			(Right Front and Left Rear)			
3		Cooktop	10	W11379945	Bracket, Anti-Tip			
	3186233	Black						
4	3195060	Hinge, Cooktop						


CONTROL PANEL PARTS

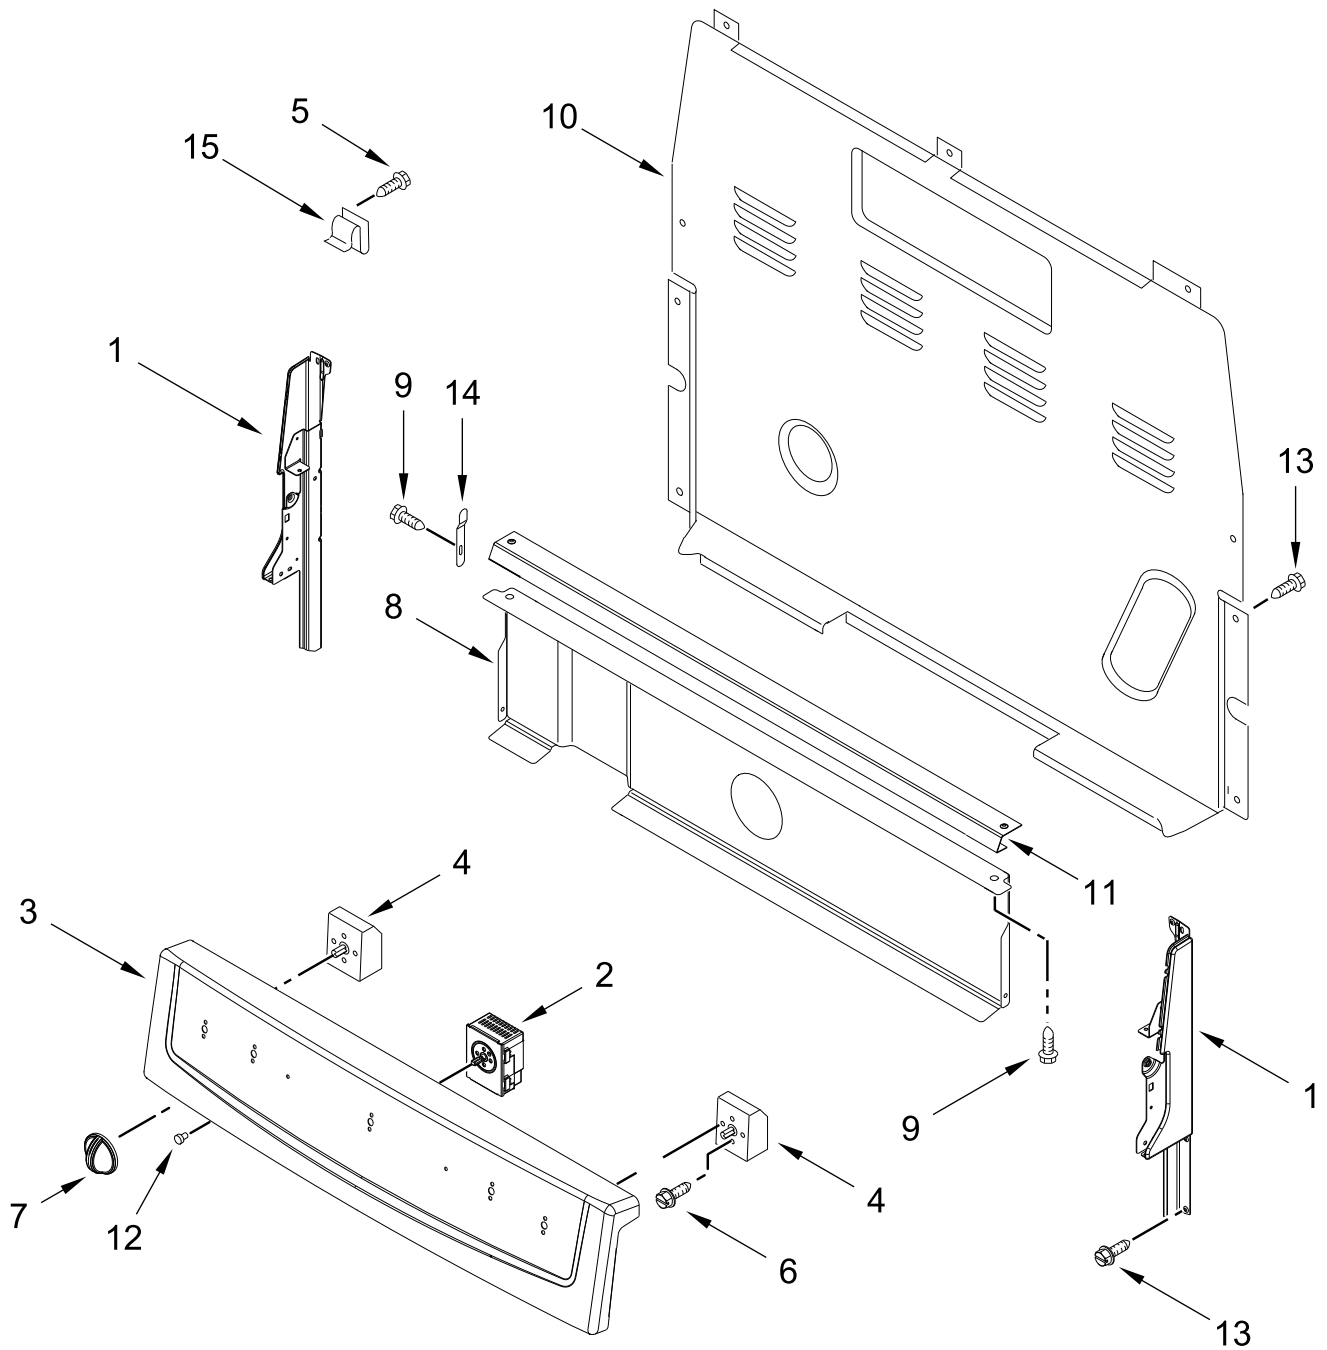

CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Endcap	5	3196169	Screw	14	3196200	Clip, Spring
	W11130372	Black (Left)	6	3400882	Screw	15	8273564	Clip, Rear Upper Cover
	W11130379	Black (Right)	7		Knob, Infinite			
2	9762215	Control, Electric		W10844801	Black			
3		Panel, Control	8	W10134247	Shield, Heat			
	W11613528	Stainless	9	3196165	Screw			
4	3148952	Switch, Infinite (Yellow)	10	8272473	Cover, Upper Rear			
		(Right Front and Left Rear)	11	W10525121	Bracket, Console Mounting			
	3148954	Switch, Infinite (Orange)	12	3196068	Lens, Indicator			
		(Left Front and Right Rear)	13	3196178	Screw			


CHASSIS PARTS

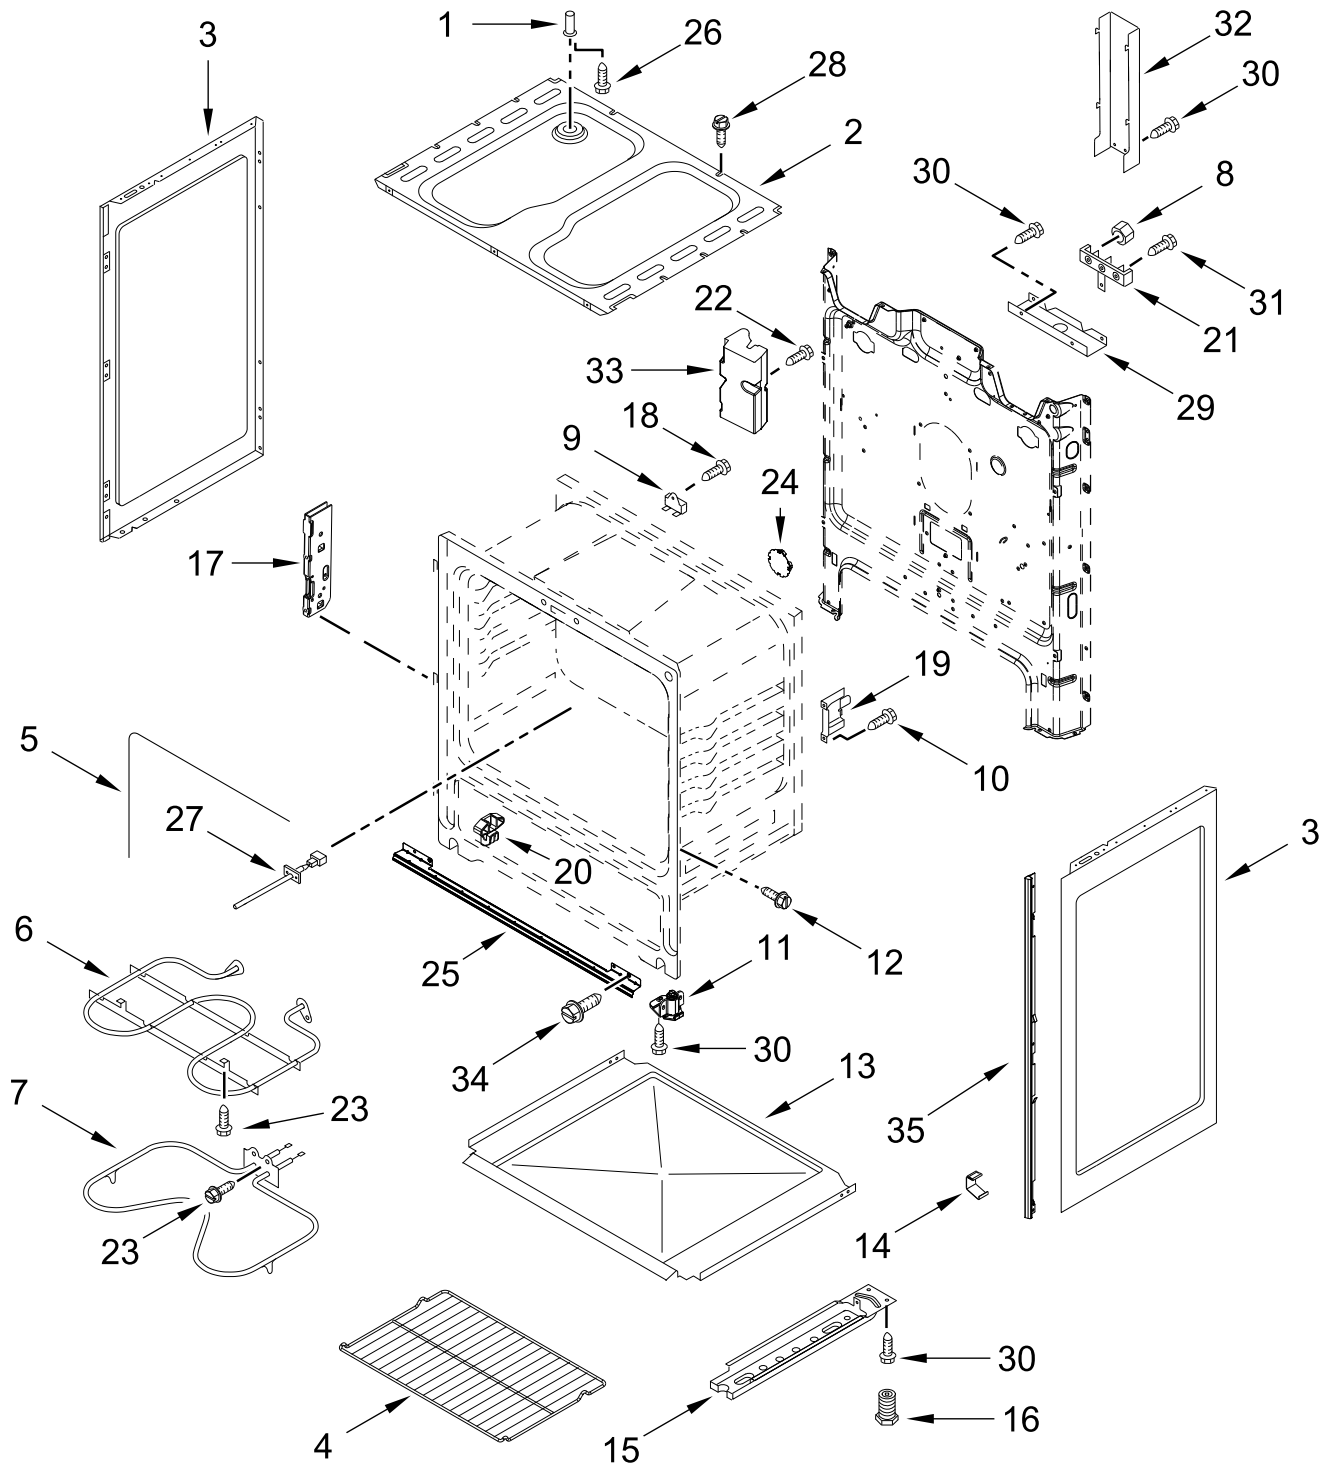

CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11222267	Tube, Vent	15	W10390008	Base Rail Assembly (Left)	26	3196567	Screw
2	W11380208	Box, Burner				27	W10181986	Sensor, Oven
3		Panel, Side		W10390007	Base Rail Assembly (Right)	28	3196165	Screw
	W10162245	Black				29	3186034	Bracket, Service
4	W11173792	Rack, Oven	16	W10058460	Foot, Leveling	30	3196178	Screw
5	W10129032	Seal, Door	17	W10289077	Receiver, Hinge	31	3400016	Screw
6	W10308476	Element, Broil	18	3196172	Screw	32	W10326122	Cover, Terminal Block
7	W11022836	Element, Bake	19	W10404688	Clip, Oven Support	33	W10910404	Counterweight
8	3400029	Nut	20	W10674705	Glide, Drawer Front	34	3196560	Screw
9	3196548	Fuse, Thermal	21	W10245259	Block, Terminal	35	W11510560	Barrier Rail, Rubber (Left and Right)
10	3196169	Screw	22	W11034869	Screw			FOLLOWING PARTS NOT ILLUSTRATED
11	W10341186	Front Foot Assembly	23	3196174	Screw			
12	W10067840	Screw	24	W11657929	Hole, Cover Light			
13	8054068	Retainer, Insulation	25	W11464547	Bracket, Front Frame	8273263		Insulation, Wrap
14	W10137382	Clip, Panel				8272611		Insulation, Back

DOOR PARTS

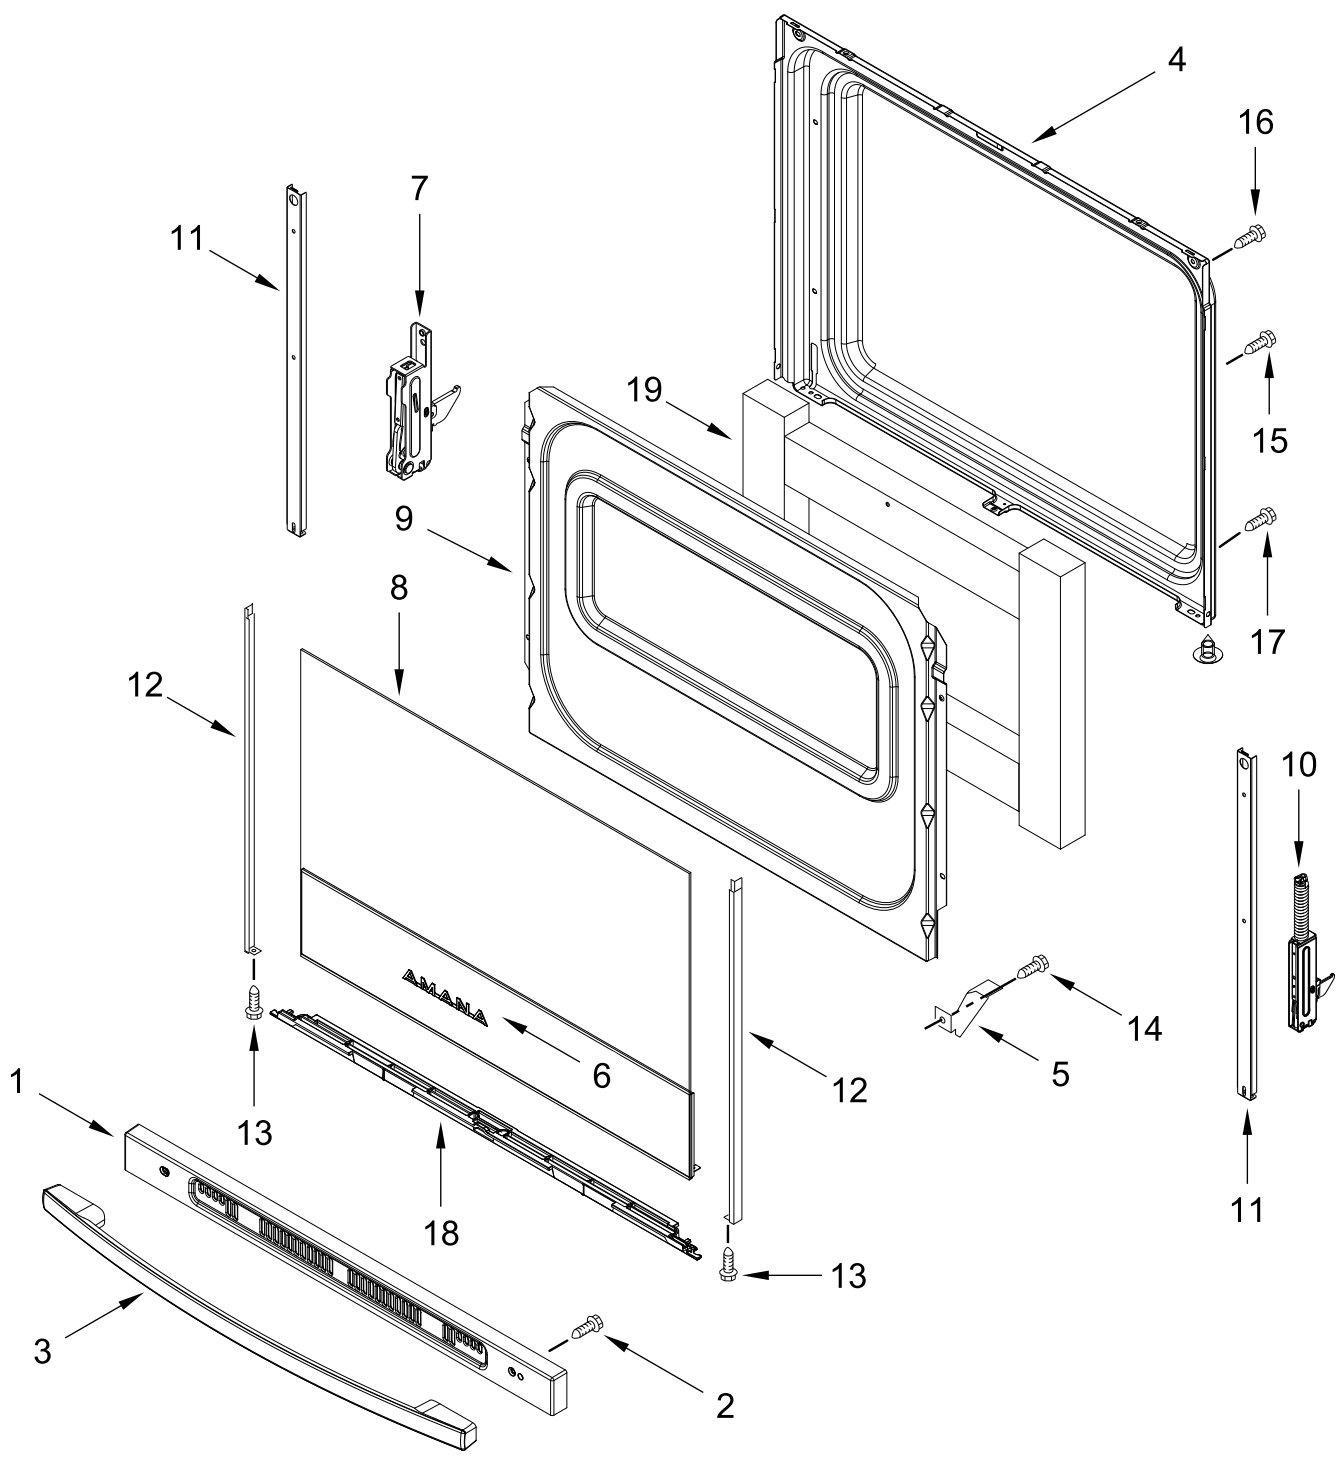


DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Trim, Top
	W10310922	Black
2	W10168559	Screw
3		Handle, Door
	W10323589	Black
4	9761342	Liner, Door
5	W10137382	Clip, Panel
6		Badge
	W10846752	Stainless
7	W10299227	Hinge, Door (Passive)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
8		Glass Assembly, Outer Door
	W11608533	Black
9	W11380207	Retainer, Insulation
10	W10299225	Hinge, Active
11	W11379944	Strap, Door
12		Trim, Side
	W10746436	Black (Left)
	W10746435	Black (Right)
13	W10327235	Screw

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
14	3196165	Screw
15	W10031790	Screw
16	W10200660	Screw
17	W10031780	Screw
18		Door, Lower Trim
	W11440159	Trim, Bottom Door
19	W10278991	Insulation, Door Strip

DRAWER PARTS

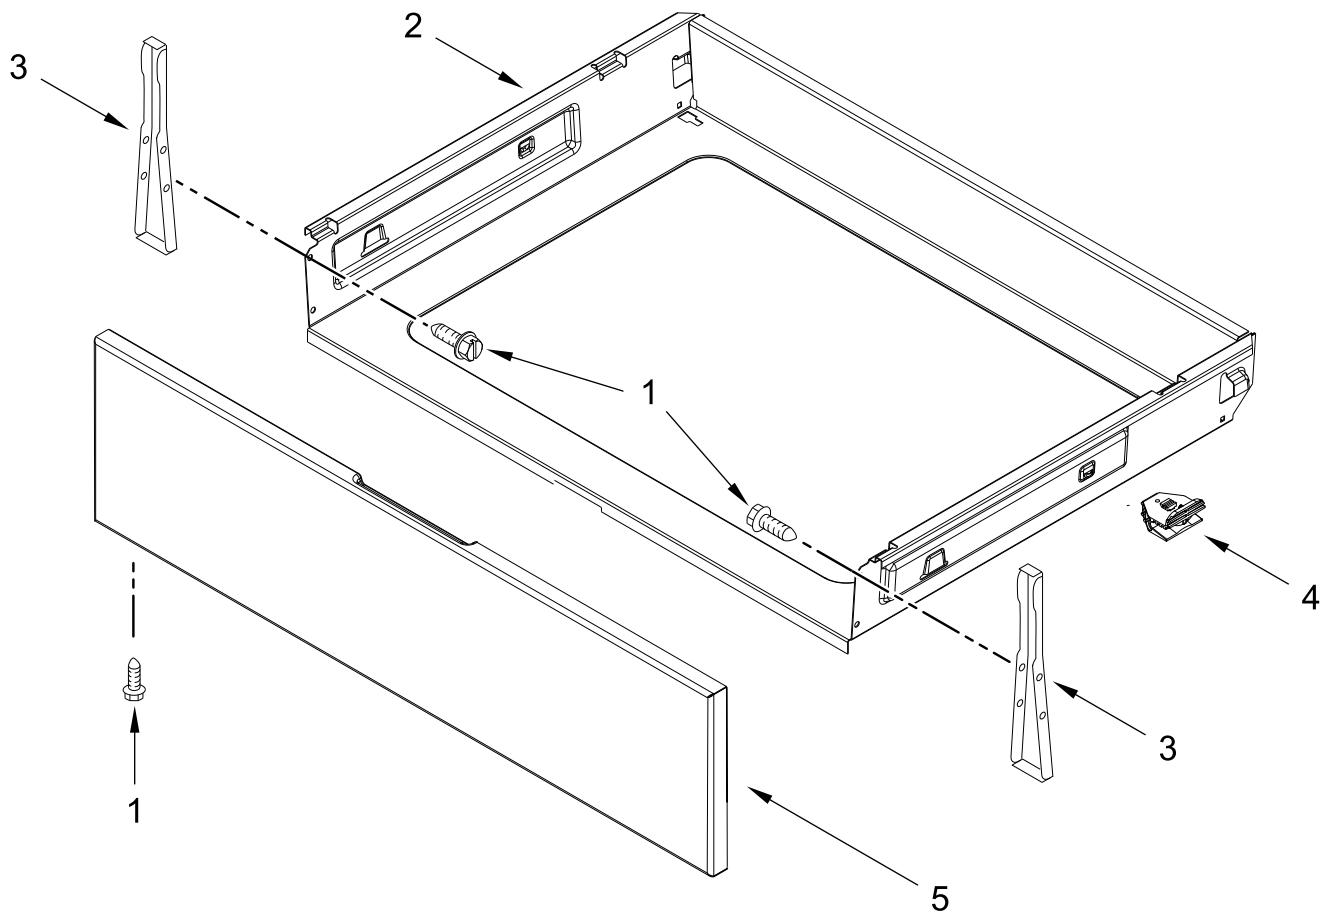

DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	3196165	Screw	3	W10462910	Bracket, Mounting Drawer	5		Panel, Front
2	W10688022	Drawer, Storage	4	W10674708	Glide, Drawer Rear		W10330070	Stainless

OPTIONAL PARTS (NOT INCLUDED)

REFINISHING MATERIAL

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	511873	White Porcelain (2 oz.)

PAINT, BULK (1 QT.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

INSULATION

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	261514	Insulation (1-1/2 x 24 x 120 in)
	240132	Insulation (2-1/2 x 22 x 120 in)

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	206922	Primer (White)

ACCESSORY PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	3184478	Cleaner, Glass
	4396923	Broiler Pan and Grid