




ELECTRIC RANGE

MODELS:

MFES6030RB0 (Black)
MFES6030RW0 (White)


COOKTOP PARTS

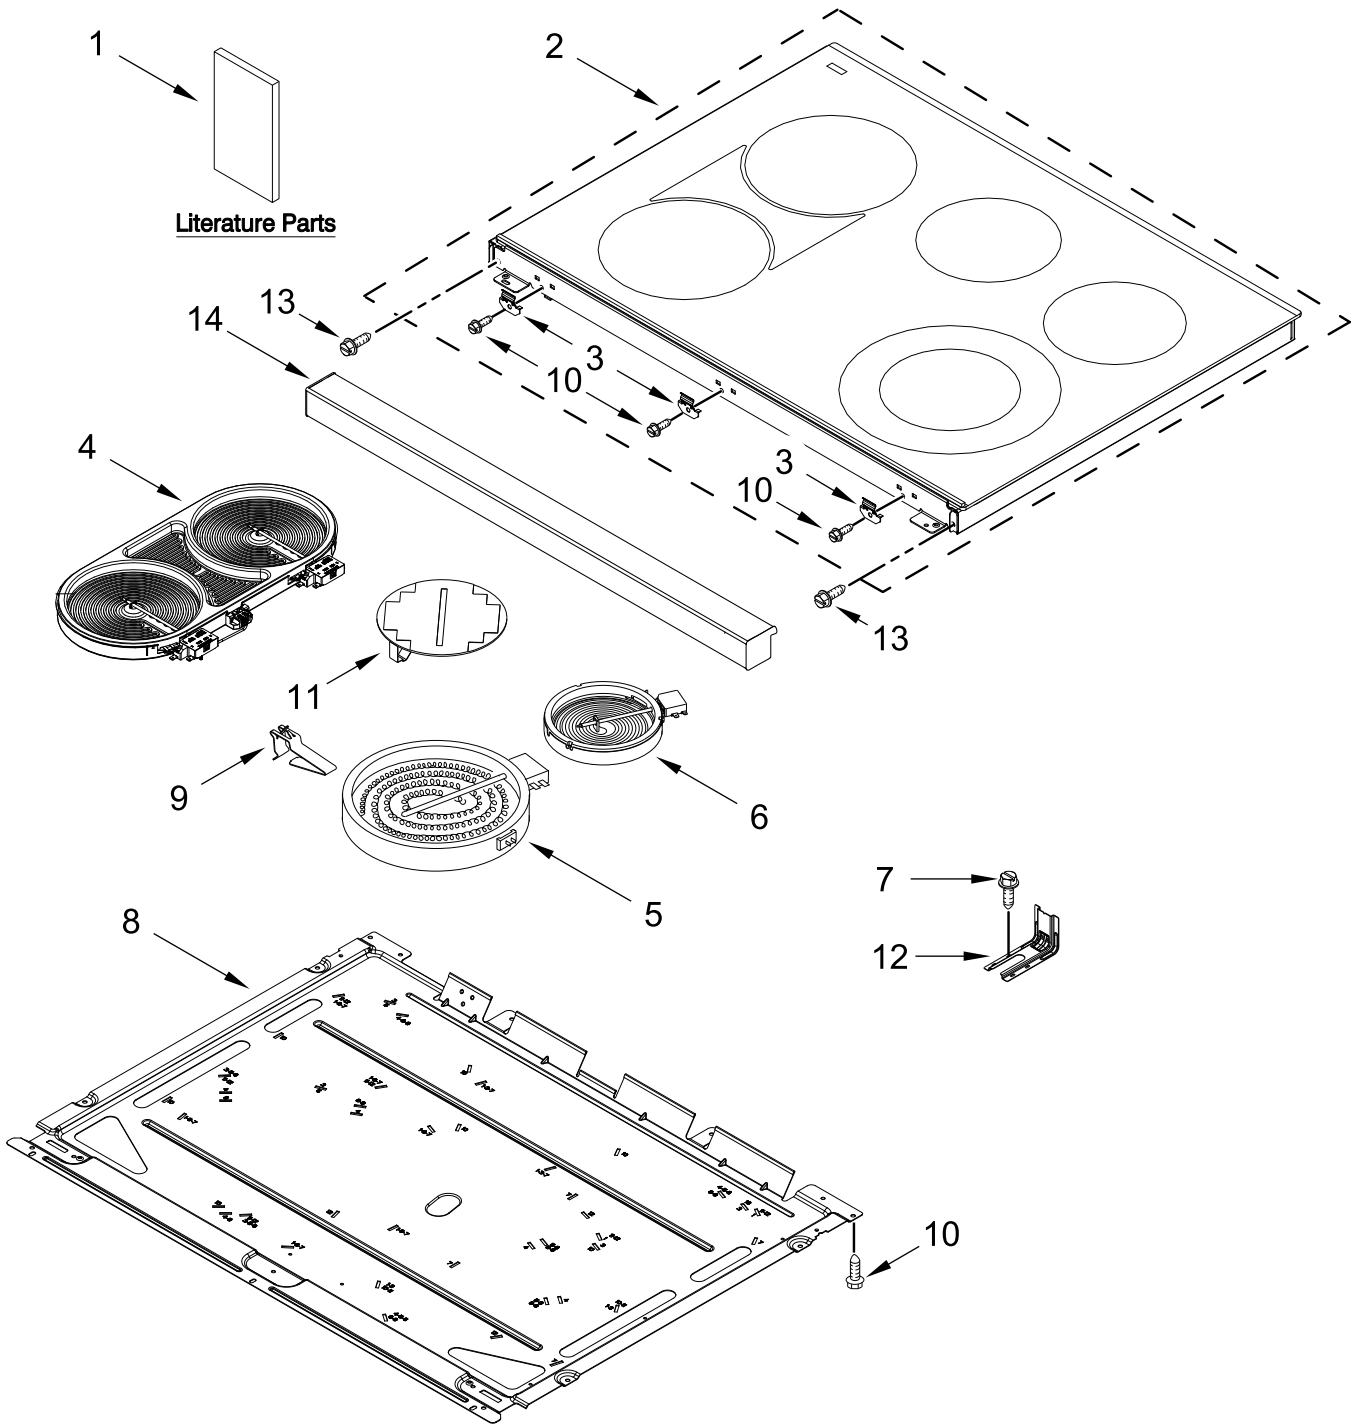

COOKTOP PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	6	8273994	Element (1200W) (Right Rear)	14		Bullnose
	W11640146	Owner's Manual					W11624926	Black
	W11638796	Quick Start Guide	7	7101P485-60	Screw, Anti-Tip Kit		W11624925	White
	W11639166	Tech Sheet	8	W11640572	Pan, Radiant Element			FOLLOWING PARTS NOT ILLUSTRATED
2		Cooktop	9	W11600012	Spring, Element		W11696452	Harness, Main
	W11633168	Black (includes, Cooktop Bracket)	10	3196169	Screw		W11706939	Harness, Cooktop
3	W11593284	Bracket, Cooktop	11	W11668631	Element, Warm Zone (Center Rear)		3196896	Clip, Wire
4	W10248259	Element, Bridge (Left Front and Left Rear)	12	W11379945	Bracket, Anti-Tip		W11172528	Harness, Hidden Bake
5	W11282542	Element (3000W Dual) (Right Front)	13	3400080	Screw			


CONTROL PANEL PARTS

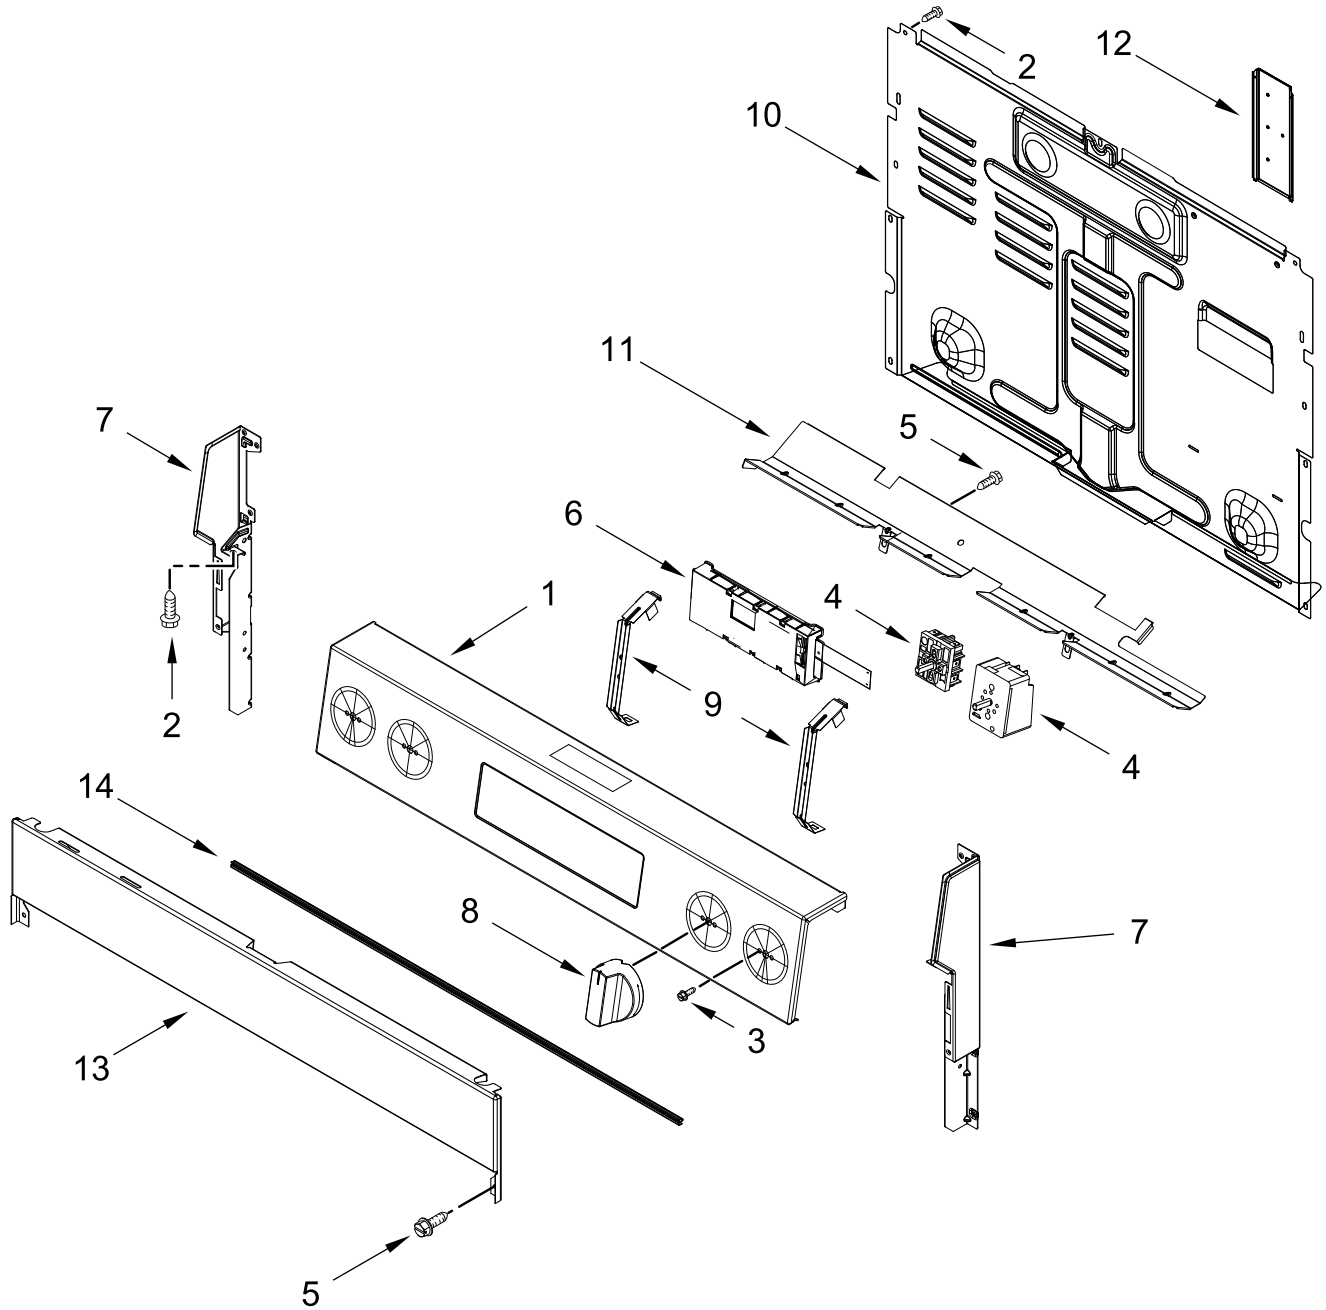

CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Console	6		Board, Control	13		Panel, Lower
	W11730181	Black		W11637094	Black		W11625413	Black
	W11730180	White	7		Endpost, Console		W11625412	White
2	3196178	Screw		W11625423	Black (Left)	14	W11643797	Gasket, Lower Panel
3	3400882	Screw		W11625420	Black (Right)			
4	W10437092	Switch, Infinite (Left Front and Right Front)		W11625422	White (Left)			
	W10843843	Switch, Infinite (Left Rear)		W11625418	White (Right)			
	W10578768	Switch, Infinite (Right Rear)	8		Knob			
				W11584001	Stainless			
			9	W11371599	Bracket, Control			
			10	W11393668	Cover, Upper Rear			
5	3196169	Screw	11	W11363806	Shield, Heat			
			12	W11394231	Cover, Rear Flue			


CHASSIS PARTS

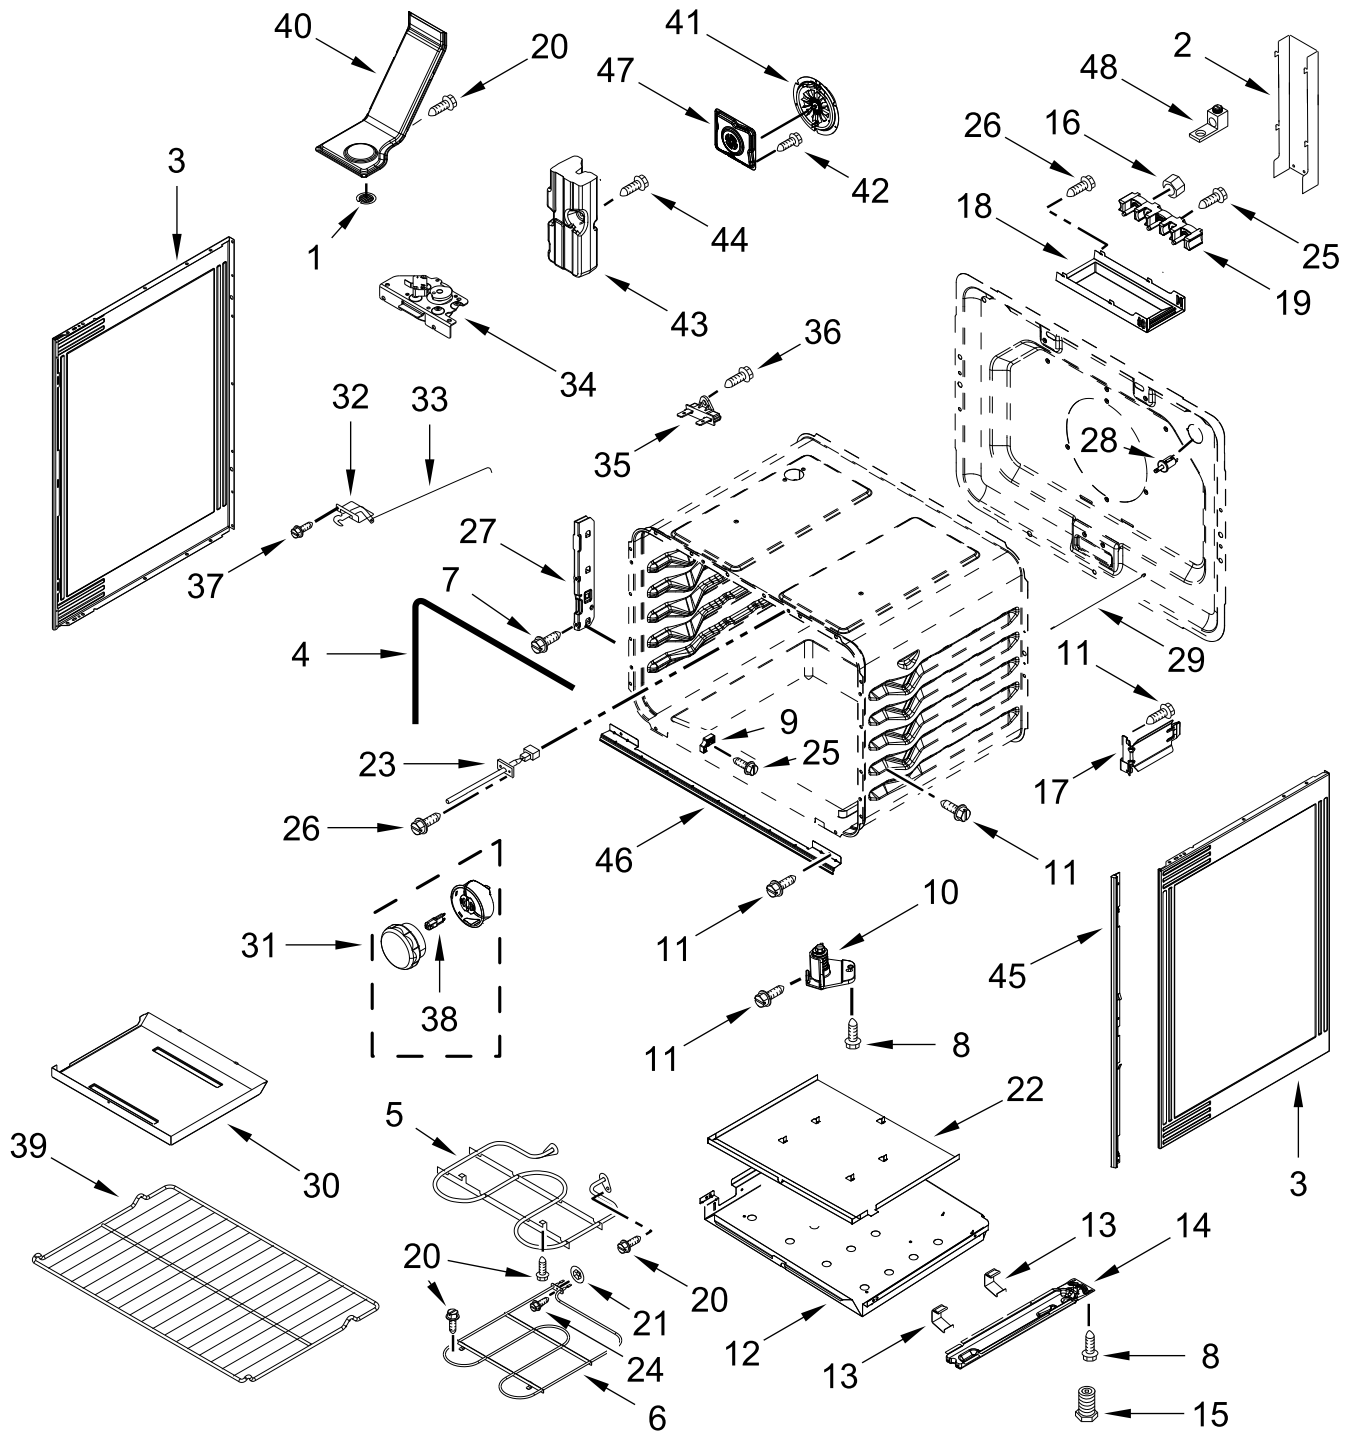

CHASSIS PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11092984	Screen, Vent	19	W11750818	Block, Terminal (without Ground Strap)	39	W11173792	Rack, Oven
2	W10326122	Cover, Terminal Block	20	W10362924	Screw	40	W11621245	Tube, Vent
3		Panel, Side	21	3400968	Nut	41	W11353930	Fan, Convection
	W11445467	Black	22	W10134125	Shield, Heat	42	W10516115	Screw
	W11445761	White	23	W10586204	Sensor	43	W10910404	Counterweight
4	W11491751	Seal, Door	24	3196174	Screw	44	W11034869	Screw
5	W10308476	Element, Broil	25	3400080	Screw	45	W11510560	Barrier Rail, Rubber (Left and Right)
6	9755770	Element, Bake	26	3196169	Screw	46	W11464547	Bracket, Front Frame
7	W10031780	Screw	27	W10289077	Receiver, Hinge	47	W11373155	Cover, Conv Fan
8	3196178	Screw	28	W11511828	Switch, Door	48	W10281322	Kit, Bare Wire Adapter Block
9	W10674705	Glide, Drawer Front	29	9757239	Rod, Door Switch			
10	W10341186	Front Foot Assembly	30	W10183712	Tray, Hidden Bake			
11	W10067840	Screw	31	W11634772	Light Assembly			FOLLOWING PARTS NOT ILLUSTRATED
12	W10134121	Tray, Insulation	32	9761013	Front Door Latch Assembly		3196520	Clip, Wire
13	W10137382	Clip, Panel	33	W10078380	Rod, Latch		W10646923	Card, Insulator
14	W10390007	Base Rail Assembly (Right)	34	W10107820	Rear Door Latch Assembly		W10774939	Insulation, Wrap
	W10390008	Base Rail Assembly (Left)	35	3196548	Fuse, Thermal		W11407378	Insulation, Back
15	W10058460	Foot, Leveling	36	3196172	Screw		W11404469	Insulation, Flue
16	3400029	Nut	37	3196560	Screw			
17	W10404688	Clip, Oven Support	38	W10571723	Bulb, Halogen 40 Watts			
18	W11673744	Bracket, Service						

DOOR PARTS

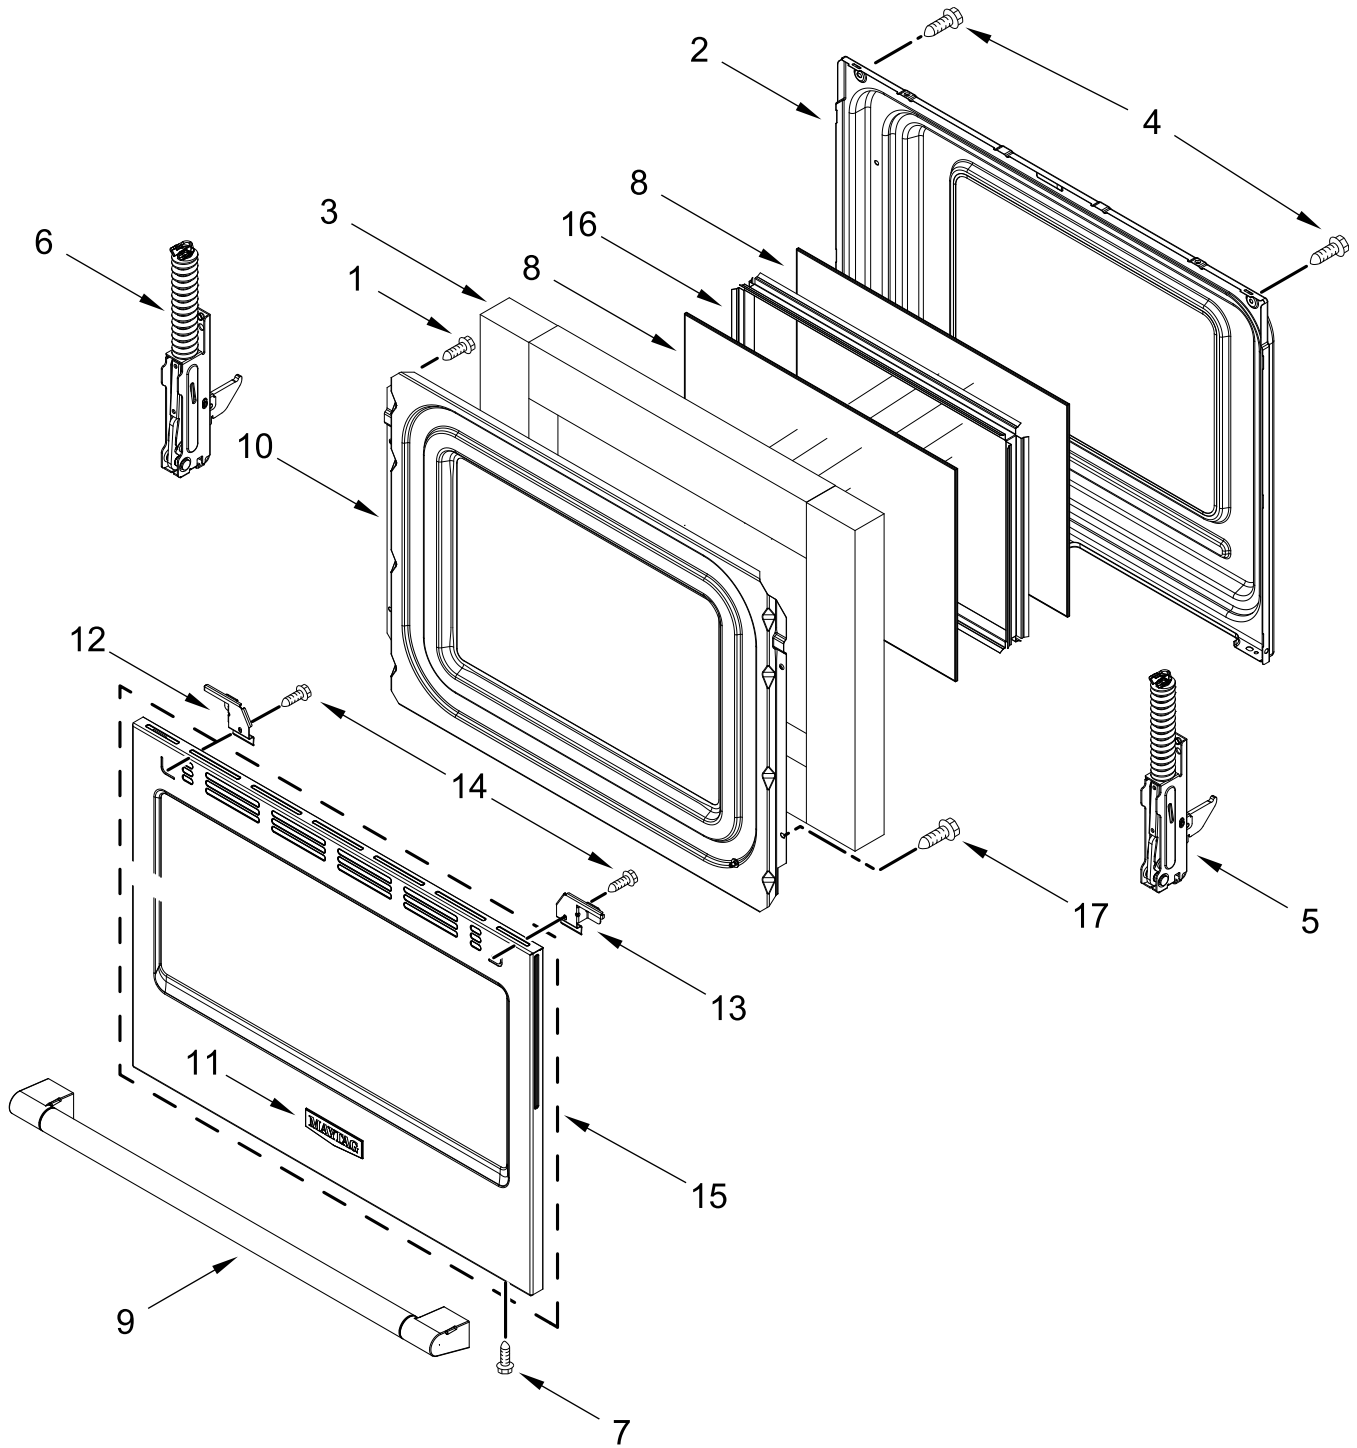


DOOR PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10031790	Screw
2	9761344	Liner, Door
3	W10278991	Insulation, Door Strip
4	W10200660	Screw
5	W10388635	Hinge, Door (Active)
6	W10440013	Hinge, Door (Active)
7	W10327235	Screw
8	9758162	Glass, Inner

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
9		Handle, Oven Door
	W11495825	Stainless
10	W11380222	Retainer, Insulation
11	W11628148	Badge
12	W11417442	Bracket, Handle Mount (Left)
13	W11157607	Bracket, Handle Mount (Right)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
14	3196154	Screw
15		Outer Door Skin and Glass Assembly
	W11631949	Black (Includes Badge)
	W11631932	White (Includes Badge)
16	W10316950	Frame, Glass
17	W10031780	Screw

DRAWER PARTS

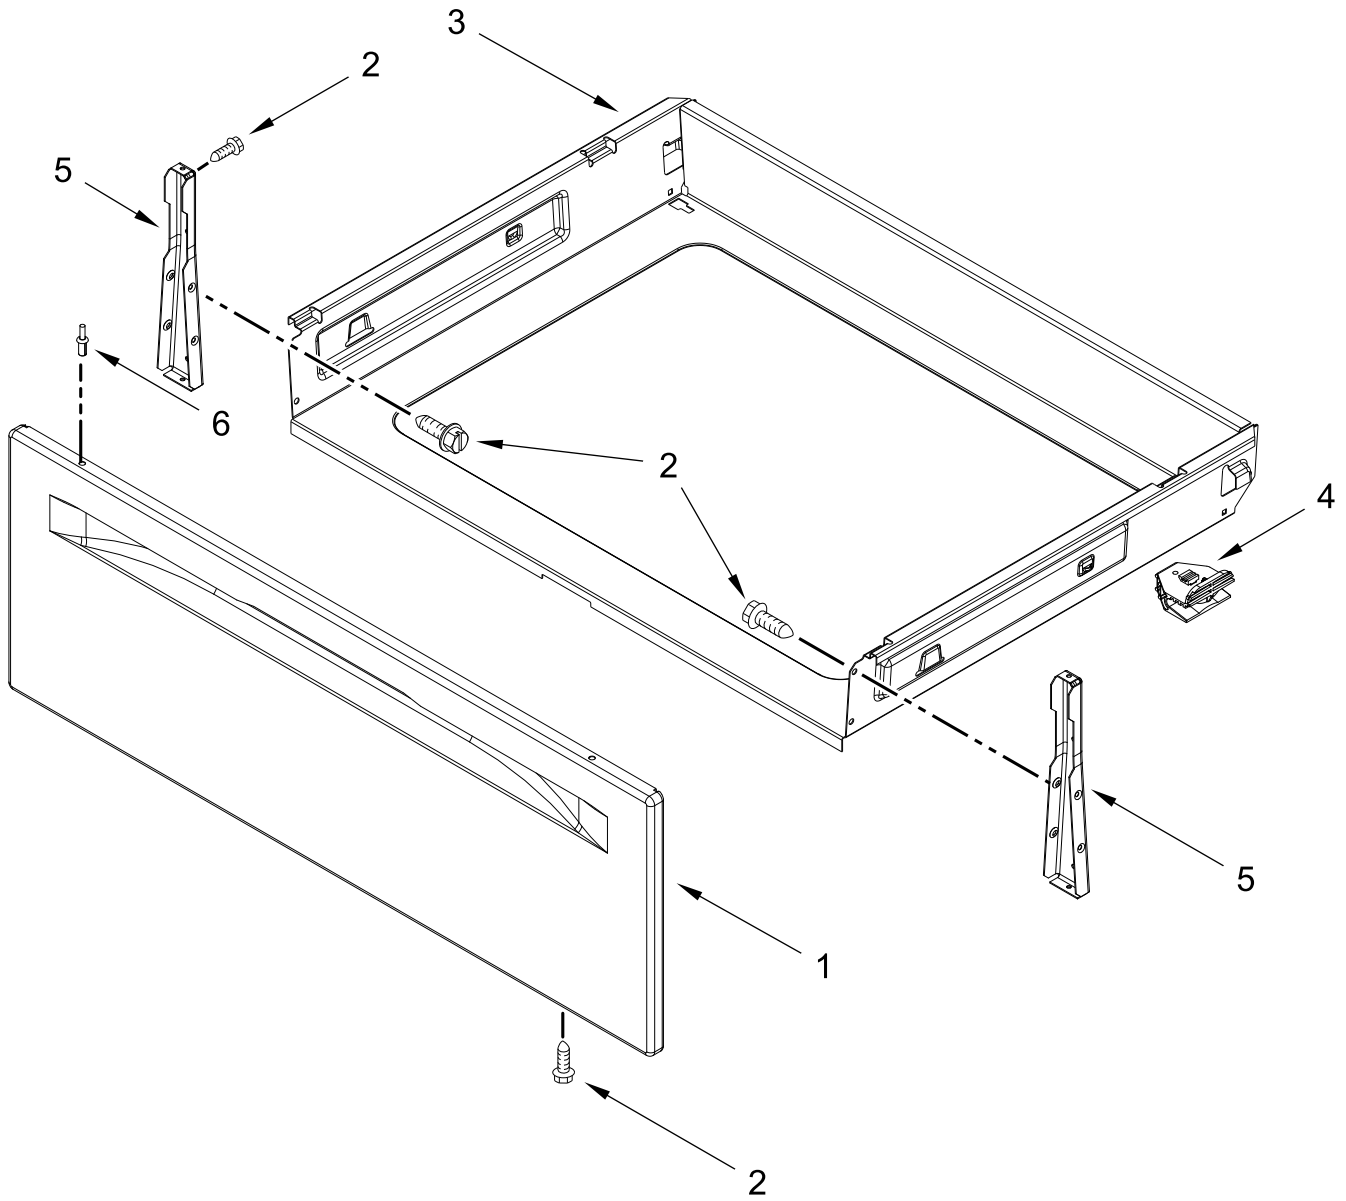

DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Panel, Drawer
	W11123900	Black
	W11123901	White
2	3196169	Screw

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
3	W10688022	Drawer, Storage
4	W10674708	Glide, Drawer Rear
5	W10462912	Bracket, Mounting Drawer

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
6		Rivet, Push
	3196813	Black
	3196814	White

OPTIONAL PARTS (NOT INCLUDED)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		FOLLOWING PARTS NOT ILLUSTRATED
		REFINISHING MATERIAL
	242756	Oven Liner Touch Up Paint
		PAINT, TOUCH-UP (1/2oz.)
	72017	White PAINT, PRESSURIZED SPRAY (12 oz.)
	350930	White
	285006	Black PAINT, BULK (1 qt.)
	799344	White (Uncut)
		ACCESSORY PARTS
	W11692811	Basket, Air Fry