




GAS RANGE

MODELS:

WSGS7530RV0 (Black Stainless)


COOKTOP PARTS

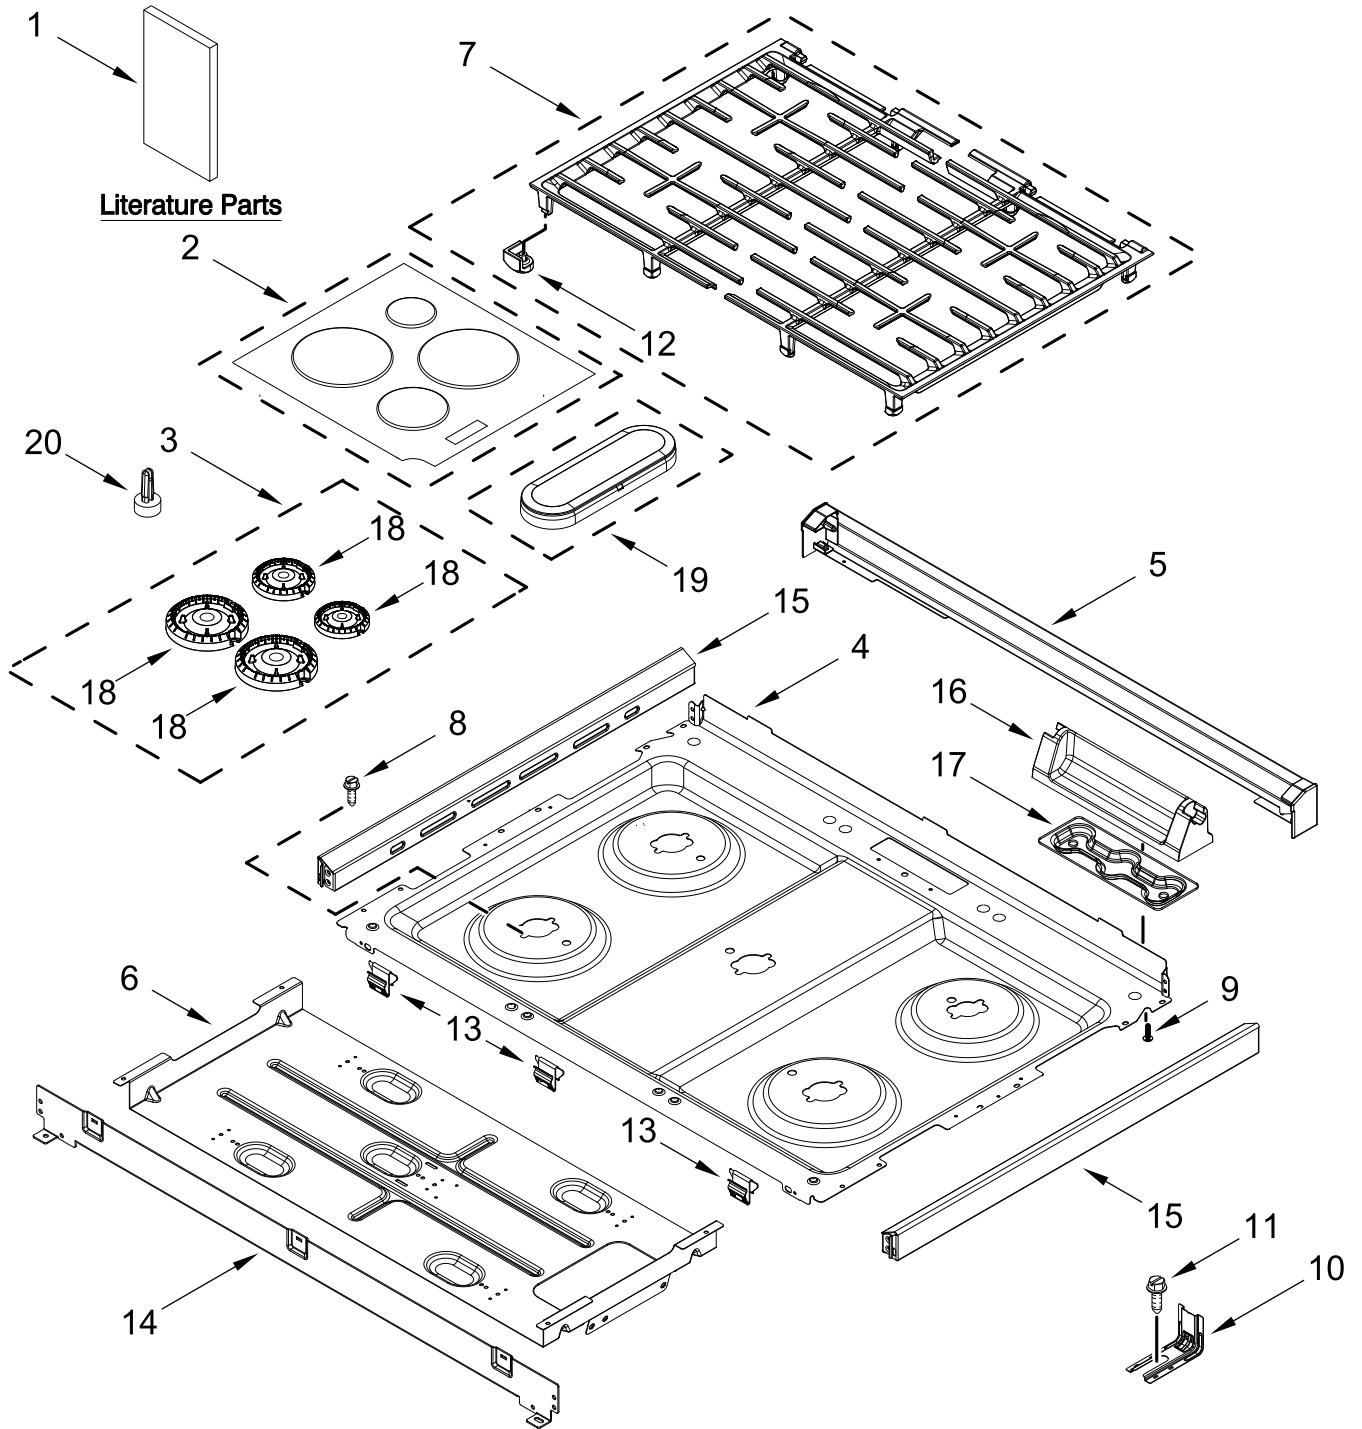

COOKTOP PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	12	W11672010	Grate, Bumper	19	W11635774	Oval Flame Spreader Kit
	W11642290	Owner's Manual	13	W11637551	Spring, Clip			(Center)
	W11639174	Tech Sheet	14	W11295628	Cooktop, Front Bracket	20	8016P022-60	Glide, Main Top
	W11641991	Quick Start Guide	15		Frame, Cooktop			FOLLOWING PARTS NOT ILLUSTRATED
2		Burner Cap Kit		W11367962	Black	W11334464		Harness, Main
	W11498499	Black (Set of 4)	16		Hinge, Grate	W11454086		Harness, Bake
3	W11600788	Burner Kit (Set of 4)		W11621636	Black	W11349007		Harness, DC
4		Cooktop	17	W11623712	Hinge, Spacer	3196520		Clip, Wire
	W11279795	Black	18	W11352193	Flame Spreader	313438		Clip, Harness
5	W11632438	Vent, Trim			(Left Front and Right Front)	3196896		Clip, Wire
6	W11388381	Box, Burner		W11352195	Flame Spreader			
7		Grate Kit			(Left Rear)			
	W11622335	Black (Set of 2)		W11352197	Flame Spreader			
8	W10673618	Screw			(Right Rear)			
9	W10530626	Screw						
10	W11379947	Bracket, Anti-Tip						
11	7101P485-60	Screw, Anti-Tip Kit						


CONTROL PANEL PARTS

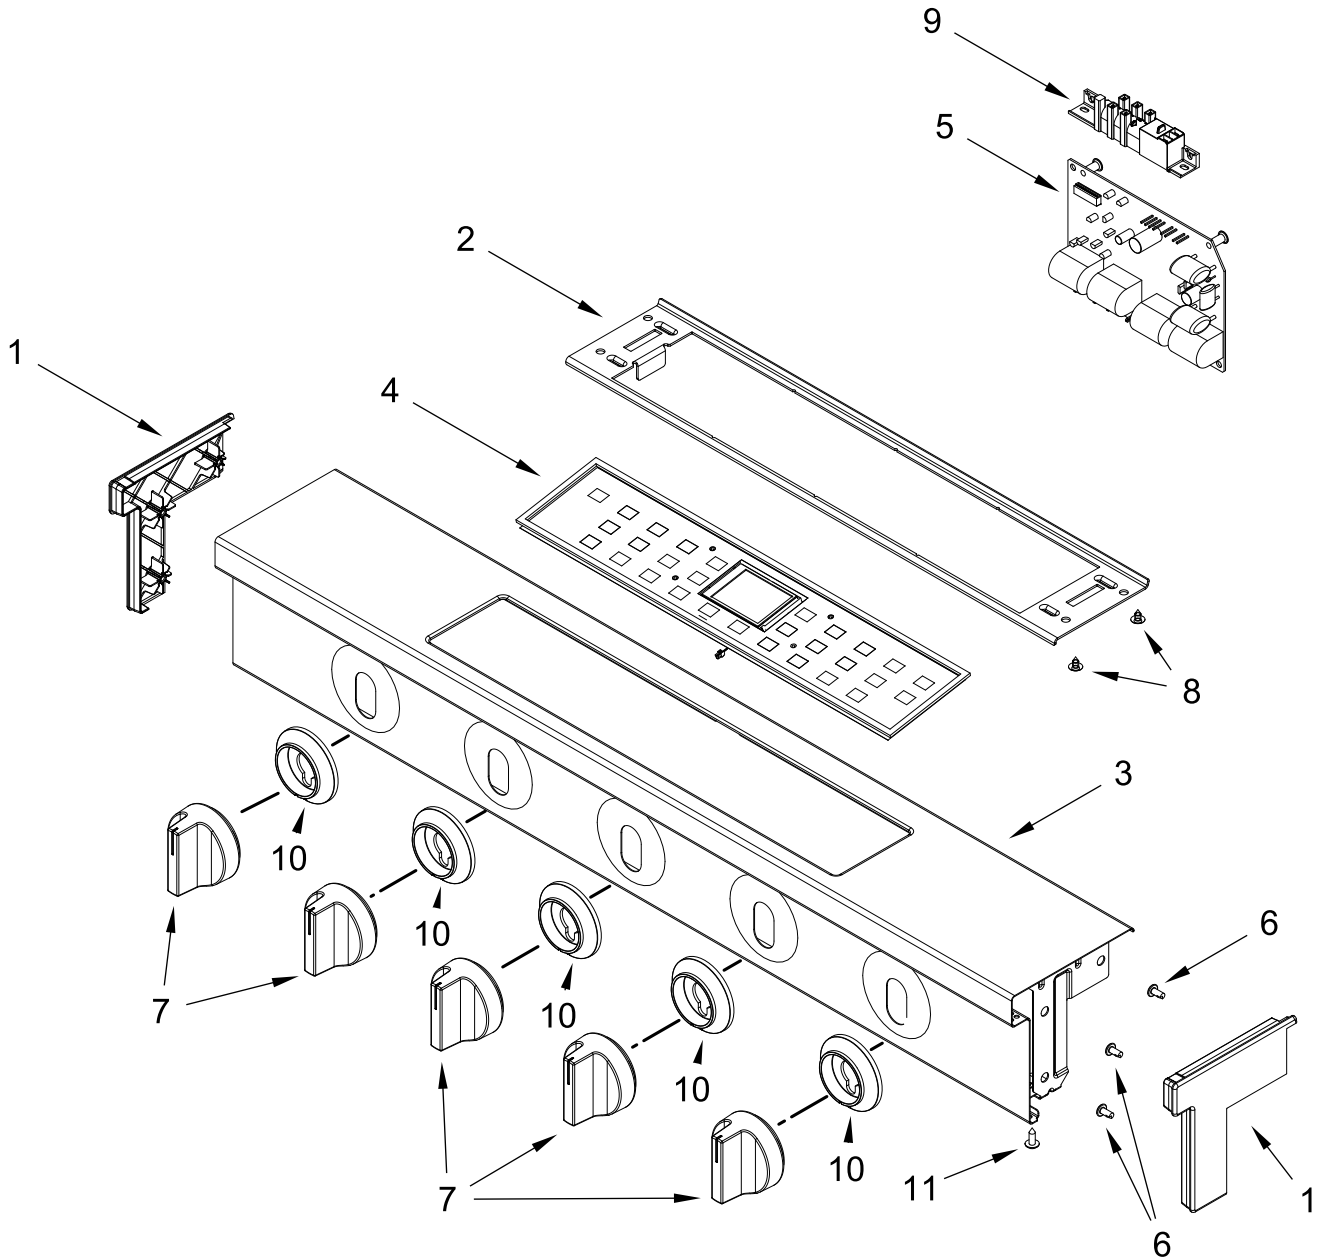

CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Endcap	4	W11333941	User Interface Assembly	8	W10327235	Screw
	W11357955	Black, (Left)				9	W11350452	Spark Module
	W11357956	Black, (Right)	5	W10818365	Module, Spark DSI	10		Bezel
2	W11291721	Mounting, Bracket	6	9780274	Screw		W11632249	Black Stainless
3		Panel, Control	7		Knob, Control	11	3196178	Screw
	W11300036	Black Stainless		W11632049	Black Stainless			


MANIFOLD PARTS

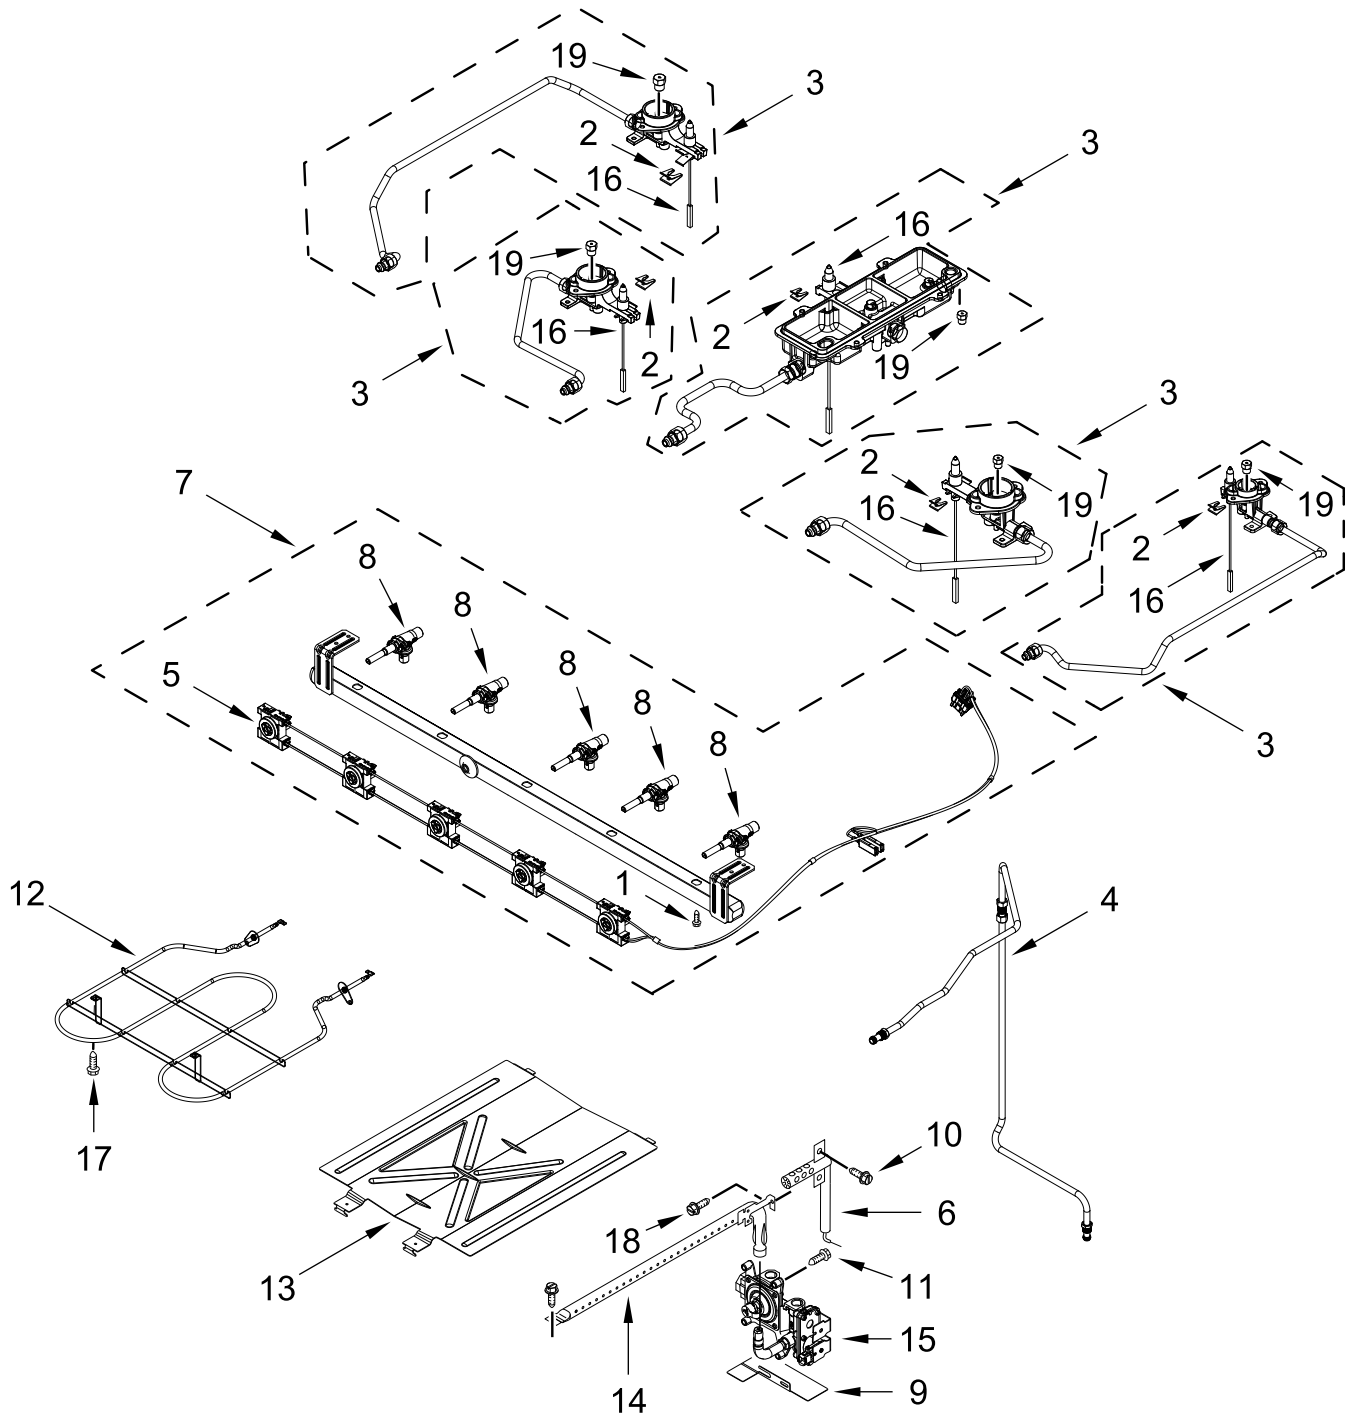

MANIFOLD PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	
1	W11402213	Screw	8	W11279839	Valve, Single (Left Front, Right Front)	16	W11428831	Electrode (Left Front, Left Rear)	
2	W10827923	Electrode, Spring					W11428858	Electrode (Right Front, Right Rear)	
3	W11300893	Orifice Holder Assembly (18K) (Left Front)		W11279838	Valve, Single (Left Rear)		W11581944	Electrode (Center)	
	W11300868	Orifice Holder Assembly (10K) (Left Rear)		W11279837	Valve, Single (Right Rear)		17	W10362924	Screw
	W11300884	Orifice Holder Assembly (18K) (Right Front)		W11629949	Valve, Single (Center)		18	3196265	Screw
	W11300872	Orifice Holder Assembly (5K) (Right Rear)	9	W10224921	Bracket, Aegis		19	W10849722	Orifice (18K) (Left Front and Right Front)
	W11634400	Orifice Holder Assembly (12K) (Center)	10	3196385	Screw			W10849719	Orifice (5K) (Right Rear)
4	W11384792	Tubing (Manifold to Regulator)	11	3400016	Screw			W10907868	Orifice (10K) (Left Rear)
5	W11637977	Harness, Igniter (Includes Switches)	12	W10714060	Element, Broiler			W11642835	Orifice (12K) (Center) FOLLOWING PARTS NOT ILLUSTRATED
6	W11450459	Electrode, Bake	13	W10184491	Spreader, Flame (Oven)			W11370714	LP Conversion Kit
7	W11279817	Manifold Assembly	14	9758078	Burner, Bake			W10838304	Orifice, LP Bake
			15	W10818355	Regulator			W11402210	Tie, Wire


CHASSIS PARTS

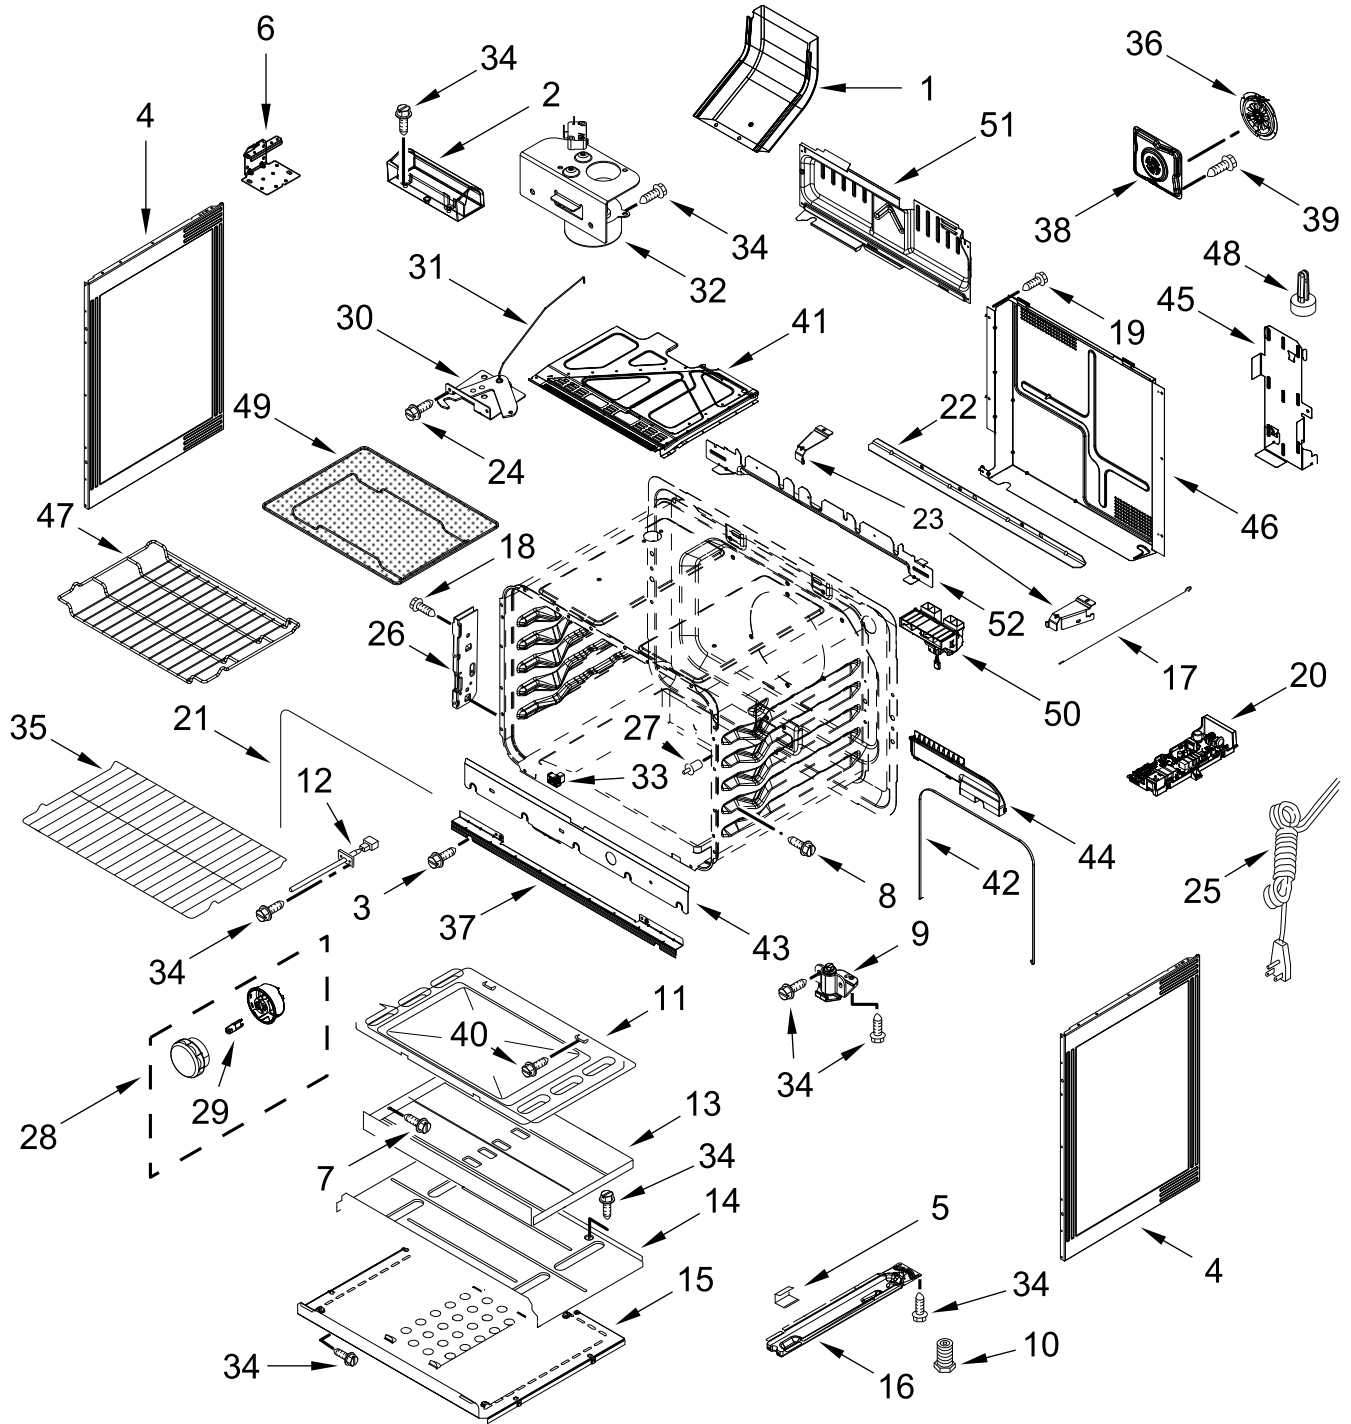

CHASSIS PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11366116	Box, Flue	20	W11734476	Control, Electronic	39	W10516115	Screw
2	W11279866	Shield, Flue	21	W11491751	Seal, Door	40	W10379120	Screw
3	W10067840	Screw	22	W10435470	Brace, Main Back	41	W11617265	Ventilation Assembly, Duct and Frame
4		Panel, Side	23		Corner, Brace	42	4820F015-59	Insulation, Strap
	W11445467	Black		W11673746	(Left)	43	W11619830	Deflector, Bracket
5	W10137382	Clip, Panel		W11673745	(Right)	44	W11637749	Rear, Duct Assembly
6	W11287215	Bracket, Cooktop Console	24	3196560	Screw	45	W11365827	Bracket, Acu
7	W10362924	Screw	25	W11661976	Cord, Power	46	W11633165	Side, Cover
8	3196560	Screw	26	W10289077	Receiver, Hinge	47	W11607819	Rack, Oven (Gull-Wing)
9	W10341186	Front Foot Assembly	27	W11511828	Switch, Door	48	8016P022-60	Glide, Main Top
10	W10058460	Foot, Leveling	28	W11634772	Light Assembly	49	W11661815	Basket, Airfry
11	W11602073	Bottom, Oven	29	W10571723	Bulb, Halogen 40 Watts	50	W11616407	Dual, Blower
12	W11633068	Sensor	30	W11612000	Front Door Latch Assembly	51	W11361778	Convection, Rear Cover
13	8053967	Baffle, Burner Oven	31	W11616635	Rod, Latch	52	W11615396	Deflector, Panel
14	8053969	Shield, Heat	32	W11612001	Rear Door Latch Assembly			FOLLOWING PARTS NOT ILLUSTRATED
15	W11640074	Shield, Lower	33	W10674705	Glide, Drawer Front		W10774939	Insulation, Wrap
16	W10390008	Base Rail Assembly (Left)	34	3196178	Screw		W11632432	Insulation, Back
	W10390007	Base Rail Assembly (Right)	35	W11173792	Rack, Oven			
17	9757239	Rod, Door Switch	36	W11635909	Fan, Convection			
18	W10031780	Screw	37	W11464547	Bracket, Front Frame			
19	3400080	Screw	38	W11373155	Cover, Conv Fan			

DOOR PARTS

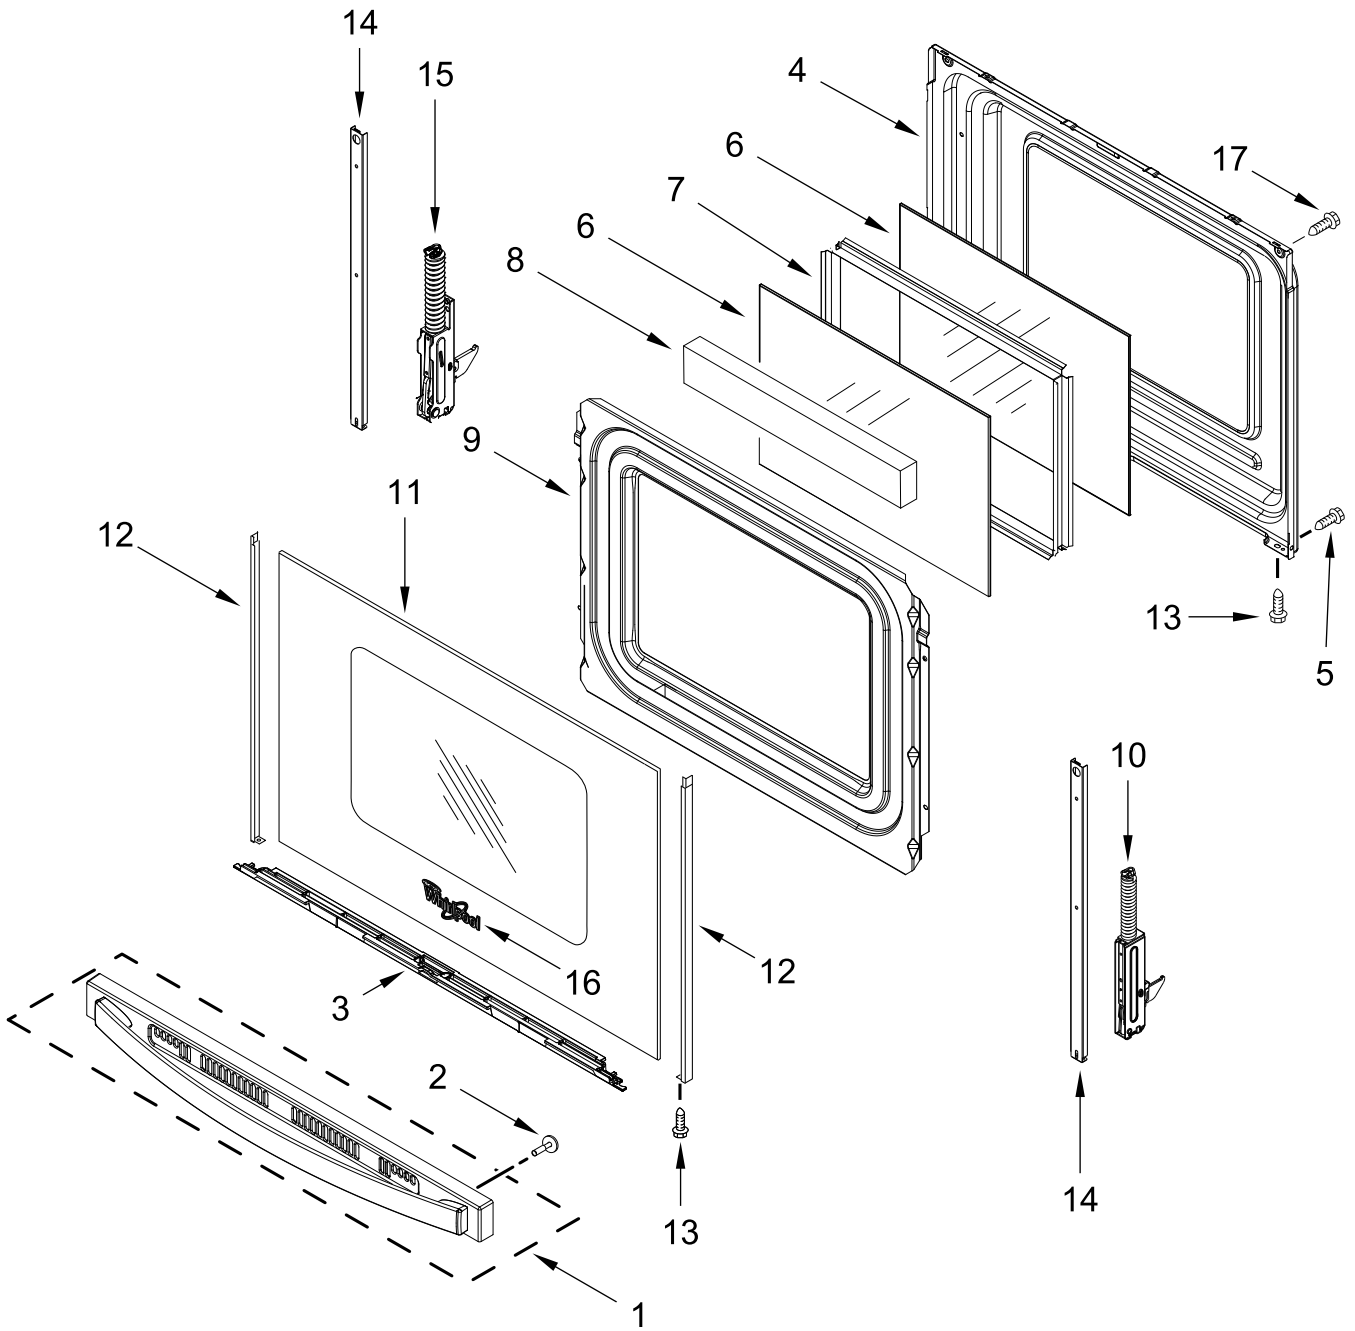


DOOR PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Handle and Vent Assembly
	W11353056	Black Stainless
2	W10465158	Screw
3		Door, Lower Trim
	W11444043	Black
4	9761344	Liner, Door
5	W10031790	Screw

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
6	9758162	Glass, Inner
7	W10316950	Frame, Glass
8	W10278991	Insulation, Door Strip
9	W11380222	Retainer, Insulation
10	W10388635	Hinge, Door (Active)
11		Glass, Outer Door
	W11729636	Black

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
12		Trim, Door
	W10746436	Black (Left)
	W10746435	Black (Right)
13	W10327235	Screw
14	W11379944	Strap, Door
15	W10440013	Hinge, Door (Active)
16	W10884775	Badge
17	W10200660	Screw

DRAWER PARTS

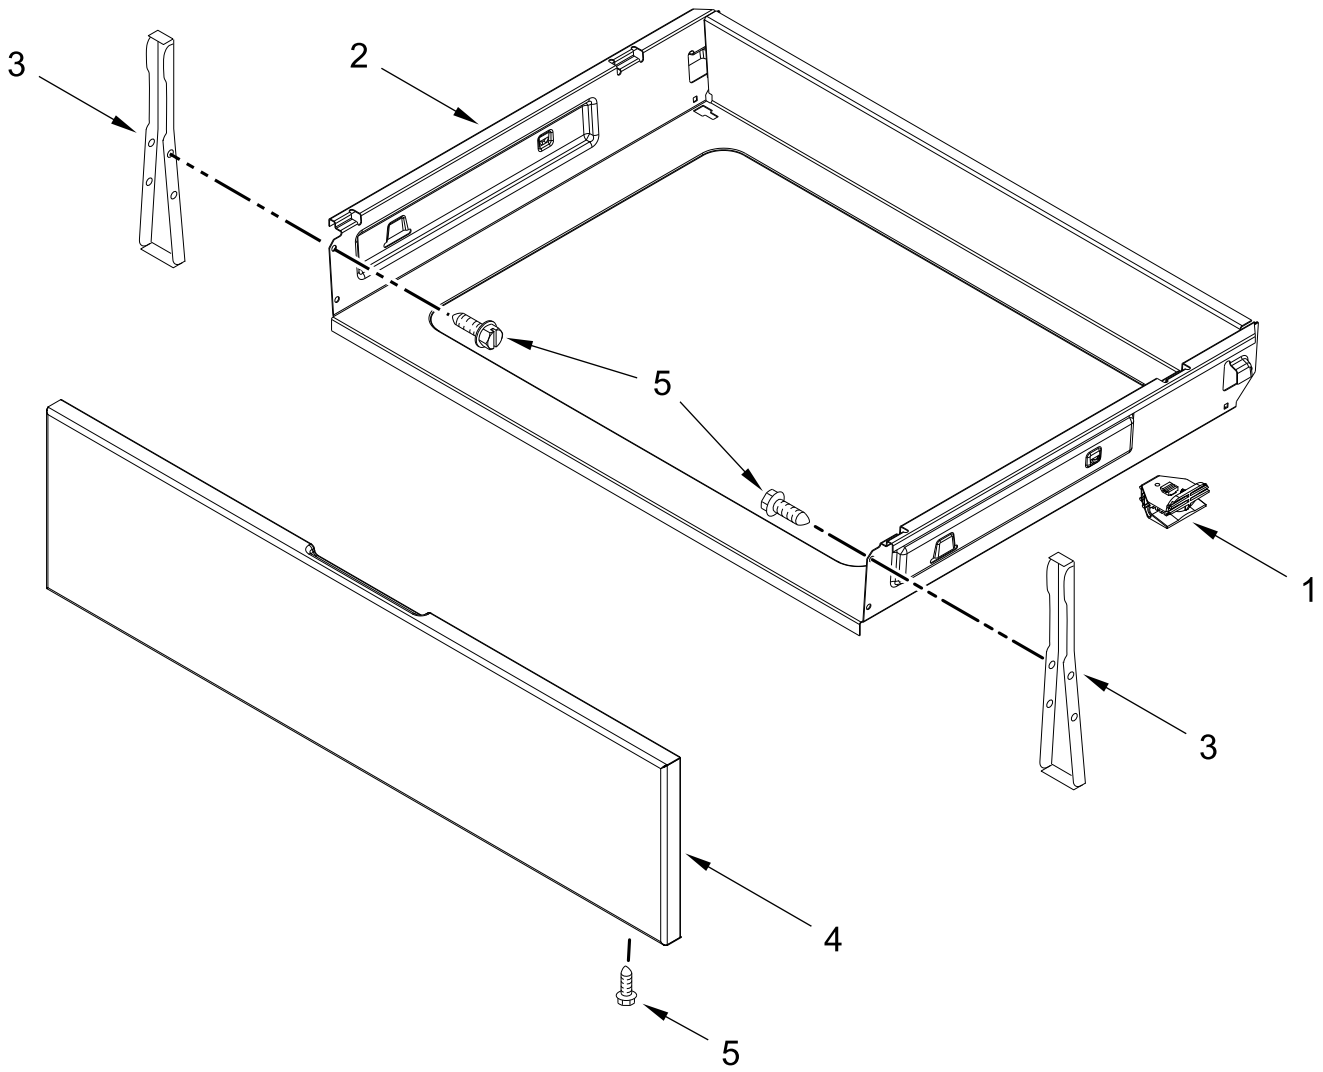

DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10674708	Glide, Drawer Rear	4		Panel, Drawer Front
2	W10688022	Drawer, Storage		W11450003	Black Stainless
3	W10462909	Bracket, Mounting	5	3196169	Screw

OPTIONAL PARTS (NOT INCLUDED)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		Following Parts Not Illustrated
		REFINISHING MATERIAL
	242756	Oven Liner Touch Up Paint
		INSULATION
	261514	Insulation (1-1/2 x 24 x 120 in)
	240132	Insulation (2-1/2 x 22 x 120 in)
		PAINT, TOUCH-UP (1/2oz.)
	4392899	Biscuit and Bisque
	72017	White
	511873	White Porcelain (2 oz.)
		PAINT, PRESSURIZED SPRAY (12 oz.)
	285006	Black
	350930	White
		PAINT, BULK (1 qt.)
	799344	White (Uncut)
		ACCESSORY PARTS
	30-48KITRC	Gas Range Connector Kit
	4396096RB	Griddle
	4396923	Broiler Pan and Grid