

 
## Accessories use tips

Placing accessories on the correct level will achieve better cooking performance. See the recipes on the online control guide.

Level:



Hot



Accessory	Functions	Level
	<input checked="" type="checkbox"/> Air fry	1
	<input checked="" type="checkbox"/> Toast <input checked="" type="checkbox"/> Bake <input checked="" type="checkbox"/> Broil	0 / 1 0 / 1 0 / 1 / 2
	<input checked="" type="checkbox"/> Air baking <input checked="" type="checkbox"/> Roast <input checked="" type="checkbox"/> Broil	1 1 0 / 1 / 2

 
\* When cooking oily or juicy foods, place an oven-proof baking plate on the oven bottom to catch drippings.

IMPORTANT: Do not use included accessories or other metal cookware during microwave functions, such as reheat, defrost, soften, melt, keep warm and cook.

## Consejos de uso de accesorios



Colocar los accesorios en el nivel correcto logrará un mejor rendimiento de cocción. Consulte las recetas en la guía de control en línea.

Nivel:



Caliente



Accesorio	Funciones	Nivel
	<input checked="" type="checkbox"/> Freír con aire	1
	<input checked="" type="checkbox"/> Tostar <input checked="" type="checkbox"/> Hornear <input checked="" type="checkbox"/> Asar a la parrilla	0 / 1 0 / 1 0 / 1 / 2
	<input checked="" type="checkbox"/> Horneado al aire <input checked="" type="checkbox"/> Asar <input checked="" type="checkbox"/> Asar a la parrilla	1 1 0 / 1 / 2

\* Cuando cocine alimentos aceitosos o jugosos, coloque una placa para hornear resistente en la parte inferior del horno para recoger las gotas.

IMPORTANTE: No use los accesorios incluidos ni otros utensilios de cocina metálicos con las funciones de microondas, como recalentar, descongelar, ablandar, derretir, mantener caliente y cocinar.