





FABRIC CARE SYSTEM

User Guide

Top-Loading High Efficiency Low-Water Washer


ABOUT YOUR ECO-FRIENDLY WASHER



Learn More

In an effort to conserve natural resources, this washer includes a condensed User Guide. A complete Owners Manual (Use & Care Guide) can be downloaded at: www.whirlpool.com/owner_center. The model number is located beneath washer lid, on tub rim.

To request a printed copy, call 1-800-253-1301 (shipping & handling fees may apply). Register your washer at www.whirlpool.com/owner_center.

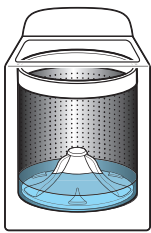

Low-Water Wash Technology

This washer uses low-water wash technology and advanced load-sensing to use less water and energy, while improving wash performance. Saving natural resources not only benefits the environment – it benefits your pocketbook.



Para una version de estas instrucciones en español, visite www.Whirlpool.com



Your safety and the safety of others are very important.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.



This is the safety alert symbol.

This symbol alerts you to potential hazards that can kill or hurt you and others.

All safety messages will follow the safety alert symbol and either the word “DANGER” or “WARNING.”

These words mean:

DANGER

You can be killed or seriously injured if you don’t immediately follow instructions.

WARNING

You can be killed or seriously injured if you don’t follow instructions.

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

IMPORTANT SAFETY INSTRUCTIONS

WARNING:

To reduce the risk of fire, electric shock, or injury to persons when using the washer, follow basic precautions, including the following:

■ Read all instructions before using the washer.

■ Do not wash articles that have been previously cleaned in, washed in, soaked in, or spotted with gasoline, dry-cleaning solvents, or other flammable or explosive substances as they give off vapors that could ignite or explode.

■ Do not add gasoline, dry-cleaning solvents, or other flammable or explosive substances to the wash water. These substances give off vapors that could ignite or explode.

■ Under certain conditions, hydrogen gas may be produced in a hot water system that has not been used for 2 weeks or more. HYDROGEN GAS IS EXPLOSIVE. If the hot water system has not been used for such a period, before using the washing machine, turn on all hot water faucets and let the water flow from each for several minutes. This will release any accumulated hydrogen gas. As the gas is flammable, do not smoke or use an open flame during this time.

■ Do not allow children to play on or in the washer. Close supervision of children is necessary when the washer is used near children.

■ Before the washer is removed from service or discarded, remove the door or lid.

■ Do not reach into the washer if the drum, tub, or agitator is moving.

■ Do not install or store the washer where it will be exposed to the weather.

■ Do not tamper with controls.

■ Do not repair or replace any part of the washer or attempt any servicing unless specifically recommended in this manual or in published user-repair instructions that you understand and have the skills to carry out.

■ See “Electrical Requirements” located in the Installation Instructions for grounding instructions.

SAVE THESE INSTRUCTIONS

State of California Proposition 65 Warnings:
WARNING: This product contains one or more chemicals known to the State of California to cause cancer.
WARNING: This product contains one or more chemicals known to the State of California to cause birth defects or other reproductive harm.

NORMAL SOUNDS YOU CAN EXPECT
At different stages of the wash cycle, you may hear sounds and noises that are different from those of your previous washer. For example, you may hear a clicking and hum at the beginning of the cycle, as the lid lock goes through a self-test. There will be different kinds of humming and whirring sounds as the washplate moves the load. And sometimes, you may hear nothing at all, as the washer determines the correct water level for your load or allows time for clothes to soak.

OPERATING YOUR WASHER



WARNING



Fire Hazard

Never place items in the washer that are dampened with gasoline or other flammable fluids.

No washer can completely remove oil.

Do not dry anything that has ever had any type of oil on it (including cooking oils).

Doing so can result in death, explosion, or fire.



WARNING



Electrical Shock Hazard

Plug into a grounded 3 prong outlet.

Do not remove ground prong.

Do not use an adapter.

Do not use an extension cord.

Failure to follow these instructions can result in death, fire, or electrical shock.

1. Sort and prepare your laundry

• Empty pockets. Loose change, buttons, or any small object can pass under the washplate and become trapped, causing unexpected sounds.

• Sort garments by recommended cycle, water temperature, and colorfastness.

• Separate heavily soiled garments from lightly soiled.

• Separate delicate garments from sturdy fabrics.

• Do not dry garments if stains remain after washing, because heat can set stains into fabric.

• Treat stains promptly.

• Close zippers, fasten hooks, tie strings and sashes, and remove non-washable trim and ornaments.

• Mend rips and tears to avoid further damage to garments during washing.


NOTE: Always read and follow fabric label instructions to avoid damage to your garments.

2. Load laundry into washer

Load garments in loose heaps evenly around the washplate. Do not load garments directly over the center of the washplate; when loaded, the center of the washplate should be visible. Try mixing different sized garments to reduce tangling.

NOTE: If using single-dose laundry packet, add to the basket prior to adding laundry.

IMPORTANT: Garments need to move freely for best cleaning and to reduce wrinkling and tangling.

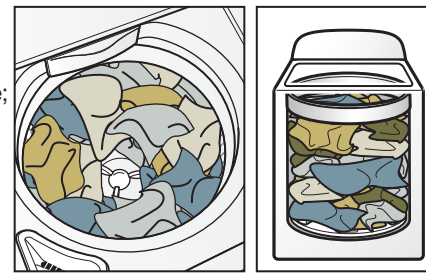

3. Dispenser loading


Use only High Efficiency detergents. The package will be marked “HE” or “High Efficiency.” Low-water washing creates excessive sudsing with a regular non-HE detergent. Using regular detergent will likely result in longer cycle times and reduced rinsing performance. It may also result in component failures and noticeable old or mildew. Follow the manufacturer’s instructions to determine the amount of detergent or laundry products to use.

NOTES:

• Fabric Softener option must be selected when using fabric softener.

• It is normal for a small amount of water to remain in the dispenser after the cycle is complete.

• Do not add single-dose laundry packet to dispenser drawer.

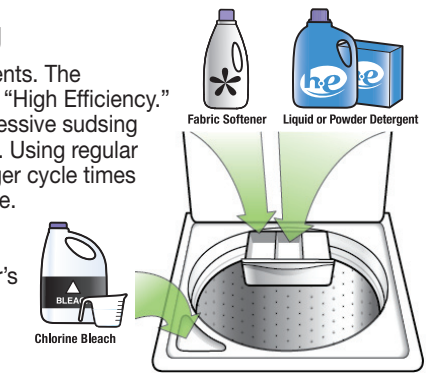

4. Power up your washer


Make sure the dispenser drawer is closed completely, close lid, and then press POWER to turn on the washer.



5. Select cycle

Turn cycle knob to choose your wash cycle. When knob is lined up with a cycle, you will hear a clicking sound. Indicator for Estimated Time Remaining will light up with a cycle time (on some models).


IF you do not want to begin a cycle immediately, you may choose DELAY WASH option (on some models).

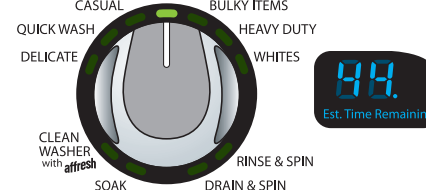

6. Select cycle settings

Once you select a cycle, the default settings for that cycle will light up. Press the cycle settings buttons to change the Temperature, Soil Level, and Spin Speed, if desired.


Always read and follow fabric care label instructions to avoid damage to your garments.

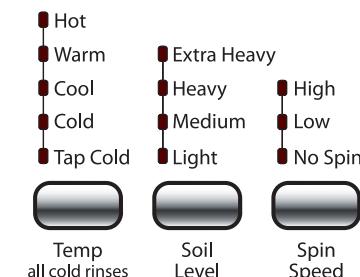

7. Select cycle options

Select any other cycle options you may wish to add, if not previously set. Some cycles will automatically add certain options such as EcoBoost™, Deep Clean, or Extra Rinse. These can be turned off, if desired.

NOTE: Not all options are available with all cycles.

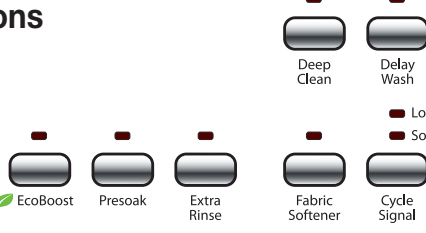

PROBLEM SOLVER



First try the solutions suggested here, or additional solutions suggested in the Troubleshooting section of the “Installation Instructions,” or visit our website at www.whirlpool.com/product_help for assistance and to possibly avoid a service call.

If you experience	Recommended Solutions
Lid Locked light is flashing	The lid is not closed. Close the lid. The washer will not start or fill with the lid open. A cycle was stopped or paused using the START/Pause/Unlock button. The washer may still be spinning. The lid will not unlock until the basket has stopped spinning. This may take several minutes if washing large loads or heavy fabrics.
Clicking or metallic noises	Objects caught in washer drain system. Empty pockets before washing. Loose items such as coins could fall between basket and tub or may block pump. It may be necessary to call for service to remove items. It is normal to hear metal items on clothing such as metal snaps, buckles, or zippers touch against the stainless steel basket.
Gurgling or humming noises	It is normal to hear the pump making a continuous humming sound with periodic gurgling or surging as final amounts of water are drained during the spin/drain cycles. The sensing light is on. You may hear the hum of the sensing spins after you have started the washer. This is normal. Sensing spins will take several minutes before water is added to the washer.
Not enough water in washer	Load not completely covered in water. This is normal operation for an HE low-water washer. The load will not be completely underwater. The washer senses load sizes and adds correct amount of water for optimal cleaning. IMPORTANT: Do not add more water to washer. Adding water lifts the garments off the washplate, resulting in less effective cleaning.
Vibration or off-balance	Load garments in loose heaps evenly around the washplate. Do not load garments directly over the center of the washplate. Adding wet items to washer or adding more water to basket could unbalance washer. Wash smaller loads to reduce imbalance. Use Bulky Items cycle for oversized, non-absorbent items such as jackets and coats. See “Cycle Guide” and “Operating Your Washer” in this User Guide.
Washer won’t run or fill, washer stops working or wash light remains on (indicating that the washer was unable to fill appropriately)	Lid must be closed for washer to run. Washer will pause during certain phases of cycle. Do not interrupt cycle. Washer may be stopped to reduce suds. The washer senses the dry load with short spins that may take 2 to 3 minutes before water is added. You may hear the hum of the spins. This is normal. Washer maybe tightly packed. Remove several garments, rearrange load evenly around the washplate. Do not load garments directly over the center of the washplate. Close lid and press START/Pause/Unlock. Add only 1 or 2 additional garments after washer has started. Do not add more water to the washer. Only use HE detergent. Suds from regular detergents can slow or stop the washer. Always measure detergent and follow detergent directions based on your load requirements. Using too much HE detergent. To remove suds, cancel cycle. Select RINSE & SPIN. Press Start/Pause/Unlock. Do not add more detergent.

PROBLEM SOLVER (cont.)

If you experience	Recommended Solutions
Washer not draining/spinning, loads are still wet or spin light remains on (indicating that the washer was unable to pump out water within ten minutes).	Empty pockets and use garment bags for small items. Small items may have been caught in pump or between basket and tub, which can slow draining. Cycles with lower spin speeds remove less water than cycles with high spin speeds. Use the recommended cycle/speed spin for your garments. To remove extra water in the load, Select Drain & Spin. Load may need to be rearranged to allow even distribution of the load in the basket. Tightly packed or unbalanced loads may not allow the washer to spin correctly, leaving the load wetter than normal. Evenly arrange the wet load for balanced spinning. Select Drain & Spin to remove excess water. See “Operating Your Washer” for loading recommendations. Wrong or too much detergent causing suds to slow or stop draining and spinning. Use only HE detergent. Always measure and follow detergent directions for your load. To remove extra suds, select Rinse & Spin. Do not add detergent.
Dry spots on load after cycle	High speed spins extract more moisture than traditional top-load washers. The high spin speeds combined with air flow during the final spin can cause items near the top of the load to develop dry spots during the final spin. This is normal.
Load not rinsed	The suds from regular detergent can keep washer from operating correctly. Use only HE detergent. Always measure detergent and follow detergent directions based on load size and soil level. The washer is less efficient at rinsing when the load is tightly packed and not loaded as recommended. Load garments in loose heaps evenly around the washplate. Do not load garments directly over the center of the washplate. Use cycle designed for the fabrics being washed. Add only 1 or 2 additional garments after washer has started.
Fabric damage	Sharp items were in pockets during wash cycle. Empty pockets, zip zippers, and snap or hook fasteners before washing to avoid snags and tears. Strings and straps could have tangled. Tie all strings and straps before starting wash load. Items may have been damaged before washing. Mend rips and broken threads in seams before washing. Fabric damage can occur in a tightly packed load. Load garments in loose heaps evenly around the washplate. Do not load garments directly over the center of the washplate. Use cycle designed for the fabrics being washed. Add only 1 or 2 additional garments after washer is started. Liquid chlorine bleach may have been added incorrectly. Do not pour liquid chlorine bleach directly onto load. Wipe up bleach spills. Undiluted bleach will damage fabrics. Do not use more than recommended by manufacturer. Do not place load items on top of bleach dispenser when loading and unloading washer. Garment care instructions may not have been followed. Always read and follow garment manufacturer’s care label instructions. See the “Cycle Guide” to match your load with the best cycle.
Load is tangling	Washer not loaded as recommended. See “Operating Your Washer” section. Select a cycle with a slower wash action and spin speed, however items will be wetter than those using a higher speed spin. See the “Cycle Guide” to match your load with the best cycle. Load garments in loose heaps evenly around the washplate. Do not load garments directly over the center of the washplate. Reduce tangling by mixing types of load items. Use the recommended cycle for the type of garments being washed.

W10455760B

2

5

6

8. Press START/Pause/Unlock to begin wash cycle

Press the START/Pause/Unlock button to start the wash cycle. Once you start the cycle, the lid will lock, and the washer will begin the sensing process to determine the correct water level for the load. No water will be added until the sensing process is complete. This may take 2 to 3 minutes.

The Cycle Status Lights show the progress of the cycle.



Not all cycles and options are available on all models. Appearance may vary.

CYCLE GUIDE						
Items To Wash:	Cycle:	Default Wash/Rinse Temperature:	Default Spin Speed:	Default Soil Level:	Default Options:	Cycle Details:
Machine-wash silks, hand-wash fabrics	Delicate	Cool/Cold	Low	Light		Use this cycle to wash lightly soiled garments indicating "Machine Washable Silks" or "Gentle" cycle on the care label. Place small garments in mesh garment bags before washing. This cycle uses a higher, preset water level.
Small loads, cottons, polyester, perm press	Quick Wash	Warm/Cold	High	Light		Use this cycle to wash small, lightly soiled loads of 2-3 garments that are needed in a hurry. This cycle features a spray rinse.
No-iron fabrics, cottons, perm press, linens, synthetics	Casual	Cool/Cold	Low	Medium		Use this cycle to wash loads of no-iron fabrics such as sport shirts, blouses, casual business clothes, permanent press, and blends.
Cottons, linens, and mixed garment loads	Normal	Warm/Cold	High	Medium	EcoBoost™	Use this cycle for normally soiled cottons and mixed fabric loads. This cycle features a spray rinse.
Cottons, linens, and mixed garment loads	Eco Normal	Warm/Cold	High	Medium		The Eco Normal cycle allows you to increase your energy savings compared to the Normal cycle. When this cycle is used, the wash cycle will use cooler wash water temperatures than the Normal cycle. This cycle features a spray rinse.
Large garments such as sheets, sleeping bags, jackets, and small rugs	Bulky Items	Warm/Cold	Low	Medium		Use this cycle to wash large garments such as jackets and coats. The washer will fill to a default deep fill water level setting regardless of the load size. This cycle uses the highest water level setting of all available cycles.
Sturdy fabrics, colorfast items, towels, jeans	Heavy Duty	Hot/Cold	High	Extra Heavy		Use this cycle for heavily soiled or sturdy garments. Water-level sensing process may take longer for some garments than for others because they will absorb more water than other fabric types.
Heavily soiled white fabrics	Whites	Hot/Cold	High	Extra Heavy	Deep Clean* Extra Rinse	Deep Clean and Extra Rinse are default options, but may be turned off. For maximum soil removal use liquid chlorine bleach.
Swimsuits and garments requiring rinsing without detergent	Rinse & Spin		High			Combines a rinse and spin for loads requiring an additional rinse cycle or to complete a load after power interruption. This cycle uses a higher, preset water level. Also use for loads that require rinsing only.
Hand-washed garments or dripping wet items	Drain & Spin		High			This cycle uses a spin to shorten drying times for heavy fabrics or special-care garments washed by hand. Use this cycle to drain washer after cancelling a cycle or completing a cycle after a power failure.
Heavily soiled fabrics	Soak	Cool/Cold	No Spin	Light		Use this cycle to soak small spots of set-in stains on fabrics. The washer will use intermittent agitation and soaking. After time has expired, water will drain, but the washer will not spin. Cycle is complete.
No clothes in washer	Clean Washer with affresh®	Hot/Cold	High	Extra Heavy		Use this cycle every 30 washes to keep the inside of your washer fresh and clean. This cycle uses a higher water level. Use with affresh® washer cleaner tablet or liquid chlorine bleach to thoroughly clean the inside of your washer. This cycle should not be interrupted. See "Washer Care". IMPORTANT: Do not place garments or other items in the washer during the Clean Washer with affresh® cycle. Use this cycle with an empty wash tub.

Unlocking the lid to add garments

If you need to open the lid to add 1 or 2 missed garments:

Press START/Pause/Unlock; the lid will unlock once the washer movement has stopped. This may take several minutes if the load was spinning at high speed. Then close lid and press START/Pause/Unlock again to restart the cycle.

If lid is left open for more than 10 minutes the water will pump out automatically.

When the cycle has finished, the DONE indicator will light and the end of cycle signal will sound (if set). Promptly remove garments after cycle has completed to avoid odor, reduce wrinkling, and rusting of metal hooks, zippers, and snaps.



WASHER CARE

Recommendations to Help Keep Your Washer Clean and Performing at its Best

- Always use High Efficiency (HE) detergents and follow the HE detergent manufacturer's instructions regarding the amount of HE detergent to use. Never use more than the recommended amount because that may increase the rate at which detergent and soil residue accumulate inside your washer, which in turn may result in undesirable odor.
- Use warm or hot wash water settings at least occasionally (not exclusively cold water washes), because they do a better job of controlling the rate at which soils and detergent accumulate.
- Always leave the washer lid open between uses to help dry out the washer and prevent the buildup of odor-causing residue.

Cleaning Your Top Loading Washer

Read these instructions completely before beginning the routine cleaning processes recommended below. This Washer Maintenance Procedure should be performed, at a minimum, once per month or every 30 wash cycles, whichever occurs sooner, to control the rate at which soils and detergent may otherwise accumulate in your washer.

Cleaning the Inside of the Washer

To keep your washer odor-free, follow the usage instructions provided above, and use this recommended monthly cleaning procedure:

Clean Washer Cycle

This washer has a special cycle that uses higher water volumes in combination with affresh® Washer Cleaner or liquid chlorine bleach to clean the inside of the washer.

Begin procedure

1. affresh® Washer Cleaner Cycle Procedure (Recommended for Best Performance):

- Open the washer lid and remove any clothing or items.
- Place an affresh® Washer Cleaner tablet in the bottom of the washer basket.
- Do not place an affresh® Washer Cleaner tablet in the detergent dispenser.
- Do not add any detergent or other chemical to the washer when following this procedure.
- Close the washer lid.
- Select the CLEAN WASHER cycle.
- Press the START button to begin the cycle. The Clean Washer Cycle Operation is described below.

NOTE: For best results, do not interrupt cycle. If cycle must be interrupted, press POWER. (For models with no POWER button, press and hold START/Pause/Unlock for three seconds.) After the cycle has ended, run a RINSE & SPIN cycle to rinse cleaner from washer.

2. Chlorine Bleach Procedure (Alternative):

- Open the washer lid and remove any clothing or items.
- Add 1 cup (236 mL) of liquid chlorine bleach to the bleach compartment.

NOTE: Use of more liquid chlorine bleach than is recommended above could cause washer damage over time.

- Close the washer lid.

- Do not add any detergent or other chemical to the washer when following this procedure.

- Select the CLEAN WASHER cycle.

- Press the START/Pause/Unlock button to begin the cycle. The Clean Washer Cycle Operation is described below.

NOTE: For best results, do not interrupt cycle. If cycle must be interrupted, press POWER. (For models with no POWER button, press and hold START/Pause/Unlock for three seconds.) After the cycle has ended, run a RINSE & SPIN cycle to rinse bleach from washer.

Description of Clean Washer Cycle Operation:

- This cycle will fill to a water level higher than in normal wash cycles to provide rinsing at a level above the water line for normal wash cycle.
- During this cycle, there will be some agitation and spinning to increase the removal of soils.

After this cycle is complete, leave the lid open to allow for better ventilation and drying of the washer interior.

Cleaning the Dispensers

After a period of using your washer, you may find some residue buildup in the washer's dispensers. To remove residue from the dispensers, wipe them with a damp cloth and towel dry. Do not attempt to remove the dispensers or trim for cleaning. The dispensers and trim are not removable. If your model has a dispenser drawer, however, remove the drawer and clean it before or after you run the Clean Washer cycle. Use an all-purpose surface cleaner, if needed.

Cleaning the Outside of the Washer

Use a soft, damp cloth or sponge to wipe away any spills. Use only mild soaps or cleaners when cleaning external washer surfaces.

IMPORTANT: To avoid damaging the washer's finish, do not use abrasive products.

Water Inlet Hoses

Replace inlet hoses after 5 years of use to reduce the risk of hose failure. Periodically inspect and replace inlet hoses if bulges, kinks, cuts, wear, or leaks are found.

When replacing your inlet hoses, mark the date of replacement on the label with a permanent marker.

NOTE: This washer does not include inlet hoses. See "Installation Instructions" for more information.

Winter Storage Care

IMPORTANT: To avoid damage, install and store washer where it will not freeze. Because some water may stay in hoses, freezing can damage washer. If storing or moving during freezing weather, winterize your washer.

To winterize washer:

- Shut off both water faucets; disconnect and drain water inlet hoses.
- Put 1 qt. (1 L) of R.V.-type antifreeze in basket and run washer on RINSE & SPIN cycle for about 30 seconds to mix antifreeze and remaining water.
- Unplug washer or disconnect power.

Non-Use and Vacation Care

Operate your washer only when you are home.

If moving, or not using your washer for a period of time, follow these steps:

- Unplug or disconnect power to washer.
- Turn off water supply to washer, to avoid flooding due to water pressure surge.

Reinstalling/Using Washer Again

To reinstall washer after non-use, vacation, winter storage, or moving:

- Refer to "Installation Instructions" to locate, level, and connect washer.
- Before using again, run washer through the following recommended procedure:

To use washer again:

- Flush water pipes and hoses. Reconnect water inlet hoses. Turn on both water faucets.
- Run washer through BULKY ITEMS cycle to clean washer and remove antifreeze, if used. Use only HE High Efficiency detergent. Use half the manufacturer's recommended amount for a medium-size load.

PROBLEM SOLVER (cont.)

If you experience	Recommended Solutions
Not cleaning or removing stains	Wash load not completely covered in water. Washer senses load size and adds correct amount of water. This is normal and necessary for clothes to move. Added more water to washer. Adding water lifts the garments off the washplate, resulting in less effective cleaning. Washer not loaded properly. Washer is less efficient at cleaning when load is tightly packed. Load garments in loose heaps evenly around the washplate. Do not load garments directly over the center of the washplate. Add only 1 or 2 additional garments after washer has started. Use only HE detergent. Not using HE detergent or using too much HE detergent. The suds from regular detergent can keep washer from operating correctly. Always measure detergent and follow manufacturer's directions based on load size and soil level. Not using correct cycle for fabric type. Use a higher soil level cycle option and warmer wash temperature to improve cleaning. If using Quick Wash cycle, wash only a few items. Use Whites and Heavy Duty cycle for tough cleaning. See the "Cycle Guide" to match your load with the best cycle. Use dispensers to avoid chlorine bleach and fabric softener staining. Load dispensers before starting a cycle. Avoid overfilling. Do not add products directly onto load. Wash like colors together and remove promptly after the cycle is complete to avoid dye transfer.
Small amount of water still in dispenser after cycle	It is normal for small amounts of water to remain in dispenser.
Incorrect dispenser operation	Do not overfill dispenser, which causes immediate dispensing. Always select Fabric Softener option to assure proper dispensing. Load dispensers before starting a cycle. Homes with low water pressure may result in residual powder in the dispenser. To avoid, select a warmer wash temperature if possible, depending on your load, or use liquid HE detergent. Use only liquid chlorine bleach in the bleach dispenser. In wash water temperatures colder than 60° F (15.6° C), some detergents do not dissolve well. Soils may be difficult to remove. To avoid, select a warmer wash temperature if possible, depending on your load, or use liquid HE detergent.
Sand, pet, hair, lint, etc. on load after washing	Heavy sand, pet hair, lint, and detergent or bleach residues may require additional rinsing. Add an Extra Rinse to the selected cycle.
Odors	Monthly maintenance not done as recommended. Run the Clean Washer with affresh® cycle after every 30 washes. See "Washer Care". Use only HE detergent. Be sure to measure correctly. Always follow the manufacturer's directions. Unload washer as soon as cycle is complete.
No sound when buttons are pressed	Button sounds can be turned on or off by pressing and holding Cycle Signal for 5 seconds.
Incorrect or wrong wash or rinse temperatures	Check for proper water supply. Make sure hot and cold inlet hoses are not reversed. Both hoses must be attached to both washer and faucet, and have both hot and cold water flowing to inlet valve. Check that inlet valve screens are not clogged. Remove any kinks in hoses. Energy-saving controlled wash temperatures. ENERGY STAR® qualified washer use cooler wash and rinse water temperatures than traditional top-load washers. This includes cooler hot and warm washes.
Single-dose laundry packet not dissolving	Make sure single-dose laundry packet is added to washer basket before adding clothes. Follow the manufacturer's recommendations.

WARRANTY

LIMITED WARRANTY

For one year from the date of purchase, when this major appliance is installed, operated, and maintained according to instructions attached to or furnished with the product, Whirlpool Corporation or Whirlpool Canada LP (hereafter "Whirlpool") will pay for Factory Specified Replacement Parts and repair labor to correct defects in materials or workmanship that existed when this major appliance was purchased.

YOUR SOLE AND EXCLUSIVE REMEDY UNDER THIS LIMITED WARRANTY SHALL BE PRODUCT REPAIR AS PROVIDED HEREIN. Service must be provided by a Whirlpool designated service company. This limited warranty is valid only in the United States or Canada and applies only when the major appliance is used in the country in which it was purchased. This limited warranty is effective from the date of original consumer purchase. Proof of original purchase date is required to obtain service under this limited warranty.

ITEMS EXCLUDED FROM WARRANTY

This limited warranty does not cover:

- Replacement parts or repair labor if this major appliance is used for other than normal, single-family household use or when it is used in a manner that is inconsistent to published user or operator instructions and/or installation instructions.
- Service calls to correct the installation of your major appliance, to instruct you on how to use your major appliance, to replace or repair house fuses, or to correct house wiring or plumbing.
- Service calls to repair or replace appliance light bulbs, air filters, or water filters. Consumable parts are excluded from warranty coverage.
- Damage resulting from accident, alteration, misuse, abuse, fire, flood, acts of God, improper installation, installation not in accordance with electrical or plumbing codes, or use of products not approved by Whirlpool.
- Cosmetic damage, including scratches, dents, chips or other damage to the finish of your major appliance, unless such damage results from defects in materials or workmanship and is reported to Whirlpool within 30 days from the date of purchase.
- Pick up and delivery. This major appliance is intended to be repaired in your home.
- Repairs to parts or systems resulting from unauthorized modifications made to the appliance.
- Expenses for travel and transportation for product service if your major appliance is located in a remote area where service by an authorized Whirlpool servicer is not available.
- The removal and reinstallation of your major appliance if it is installed in an inaccessible location or is not installed in accordance with Whirlpool published installation instructions.
- Replacement parts or repair labor on major appliances with original model/serial numbers that have been removed, altered, or cannot be easily determined.

The cost of repair or replacement under these excluded circumstances shall be borne by the customer.

DISCLAIMER OF IMPLIED WARRANTIES

IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO ONE YEAR OR THE SHORTEST PERIOD ALLOWED BY LAW. Some states and provinces do not allow limitations on the duration of implied warranties of merchantability or fitness, so this limitation may not apply to you. This warranty gives you specific legal rights, and you also may have other rights that vary from state to state or province to province.

DISCLAIMER OF REPRESENTATIONS OUTSIDE OF WARRANTY

Whirlpool makes no representations about the quality, durability, or need for service or repair of this major appliance other than the representations contained in this Warranty. If you want a longer or more comprehensive warranty than the limited warranty that comes with this major appliance, you should ask Whirlpool or your retailer about buying an extended warranty.

LIMITATION OF REMEDIES; EXCLUSION OF INCIDENTAL AND CONSEQUENTIAL DAMAGES

YOUR SOLE AND EXCLUSIVE REMEDY UNDER THIS LIMITED WARRANTY SHALL BE PRODUCT REPAIR AS PROVIDED HEREIN. WHIRLPOOL SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES. Some states and provinces do not allow the exclusion or limitation of incidental or consequential damages, so these limitations and exclusions may not apply to you. This warranty gives you specific legal rights, and you also may have other rights that vary from state to state or province to province.

If outside the 50 United States and Canada, contact your authorized Whirlpool dealer to determine if another warranty applies.

If you think you need repair service, first see the "Troubleshooting" section of the Use & Care Guide. If you are unable to resolve the problem after checking "Troubleshooting," additional help can be found by checking the "Assistance or Service" section or by calling Whirlpool. In the U.S.A., call 1-800-253-1301. In Canada, call 1-800-807-6777.

10/11

Keep this book and your sales slip together for future reference. You must provide proof of purchase or installation date for in-warranty service.

Write down the following information about your major appliance to better help you obtain assistance or service if you ever need it. You will need to know your complete model number and serial number. You can find this information on the model and serial number label located on the product.

Dealer name _____
Address _____
Phone number _____
Model number _____
Serial number _____
Purchase date _____

*Or Clean Boost (on some models).

6. Sélectionner les réglages de programme

Après avoir sélectionné un programme, les réglages par défaut correspondant à ce programme s'allument. Appuyer sur les boutons de réglages du programme pour modifier la température, le niveau de saleté et la vitesse d'essorage si désiré.

Toujours lire et suivre les instructions des étiquettes de soin des tissus pour éviter d'endommager les vêtements.

8. Appuyer sur START/Pause/Unlock (mise en marche/pause/déverrouillage) pour démarrer le programme de lavage

Appuyer sur le bouton START/Pause/Unlock (mise en marche/pause/déverrouillage) pour démarrer le programme de lavage. Une fois que l'on démarre le programme, le couvercle se verrouille et la laveuse entame un processus de détection pour corriger le niveau d'eau de la charge. L'eau n'est pas ajoutée tant que le processus de détection n'est pas terminé. Cela peut prendre 2 à 3 minutes.

Les témoins lumineux de programme indiquent la progression du programme.



Déverrouiller le couvercle pour ajouter les vêtements.

Si l'on doit ouvrir le couvercle pour ajouter 1 ou 2 vêtements oubliés : Appuyer sur START/Pause/Unlock (mise en marche/pause/déverrouillage); le couvercle se déverrouille une fois que le mouvement de la laveuse a cessé. Il se peut que cela prenne plusieurs minutes si la laveuse essorait la charge à grande vitesse. Fermer ensuite le couvercle et appuyer de nouveau sur START/Pause/Unlock (mise en marche/pause/déverrouillage) pour redémarrer le programme.

Si on laisse le couvercle ouvert pendant plus de 10 minutes, l'eau est pompée et vidangée automatiquement.

Lorsque le programme est terminé, le témoin lumineux DONE (terminé) s'allume et le signal de fin de programme retentit (si activé). Retirer rapidement les vêtements une fois le programme terminé pour empêcher la formation d'odeurs, réduire le froissement et empêcher les crochets métalliques, fermetures à glissière et boutons-pression de rouiller.

7. Sélectionner les options de programme

Sélectionner les autres options de programme que l'on souhaite ajouter si elles ne sont pas déjà programmées. Certains programmes ajoutent automatiquement certaines options telles que EcoBoost™ (économie d'énergie), Deep Clean (nettoyage en profondeur) ou Extra Rinse (rinçage supplémentaire). Elles peuvent être désactivées si désiré.

REMARQUE : Toutes les options ne sont pas disponibles avec tous les programmes.

Certains programmes et options ne sont pas disponibles sur certains modèles. L'apparence des appareils peut varier.

GUIDE DE PROGRAMMES					
Articles à laver :	Programme :	Température de lavage/rinçage par défaut :	Vitesse d'essorage par défaut :	Niveau de saleté par défaut :	Options disponibles par défaut :
Articles en soie lavables en machine, tissus lavables à la main	Delicate (Articles délicat)	Fraîche/froide (Cool/Cold)	Basse (Low)	Léger (Light)	
Petites charges, coton, polyester, pressage permanent	Quick Wash (Rafraîchissement lavage)	Tiède/froide (Warm/Cold)	Élevée (High)	Léger (Light)	
Articles non repassables, articles en coton, de pressage permanent, linge de maison, tissus synthétiques	Casual (Tout-aller)	Fraîche/froide (Cool/Cold)	Basse (Low)	Moyen (Medium)	
Articles en coton, linge de maison et charges mixtes	Normal	Tiède/froide (Warm/Cold)	Élevée (High)	Moyen (Medium)	EcoBoost™
Articles en coton, linge de maison et charges mixtes	Eco Normal	Tiède/froide (Warm/Cold)	Élevée (High)	Moyen (Medium)	
Articles de grande taille tels que les draps, sacs de couchage, vestes et petits tapis	Bulky Items (Articles volumineux)	Tiède/froide (Warm/Cold)	Basse (Low)	Moyen (Medium)	
Tissus résistants, articles grand-teint, serviettes, jeans	Heavy Duty (Service intense)	Chaude/froide (Hot/Cold)	Élevée (High)	Très élevé (Extra Heavy)	

GUIDE DE PROGRAMMES					
Articles à laver :	Programme :	Température de lavage/rinçage par défaut :	Vitesse d'essorage par défaut :	Niveau de saleté par défaut :	Options disponibles par défaut :
Tissus blancs très sales	Whites (Blancs)	Chaude/froide (Hot/Cold)	Élevée (High)	Très élevé (Extra Heavy)	Deep Clean* (Nettoyage en profondeur)* Extra Rinse (Rinçage supplémentaire)
Maillots et articles nécessitant un rinçage sans détergent	Rinse & Spin (Rinçage et essorage)		Élevée (High)		Combine un rinçage et un essorage pour les charges nécessitant un programme de rinçage supplémentaire ou pour finir de prendre soin d'une charge après une coupure de courant. Ce programme utilise un niveau d'eau prédéterminé plus élevé. Utiliser également pour les charges nécessitant uniquement un rinçage.
Articles lavés à la main et articles très humides	Drain & Spin (Vidange et essorage)		Élevée (High)		Ce programme utilise un essorage pour réduire les durées de séchage pour les tissus lourds et les articles lavés à la main nécessitant un soin spécial. Utiliser ce programme pour vidanger la laveuse après avoir annulé un programme ou terminé un programme après une coupure de courant.
Tissus très sales	Soak (Trempe)	Fraîche/froide (Cool/Cold)	Pas d'essorage (No Spin)	Léger (Light)	Utiliser ce programme pour faire tremper les petites taches tenaces sur les tissus. La laveuse alterne périodes d'agitation et de trempage. Une fois la durée expirée, l'eau est évacuée mais la laveuse n'effectue pas d'essorage. Le programme est terminé.
Pas de vêtements dans la laveuse	Clean Washer with affresh® (Nettoyage de la laveuse avec affresh®)	Chaude/froide (Hot/Cold)	Élevée (High)	Très élevé (Extra Heavy)	Utiliser ce programme à l'issue de chaque série de 30 lavages pour que l'intérieur de la laveuse reste frais et propre. Ce programme utilise un niveau d'eau plus élevé. Utiliser une tablette de nettoyant pour laveuse affresh® ou de l'eau de Javel pour nettoyer soigneusement l'intérieur de la laveuse. Ce programme ne doit pas être interrompu. Voir "Entretien de la laveuse". IMPORTANT : Ne pas placer de vêtements ou autres articles dans la laveuse pendant le programme Clean Washer with affresh® (nettoyage de la laveuse avec affresh®). Utiliser ce programme avec une cuve de lavage vide.

*Ou Clean Boost (nettoyage renforcé) (sur certains modèles)

ENTRETIEN DE LA LAVEUSE	
Recommandations pour une laveuse propre et pour un niveau de performance optimal 1. Toujours utiliser des détergents haute efficacité (HE) et suivre les recommandations du fabricant de détergent HE pour déterminer la quantité de détergent HE à utiliser. Ne jamais utiliser plus que la quantité recommandée de détergent, car ceci peut augmenter le taux d'accumulation de résidus de détergent et de souillures à l'intérieur de la laveuse, ce qui pourrait entraîner la formation d'odeurs indésirables. 2. Exécuter périodiquement des lavages avec de l'eau tiède ou chaude (et non pas exclusivement des lavages à l'eau froide), car l'eau tiède ou chaude permet de contrôler plus efficacement la vitesse à laquelle les saletés et les résidus de détergent s'accumulent. 3. Veiller à toujours laisser le couvercle de la laveuse ouvert entre deux utilisations pour qu'elle puisse sécher, et pour éviter l'accumulation de résidus générateurs d'odeurs. Nettoyage de la laveuse à chargement par le dessus Lire complètement ces instructions avant d'entreprendre les opérations de nettoyage de routine recommandées ci-dessous. Le processus d'entretien de la laveuse doit être exécuté au moins une fois par mois ou à intervalles de 30 lavages (selon la période la plus courte des deux); ceci permettra de contrôler la vitesse à laquelle les résidus de détergent et les souillures s'accumulent dans la laveuse. Nettoyage de l'intérieur de la laveuse Pour que l'intérieur de la laveuse reste libre de toute odeur, suivre les instructions d'utilisation indiquées ci-dessus et effectuer la procédure de nettoyage mensuelle recommandée suivante : Programme Clean Washer (nettoyage de la laveuse) Cette laveuse comporte un programme spécial qui utilise un volume d'eau plus important en conjonction avec le nettoyant pour laveuse affresh® ou un agent de blanchiment liquide au chlore pour nettoyer l'intérieur de la laveuse. Début de la procédure 1. Procédure de nettoyage avec le nettoyant pour laveuse affresh® (recommandé pour une performance optimale) : a. Ouvrir le couvercle de la laveuse et retirer tout vêtement ou article.	 b. Placer une pastille de nettoyant pour laveuse affresh® dans le fond du panier de la laveuse. c. Ne pas placer de pastille de nettoyant pour laveuse affresh® dans le distributeur à détergent. d. Ne pas ajouter de détergent ou autre composé chimique dans la laveuse lors de l'exécution de cette procédure. e. Rabattre le couvercle de la laveuse. f. Sélectionner le programme CLEAN WASHER (nettoyage de la laveuse). g. Appuyer sur le bouton START/Pause/Unlock (mise en marche/pause/déverrouillage) pour démarrer le programme. Le processus du programme de nettoyage de la laveuse est décrit ci-dessous. REMARQUE : Pour de meilleurs résultats, ne pas interrompre le programme. Si l'on doit annuler le programme, appuyer sur POWER (mise sous tension). (Pour les modèles dépourvus du bouton POWER [mise sous tension], appuyer sur START/Pause/Unlock [mise en marche/pause/déverrouillage] pendant trois secondes). Une fois le programme de nettoyage de la laveuse terminé, effectuer un programme RINSE & SPIN (rinçage et essorage) pour rincer le nettoyant de la laveuse. 2. Méthode avec agent de blanchiment au chlore (autre option) : a. Ouvrir le couvercle de la laveuse et retirer tout vêtement ou article. b. Verser 1 tasse (236 mL) d'agent de blanchiment liquide au chlore dans le distributeur d'agent de blanchiment. REMARQUE : L'emploi d'une quantité d'agent de blanchiment liquide au chlore supérieure à ce qui est recommandé ci-dessus pourrait endommager la laveuse avec le temps. c. Rabattre le couvercle de la laveuse. d. Ne pas ajouter de détergent ou autre composé chimique dans la laveuse lors de l'exécution de cette procédure. e. Sélectionner le programme CLEAN WASHER (nettoyage de la laveuse). f. Appuyer sur le bouton START/Pause/Unlock (mise en marche/pause/déverrouillage) pour démarrer le programme. Le processus du programme de nettoyage de la laveuse est décrit ci-dessous.

RÉSOLUTION DE PROBLÈMES (suite)

Si les phénomènes suivants se produisent	Solutions recommandées
La charge est emmêlée	La laveuse n'a pas été chargée tel que recommandé. Voir la section "Utilisation de la laveuse". Sélectionner un programme comportant un lavage et un essorage plus lents. Noter cependant que les articles seront plus mouillés que ceux pour lesquels on utilise une vitesse d'essorage supérieure. Voir le "Guide de programmes" pour utiliser le programme qui correspond le mieux à la charge utilisée. Charger les vêtements sans les tasser et de façon uniforme le long du plateau de lavage. Ne pas placer les vêtements directement au centre du plateau de lavage. Réduire l'emmêlement en mêlant plusieurs types d'articles dans la charge. Utiliser le programme recommandé correspondant aux types de vêtements à laver.
Ne nettoie ou ne détache pas	La charge de lavage n'est pas complètement submergée dans l'eau. La laveuse détecte la taille de la charge et ajoute la quantité d'eau adéquate. Ceci est normal et nécessaire au mouvement des vêtements. Davantage d'eau a été ajoutée à la laveuse. De l'eau supplémentaire éloignerait le linge du plateau de lavage en le soulevant, ce qui affaiblirait la performance de nettoyage. La laveuse n'est pas chargée correctement. La laveuse effectuera un nettoyage moins performant si l'on tasse les vêtements à l'intérieur. Charger les vêtements sans les tasser et de façon uniforme le long du plateau de lavage. Ne pas placer les vêtements directement au centre du plateau de lavage. Si l'on souhaite ajouter des vêtements une fois que la laveuse a démarré, n'en rajouter qu'un ou deux. Utiliser uniquement un détergent HE. Détergent HE non utilisé ou utilisation excessive de détergent HE. La mousse produite par un détergent ordinaire peut empêcher la laveuse de fonctionner correctement. Toujours mesurer la quantité de détergent et suivre les instructions du fabricant en fonction de la taille et du niveau de saleté de la charge. Programme utilisé incorrect par rapport au type de tissu. Utiliser une option de programme de niveau de saleté plus élevée et une température de lavage plus chaude pour améliorer le nettoyage. Si l'on utilise un programme Quick Wash (lavage rapide), ne laver que quelques articles. Utiliser le programme Whites (blancs) et Heavy Duty (service intense) pour un nettoyage puissant. Voir le "Guide de programmes" pour utiliser le programme qui correspond le mieux à la charge utilisée. Utiliser les distributeurs pour éviter que l'agent de blanchiment au chlore ou l'assouplissant pour tissu ne tachent les vêtements. Remplir les distributeurs avant de démarrer un programme. Éviter de les remplir excessivement. Ne pas verser de produits directement sur la charge. Laver ensemble les couleurs semblables et les retirer rapidement une fois le programme terminé pour éviter tout transfert de teinture.
Une petite quantité d'eau reste au fond du distributeur une fois le programme terminé.	Il est normal qu'il reste une petite quantité d'eau dans le distributeur.
Fonctionnement incorrect du distributeur	Ne pas remplir excessivement le distributeur car cela entraînerait une distribution immédiate du produit utilisé. Toujours sélectionner l'option Fabric Softener (assouplissant pour tissu) pour garantir une bonne distribution. Remplir les distributeurs avant de démarrer un programme. Pour les domiciles présentant une basse pression d'eau, il est possible qu'il reste de la poudre dans le distributeur. Pour éviter cela, sélectionner une température de lavage plus chaude (si possible - en fonction de la charge) ou utiliser du détergent liquide HE. Utiliser seulement un agent de blanchiment liquide dans le distributeur d'agent de blanchiment. Dans les températures d'eau de lavage inférieures à 60°F (15,6°C), certains détergents ne se diluent pas bien. Les saletés peuvent être difficiles à enlever. Pour éviter cela, sélectionner une température de lavage plus chaude (si possible - en fonction de la charge) ou utiliser du détergent liquide HE.
Sable, poils d'animaux, charpie, etc. sur la charge après le lavage	Des résidus lourds de sable, de poils d'animaux, de charpie et de détergent ou d'agent de blanchiment peuvent nécessiter un rinçage supplémentaire. Ajouter un rinçage supplémentaire au programme sélectionné.
Odeurs	L'entretien mensuel n'est pas effectué tel que recommandé. Faire fonctionner le programme Clean Washer with affresh® (nettoyage de la laveuse avec affresh®) après chaque série de 30 lavages. Voir "Entretien de la laveuse". Utiliser uniquement un détergent HE. Veiller à mesurer correctement. Toujours suivre les directives du fabricant. Décharger la laveuse dès que le programme est terminé.
Aucun son lorsqu'on appuie sur les boutons	Le son des boutons peut être activé ou désactivé en appuyant sur Cycle Signal (signal de programme) pendant 5 secondes.
Températures de lavage ou de rinçage incorrectes	Vérifier que l'alimentation en eau est adéquate. Vérifier que les tuyaux d'arrivée d'eau chaude et d'eau froide ne sont pas inversés. Les deux tuyaux doivent être raccordés à la fois à la laveuse et au robinet, et la valve d'arrivée doit recevoir à la fois de l'eau chaude et de l'eau froide. Vérifier que les tamis des valves d'arrivée ne sont pas obstrués. Éliminer toute déformation des tuyaux. Températures de lavage contrôlées pour économies d'énergie. Les laveuses certifiées ENERGY STAR® utilisent des températures de lavage et de rinçage inférieures à celles d'une laveuse traditionnelle à chargement par le dessus. Cela signifie également des températures de lavage à l'eau chaude et à l'eau tiède inférieures.
Le sachet de lessive à dose unique ne se dissout pas	Veiller à ajouter le sachet de lessive à dose unique dans le panier de la laveuse avant d'ajouter les vêtements. Suivre les recommandations du fabricant.

GARANTIE

GARANTIE LIMITÉE

Pendant un an à compter de la date d'achat, lorsque ce gros appareil ménager est utilisé et entretenu conformément aux instructions jointes à ou fournies avec le produit, Whirlpool Corporation ou Whirlpool Canada LP (ci-après désignées "Whirlpool") paiera pour les pièces spécifiées par l'usine et la main-d'œuvre pour corriger les vices de matériaux ou de fabrication qui existaient déjà lorsque ce gros appareil ménager a été acheté.

LE SEUL ET EXCLUSIF RECOURS DU CLIENT DANS LE CADRE DE LA PRÉSENTE GARANTIE LIMITÉE CONSISTE EN LA RÉPARATION PRÉVUE CI-DESSUS. Le service doit être fourni par une compagnie de service désignée par Whirlpool. Cette garantie limitée est valide uniquement aux États-Unis ou au Canada et s'applique exclusivement lorsque le gros appareil ménager est utilisé dans le pays où il a été acheté. La présente garantie limitée entre en vigueur à compter de la date d'achat initial par le consommateur. Une preuve de la date d'achat d'origine est exigée pour obtenir un service dans le cadre de la présente garantie limitée.

ÉLÉMENTS EXCLUS DE LA GARANTIE

La présente garantie limitée ne couvre pas :

- Les pièces de rechange ou la main-d'œuvre lorsque ce gros appareil ménager est utilisé à des fins autres que l'usage unifamilial normal ou lorsque les instructions d'installation et/ou les instructions de l'opérateur ou de l'utilisateur fournies ne sont pas respectées.
- Les visites de service pour rectifier l'installation du gros appareil ménager, montrer à l'utilisateur comment utiliser l'appareil, remplacer ou réparer des fusibles ou rectifier le câblage ou la plomberie du domicile.
- Les visites de service pour réparer ou remplacer les ampoules électriques, les filtres à air ou les filtres à eau de l'appareil. Les pièces consommables ne sont pas couvertes par la garantie.
- Les dommages imputables à : accident, modification, usage impropre ou abusif, incendie, inondation, actes de Dieu, installation fautive ou installation non conforme aux codes d'électricité ou de plomberie, ou l'utilisation de produits non approuvés par Whirlpool.
- Les défauts apparents, notamment les éraflures, les bosses, fissures ou tout autre dommage au fini du gros appareil ménager, à moins que ces dommages soient dus à des vices de matériaux ou de fabrication et soient signalés à Whirlpool dans les 30 jours suivant la date d'achat.
- L'enlèvement et la livraison. Ce gros appareil ménager est conçu pour être réparé à domicile.
- Les réparations aux pièces ou systèmes résultant d'une modification non autorisée faite à l'appareil.
- Les frais de déplacement et de transport pour le service d'un produit si votre gros appareil ménager est situé dans une région éloignée où un service d'entretien Whirlpool autorisé n'est pas disponible.
- La dépose et la réinstallation de votre gros appareil ménager si celui-ci est installé dans un endroit inaccessible ou n'est pas installé conformément aux instructions d'installation fournies par Whirlpool.
- Les pièces de rechange ou la main-d'œuvre pour les gros appareils ménagers dont les numéros de série et de modèle originaux ont été enlevés, modifiés ou qui ne peuvent pas être facilement identifiés.

Le coût d'une réparation ou d'un remplacement dans le cadre de ces circonstances exclues est à la charge du client.

CLAUSE D'EXONÉRATION DE RESPONSABILITÉ AU TITRE DES GARANTIES IMPLICITES

LES GARANTIES IMPLICITES, Y COMPRIS LES GARANTIES APPLICABLES DE QUALITÉ MARCHANDE OU D'APTITUDE À UN USAGE PARTICULIER, SONT LIMITÉES À UN AN OU À LA PLUS COURTE PÉRIODE AUTORISÉE PAR LA LOI. Certains États et certaines provinces ne permettent pas de limitation sur la durée de garanties implicites de qualité marchande ou d'aptitude à un usage particulier, de sorte que la limitation ci-dessus peut ne pas être applicable dans votre cas. Cette garantie vous confère des droits juridiques spécifiques, et vous pouvez également jouir d'autres droits qui peuvent varier d'une juridiction à l'autre.

EXONÉRATION DE RESPONSABILITÉ EN DEHORS DE LA GARANTIE

Whirlpool ne prend aucun engagement quant à la qualité ou la durabilité de l'appareil, ou en cas de dépannage ou de réparation nécessaire sur ce gros appareil ménager, autre que les engagements énoncés dans la présente garantie. Si vous souhaitez une garantie prolongée ou plus complète que la garantie limitée fournie avec ce gros appareil ménager, renseignez-vous auprès de Whirlpool ou de votre détaillant à propos de l'achat d'une extension de garantie.

LIMITATION DES RECOURS; EXCLUSION DES DOMMAGES FORTUITS OU INDIRECTS

LE SEUL ET EXCLUSIF RECOURS DU CLIENT DANS LE CADRE DE LA PRÉSENTE GARANTIE LIMITÉE CONSISTE EN LA RÉPARATION PRÉVUE CI-DESSUS. WHIRLPOOL N'ASSUME AUCUNE RESPONSABILITÉ POUR LES DOMMAGES FORTUITS OU INDIRECTS. Certains États et certaines provinces ne permettent pas l'exclusion ou la limitation des dommages fortuits ou indirects de sorte que ces limitations et exclusions peuvent ne pas être applicables dans votre cas. Cette garantie vous confère des droits juridiques spécifiques, et vous pouvez également jouir d'autres droits qui peuvent varier d'une juridiction à l'autre.

Si vous résidez à l'extérieur du Canada et des 50 États des États-Unis, contactez votre marchand Whirlpool autorisé pour déterminer si une autre garantie s'applique.

Si vous avez besoin d'un service de réparation, voir d'abord la section "Dépannage" du Guide d'utilisation et d'entretien. Si vous n'êtes pas en mesure de résoudre le problème après avoir consulté la section "Dépannage", vous pouvez trouver de l'aide supplémentaire en consultant la section "Assistance ou Service" ou en appelant Whirlpool. Aux É.U., composer le **1-800-253-1301**. Au Canada, composer le **1-800-807-6777**.

Conservez ce manuel et votre reçu de vente ensemble pour référence ultérieure. Pour le service sous garantie, vous devez présenter un document prouvant la date d'achat ou d'installation.

Inscrivez les renseignements suivants au sujet de votre gros appareil ménager pour mieux vous aider à obtenir assistance ou service en cas de besoin. Vous devrez connaître le numéro de modèle et le numéro de série au complet. Vous trouverez ces renseignements sur la plaque signalétique située sur le produit.

Nom du marchand _____
Adresse _____
Numéro de téléphone _____
Numéro de modèle _____
Numéro de série _____
Date d'achat _____

W10455760B

© 2012 Whirlpool Corporation.
All rights reserved.
Tous droits réservés.

® Registered Trademark/™ Trademark of Whirlpool, U.S.A.
Whirlpool Canada LP licensee in Canada
® Marque déposée/™ Marque de commerce de Whirlpool, U.S.A.
Emplot sous licence par Whirlpool Canada LP au Canada

02/12
Printed in U.S.A.
Imprimé aux É.-U.