Whirlpool®


Dishwasher

MODELS:

WDT740SALB2 (Black)
WDT740SALW2 (White)
WDT740SALZ2 (Stainless)

07/12/2024
© 2024 Whirlpool Corporation
Part No. W11685773 Rev. B


DOOR AND PANEL PARTS

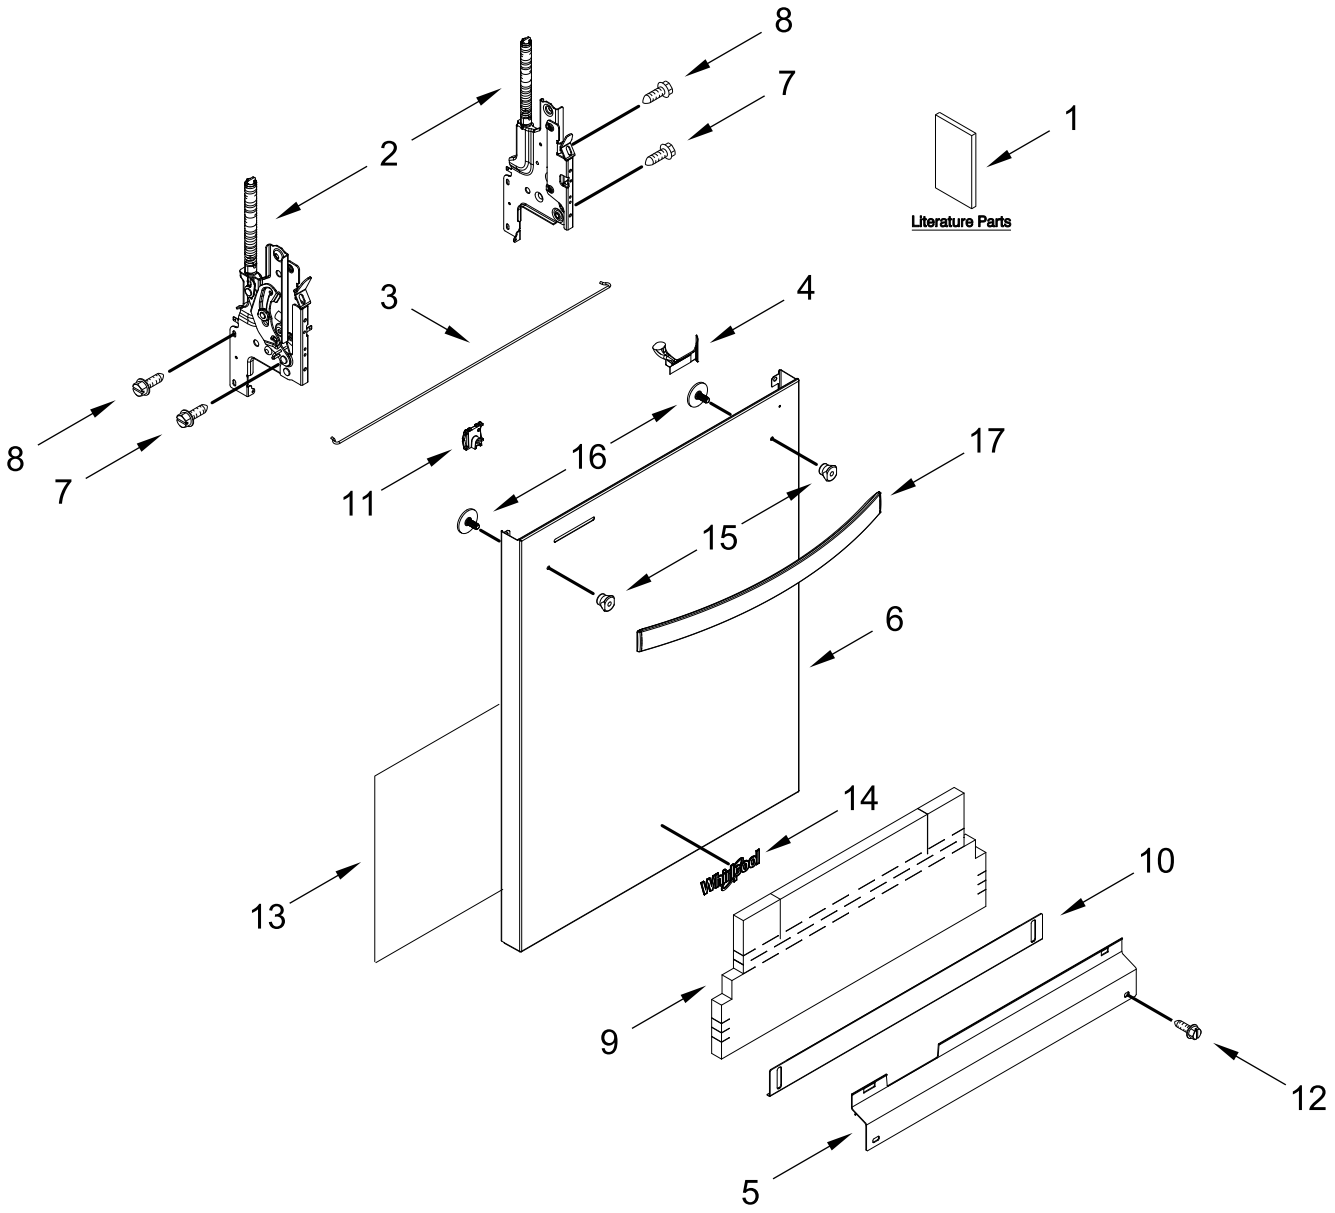

DOOR AND PANEL PARTS

Illus. No.	Part No.	Description
1		Literature Parts
	W11323304	Owners Manual
	W11650524	Energy Guide
	W11366143	Tech Sheet
2		Arm, Hinge
	W10920232	Left Hand
	W10920230	Right Hand
3	W11377160	Cross Brace, Door
4	W11102920	Light Pipe
5		Access Panel
	W11108979	Black
	W11110746	White
6		Panel, Front (Includes 4,11 & 14)
	W11340869	Black
	W11340870	White
	W11340871	Stainless
7	3400000	Screw
8	W11364953	Screw
9	W11038694	Insulation, Single Layer
10		Toe Panel
	W11467733	Black
	W11467726	White
11	W10692757	Barrel Nut, Front Panel
12	W11438978	Screw, Black
	W11438977	Screw, White
13	W10919861	Insulation, Front Panel
14	W10884775	Badge
15	W11049903	Stud, Mounting
16	W10316572	Screw
17		Handle
	W11439701	Black
	W11439697	White
	W11554913	Stainless


CONTROL PANEL AND INNER DOOR PARTS

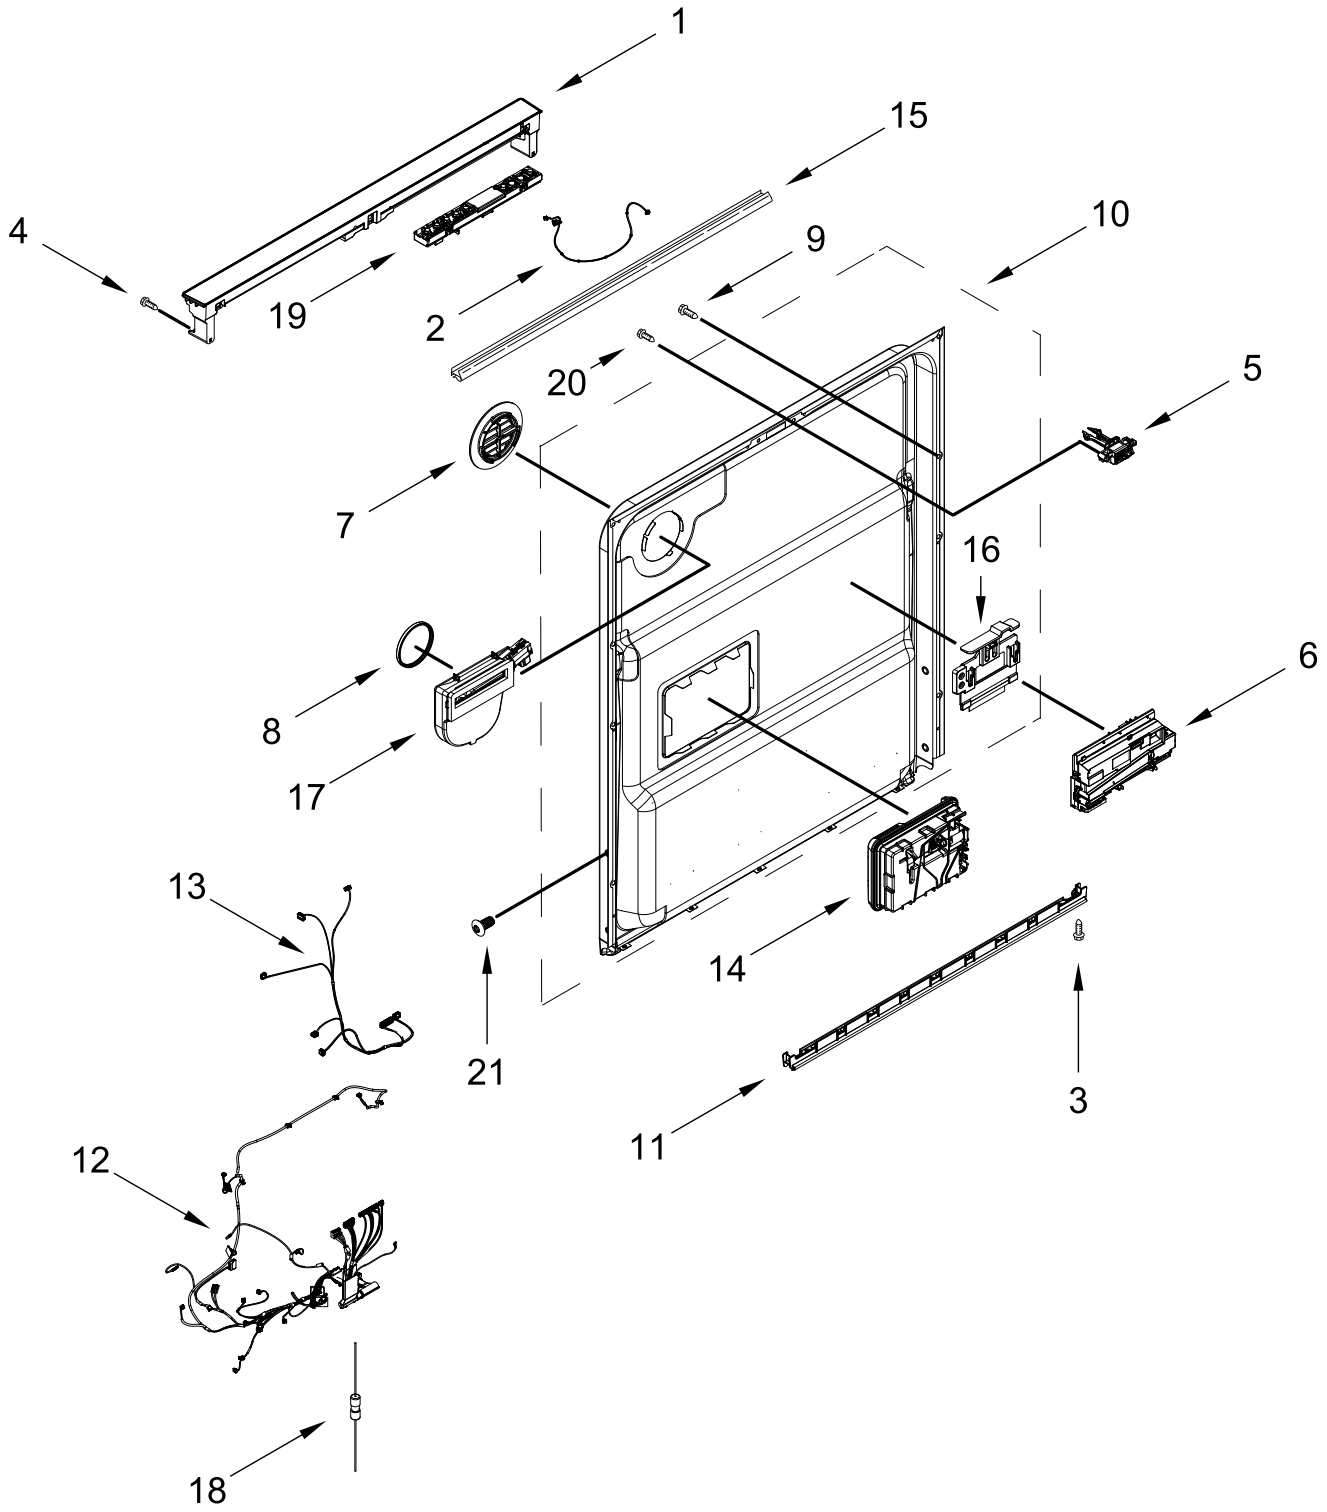

CONTROL PANEL AND INNER DOOR PARTS

Illus. No.	Part No.	Description
1		Console Cap
	W11491730	Black
	W11491731	White
2	W11084865	Jumper, Door
3	W11258418	Screw
4	W10711884	Screw (Long)
5	W11091934	Latch Assembly (Includes Switch)
6	W11563997	Control, Electronic
7	W11025634	Bezel, Vent (Also Order Gasket)
8	W11184028	Gasket, Vent
9	W10348409	Screw
10	W11098822	Inner Door Assembly
11	W11563231	Seal, Door Bottom
12	W11216817	Wiring Harness, Main (Includes Thermostat & Fuse)
13	W11084845	Wiring Harness, Inner Door
14	W11092649	Dispenser Assembly
15	W11265187	Seal, Console/Door
16	W11088985	Hanger, Control
17	W11527847	Vent Assembly (Also Order Gasket)
18	W11397505	Fuse, In-line
19	W11131369	Housing, UI
20	W10348408	Screw
21	3400071	Screw


TUB AND FRAME PARTS

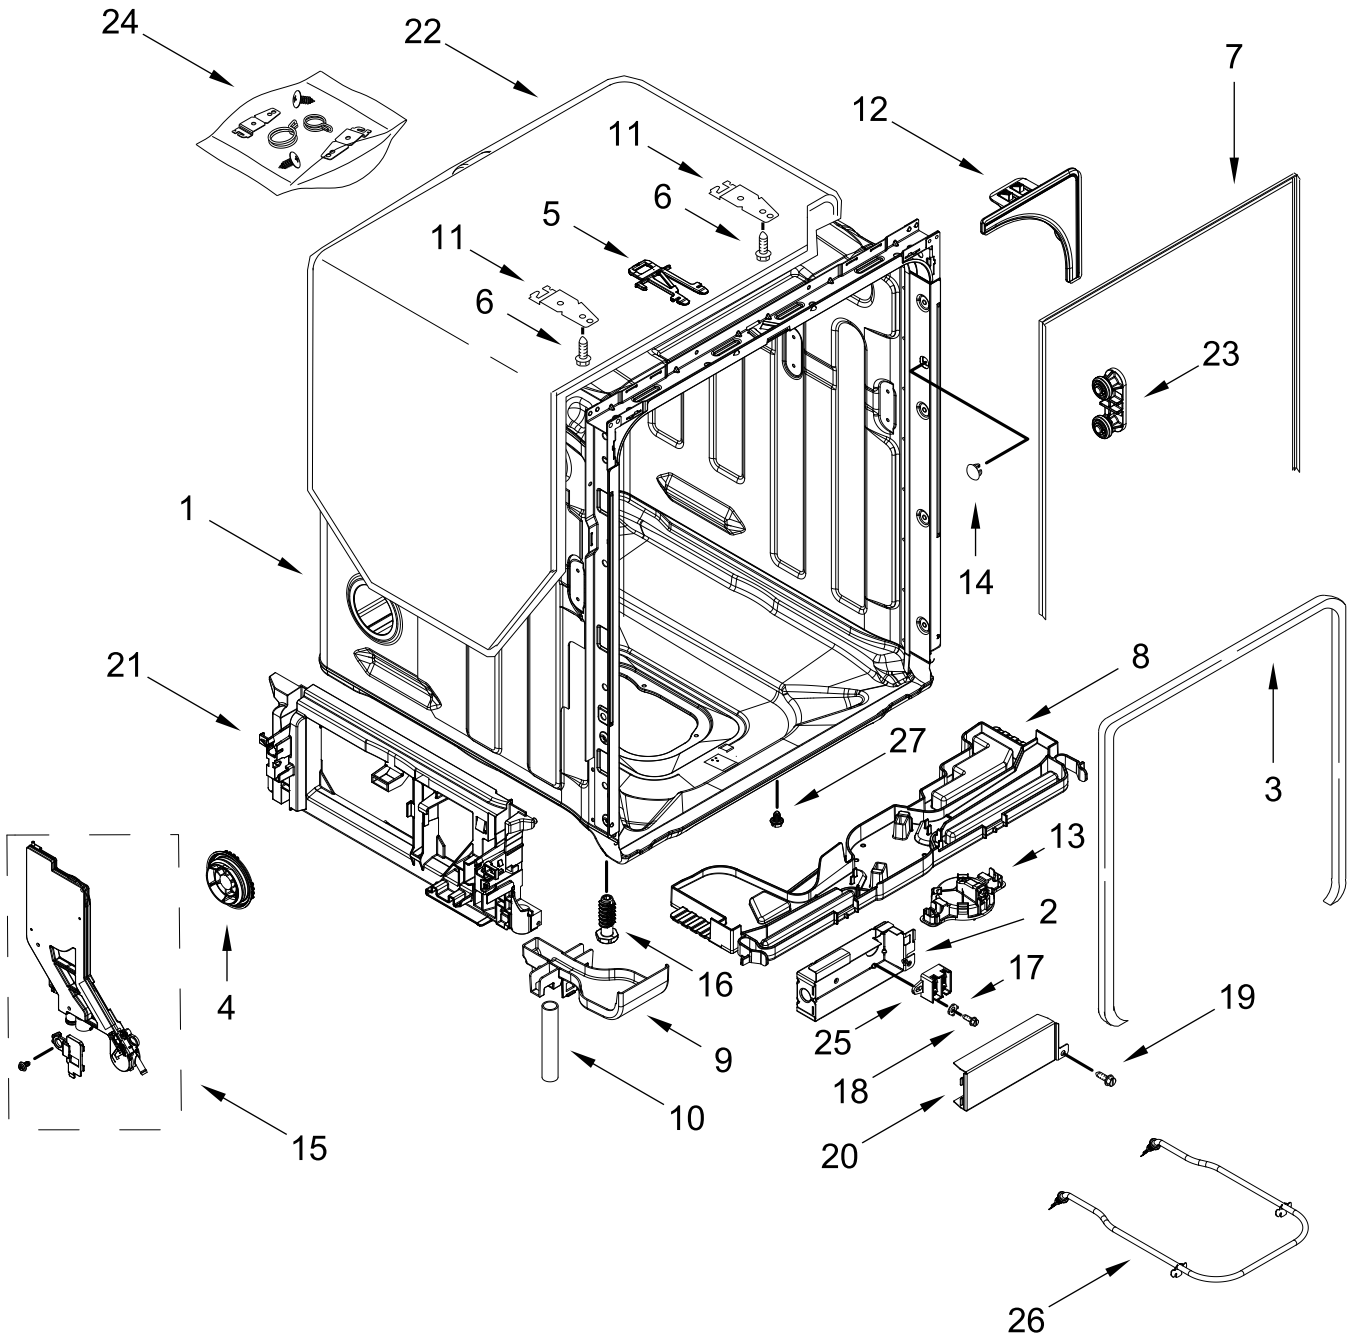

TUB AND FRAME PARTS

Illus. No.	Part No.	Description
1	W10920228	Tub Assembly (Includes Gasket)
2	W11226744	Base, Terminal Box
3	W11035860	Gasket, Tub
4	W11429974	Nut, Water Inlet
5	W11090487	Strike, Latch
6	W11296374	Screw
7	W11165091	Seal, Cabinet
8	W11025993	Drip Tray
9	W11025986	Funnel, Overfill Protection
10	W11025988	Funnel Extension
11	8269145	Bracket, Undercounter
12	W11165093	Cover, Tub Corner
13	W11255994	Float Switch
14	W11184083	Plug, Tub
15	W11429970	Water Inlet Assembly
16	W11455395	Leg, Leveling
17	3378128	Washer, Pronged Cup
18	3400014	Screw, Grounding
19	W10277003	Screw
20	W11226746	Cover, Terminal Box
21		Side Support, Tub
	W10920122	Left Hand
	W10920120	Right Hand
22	W11163985	Shield, Tub Sound
23	W11048217	Tub Mount, Upper Rack
24	W11362500	Miscellaneous Parts Bag (Contains 2 Screws, 2 Clamps, & 2 Brackets)
25	W11132441	Terminal Block
26	W11536143	Heater Element Assembly
27	3400892	Screw


PUMP, WASHARM AND MOTOR PARTS

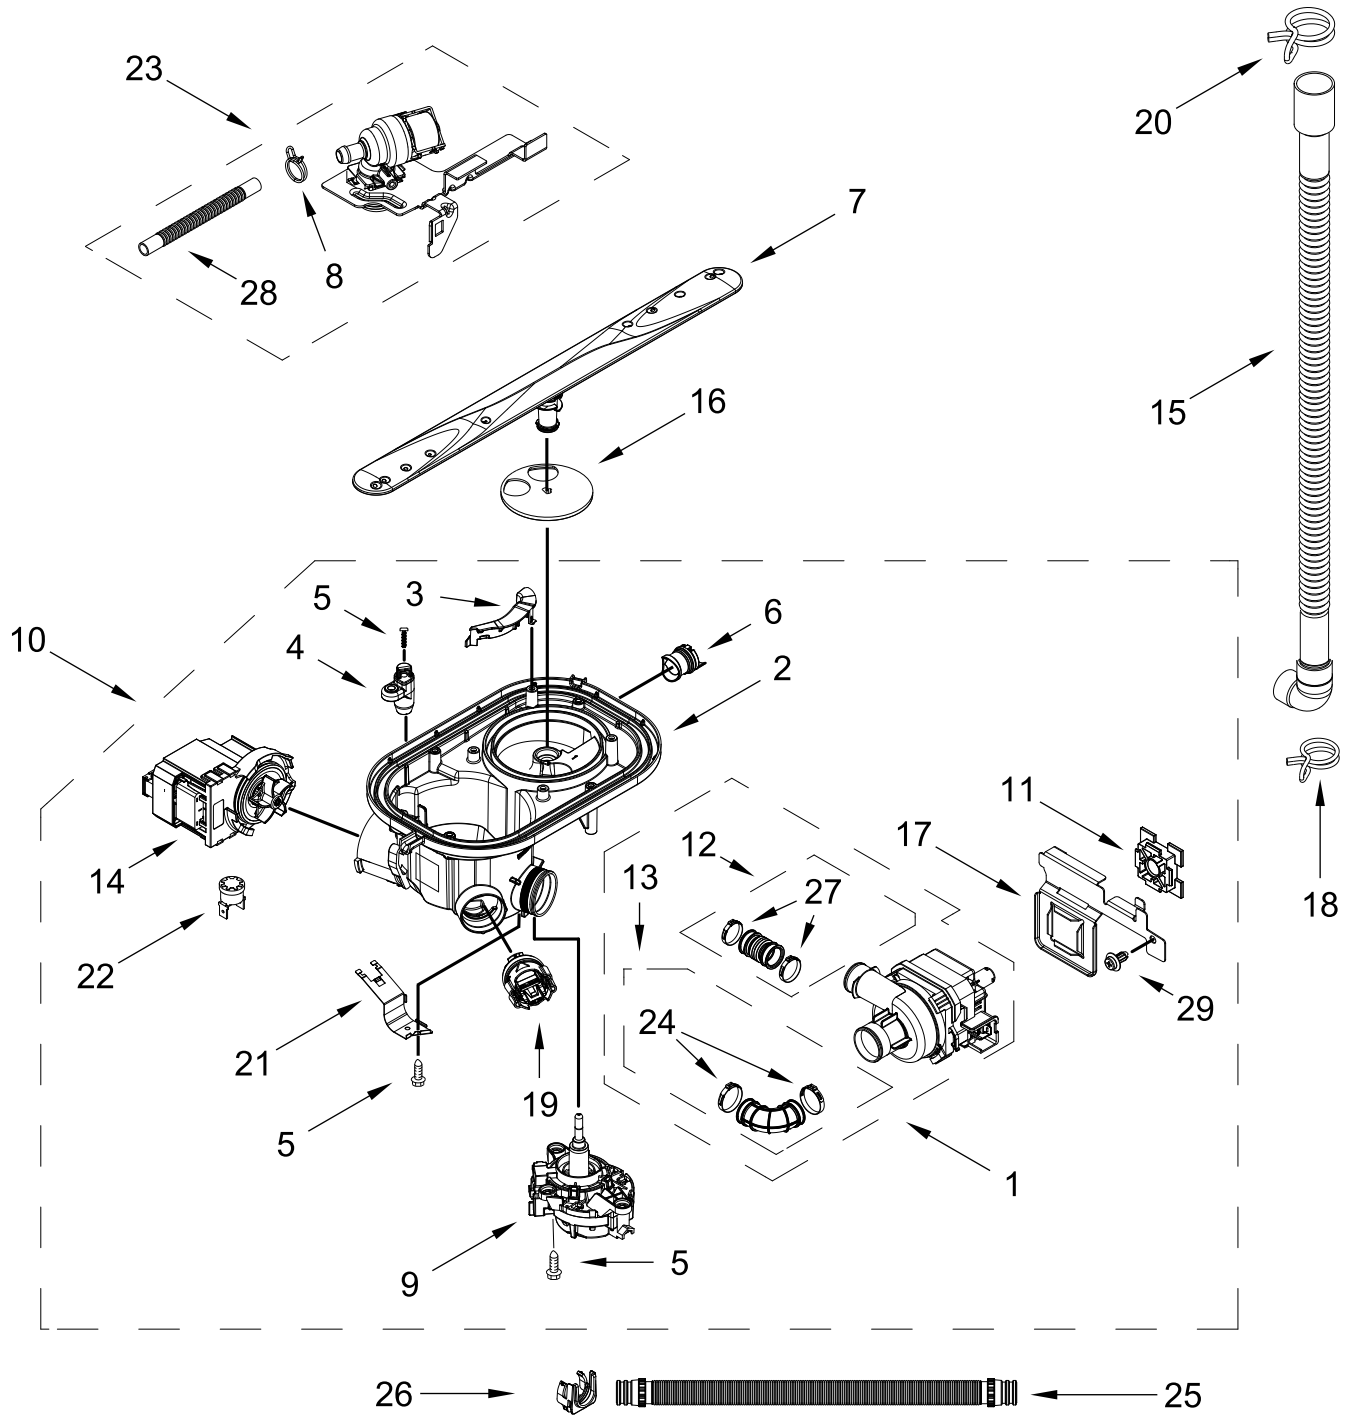

PUMP, WASHARM AND MOTOR PARTS

Illus. No.	Part No.	Description
1	W11035712	Pump Assembly
2	W11034554	Sump with Seal (Includes 3, 4, 5, 6 & 9)
3	W10891543	Diffuser, Inlet
4	W11050773	Drain Vent Assembly
5	9741232	Screw
6	W10891547	Check Valve, Drain
7	W11164607	Wash Arm Assembly
8	371505	Clamp, Hose
9		Diverter Valve Motor (Not Serviced)
10	W11299377	Motor & Sump Assembly
11	W11450247	Isolator, Rear Motor
12	W11250985	Hose, Pressure
13	W10900389	Hose, Suction
14	W11035709	Motor, Drain
15	W11131184	Hose, Drain
16	W11175571	Disc, Diverter
17	W11497568	Bracket, Rear Motor
18	W11236576	Clamp, Hose
19	W11126174	Indicator, Optical Wash
20	370445	Clamp, Hose
21	W11163419	Bracket, Thermostat
22	W11193089	Thermostat (Included with Main Wiring Harness)
23	W11025970	Fill Valve Assembly
24	W11122851	Clamp, Hose
25	W11036159	Hose
26	W11036143	Clip, Hose
27	W10466656	Clamp, Hose
28	W11036287	Hose, Inlet
29	W11418271	Fastener


UPPER WASH AND RINSE PARTS

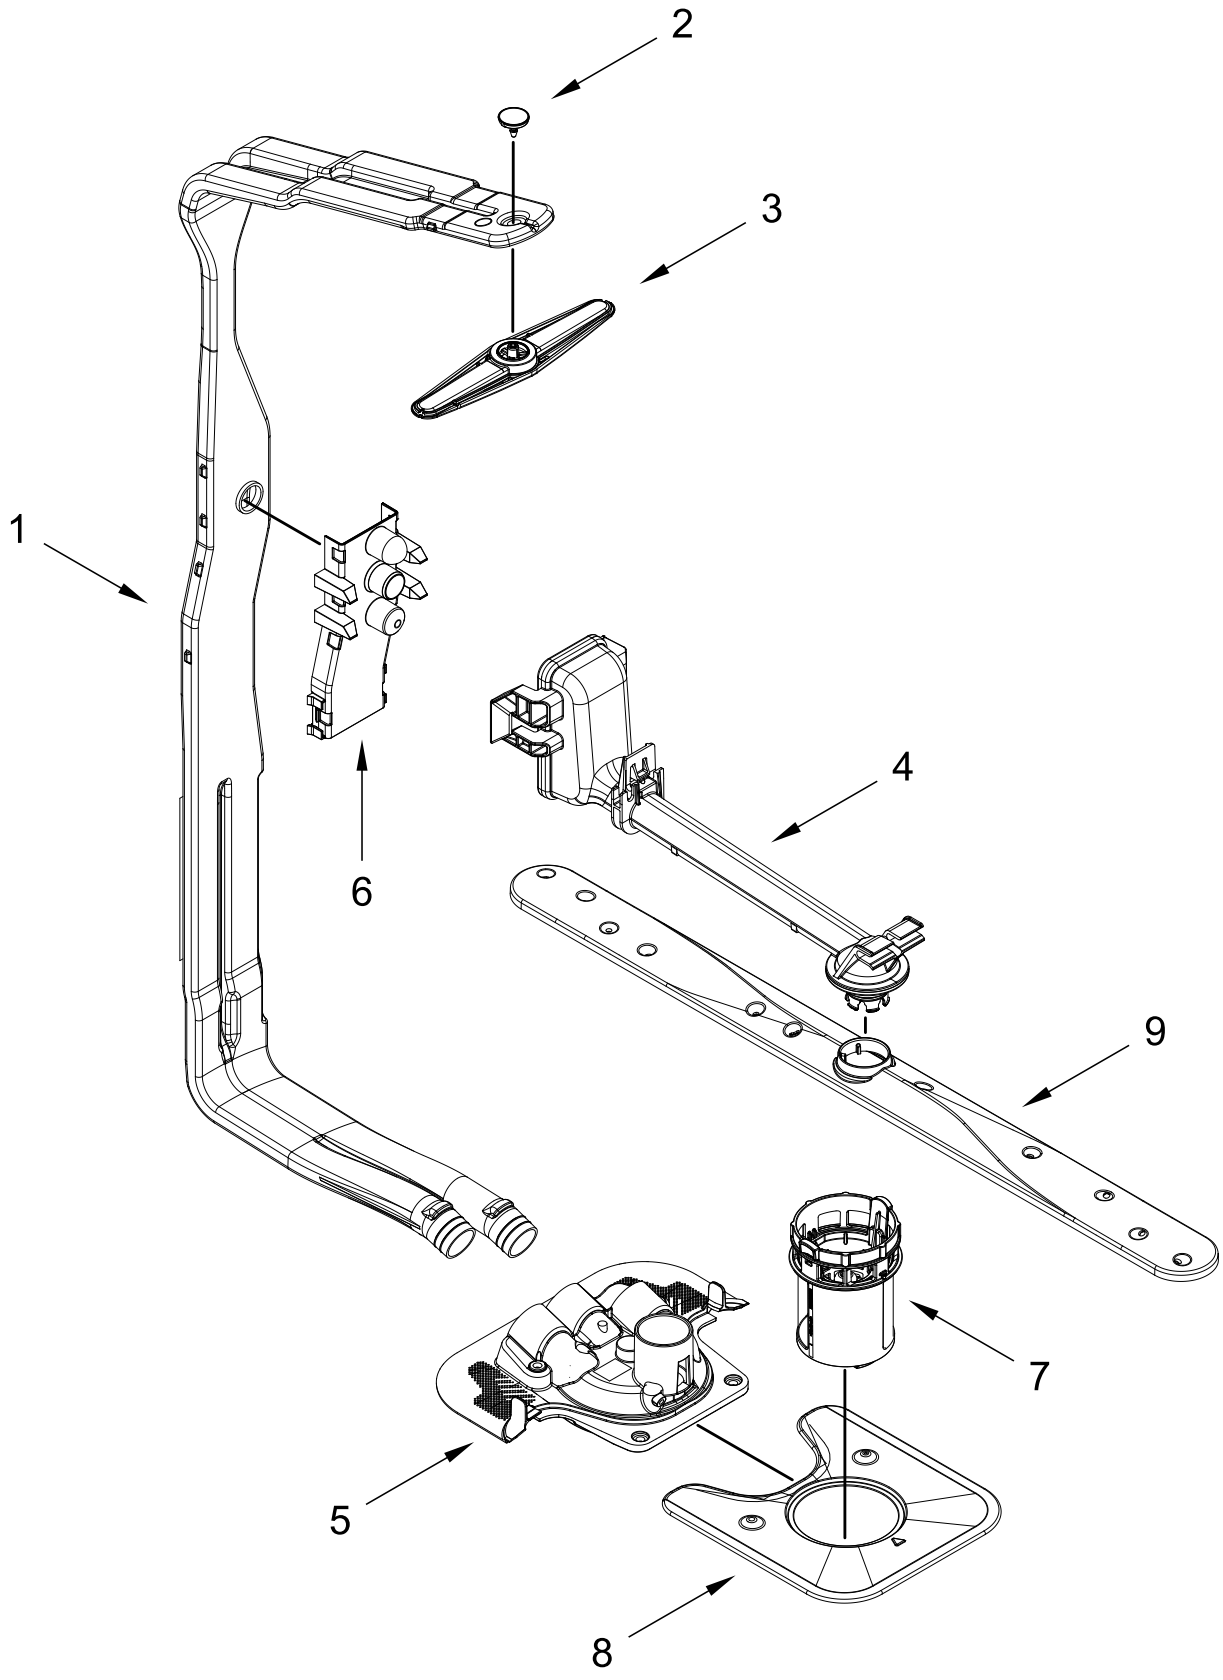

UPPER WASH AND RINSE PARTS

Illus. No.	Part No.	Description
1	W10903503	Feed Tube Assembly
2	W11039888	Retainer
3	W11039869	Sprayarm, Third Level
4	W11043452	Manifold
5	W11128231	Cover, Diverter
6	W10892836	Retainer, Docking (2nd Level)
7	W10891533	Filter
8	W10891539	Screen
9	W11043437	Sprayarm, Upper


UPPER RACK AND TRACK PARTS

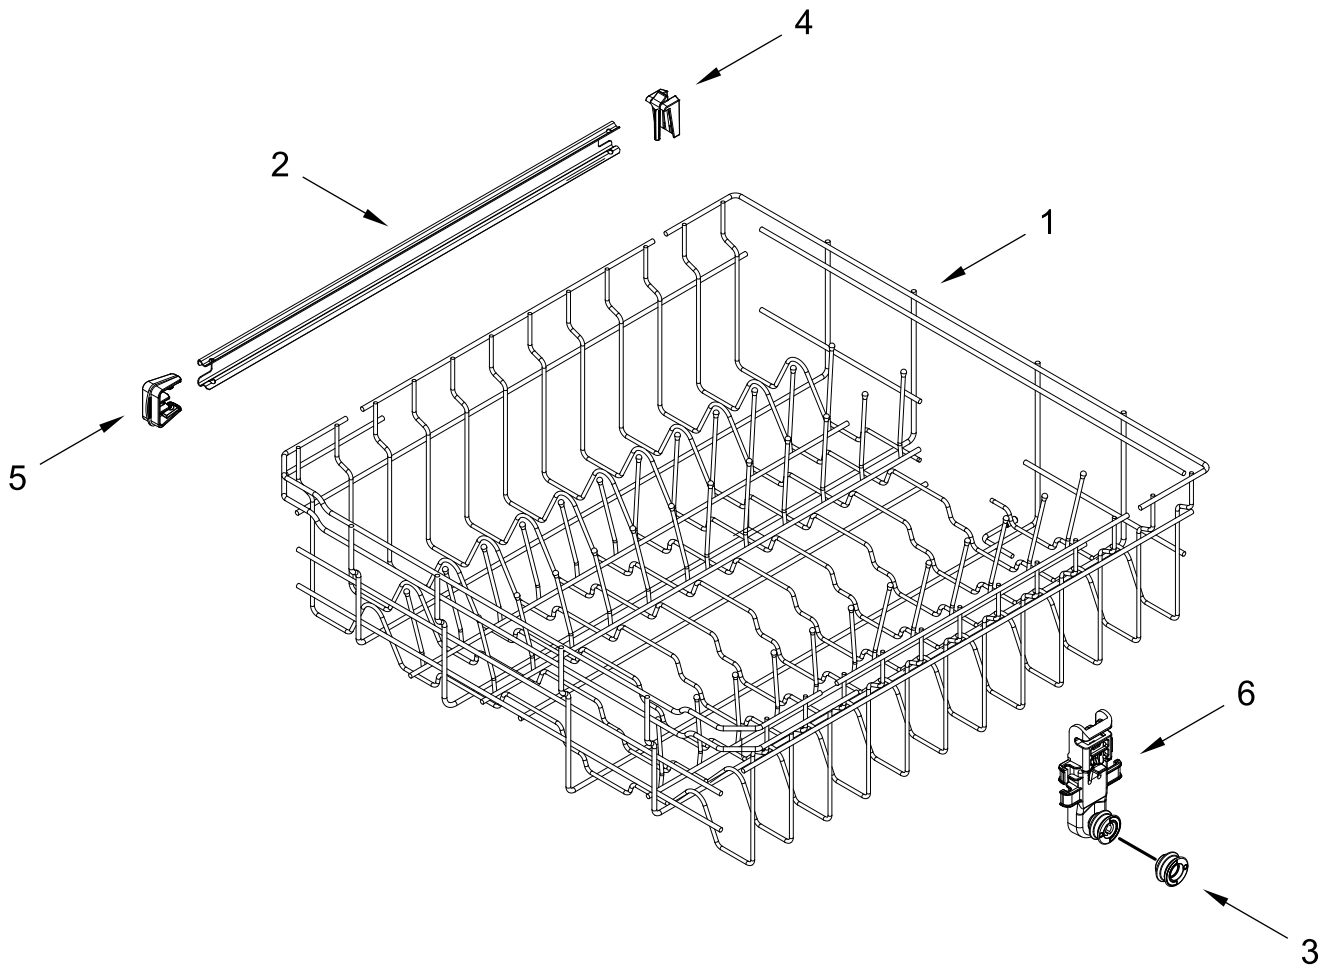

UPPER RACK AND TRACK PARTS

Illus. No.	Part No.	Description
1	W10847875	Dishrack, Upper
2	W11441109	Track, Dishrack
3	W11048219	Wheel
4	W11084872	Track Stop, Rear
5	W11084874	Track Stop, Front
6	W11133748	Mount Assembly

LOWER RACK PARTS

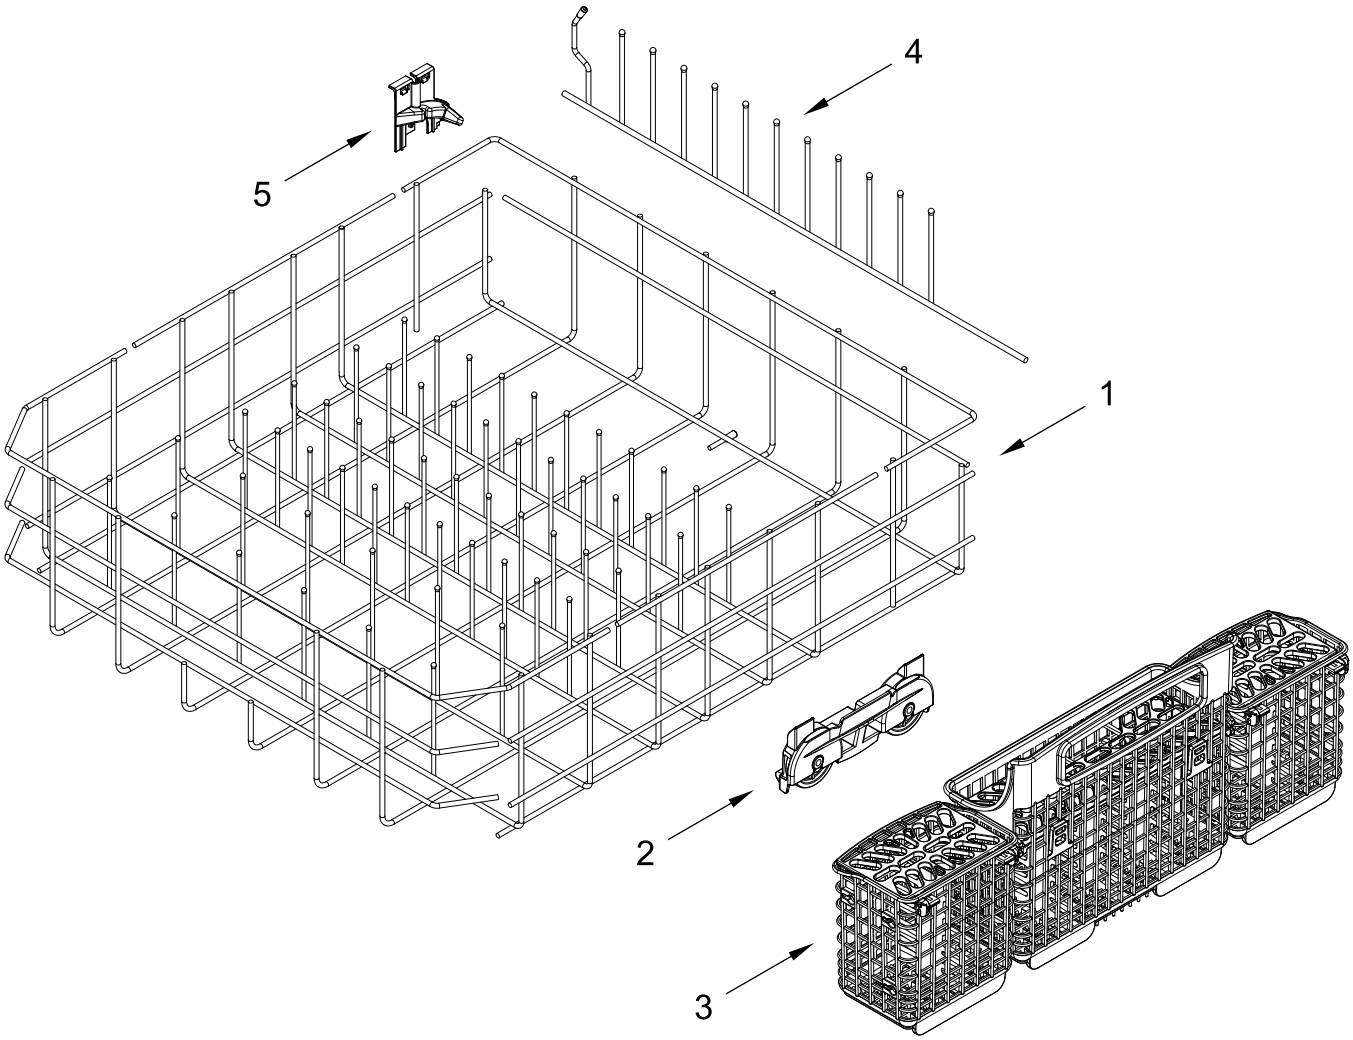

LOWER RACK PARTS

Illus. No.	Part No.	Description
1	W10525646	Dishrack, Lower
2	W11133747	Wheel & Transport Assembly
3	W11221877	Silverware Basket
4	W10056272	Tine Row, Fold Down
5	W11268658	Retainer, Flex Row

OPTIONAL PARTS (NOT INCLUDED)

Illus. No.	Part No.	Description
	4396277	Barrier Kit
	W11381654	External Drain Hose, 12 FT
	W11365011	Power Cord Kit (Straight)
	W11365014	Power Cord Kit (Right Angle)
	4396672	Strain Relief, Power Cord (Metallic)
	W10685193	Compression Hose Fitting, Water Line
	W10278635RP	Fill Hose Kit