




## DOOR REMOVAL (If required)

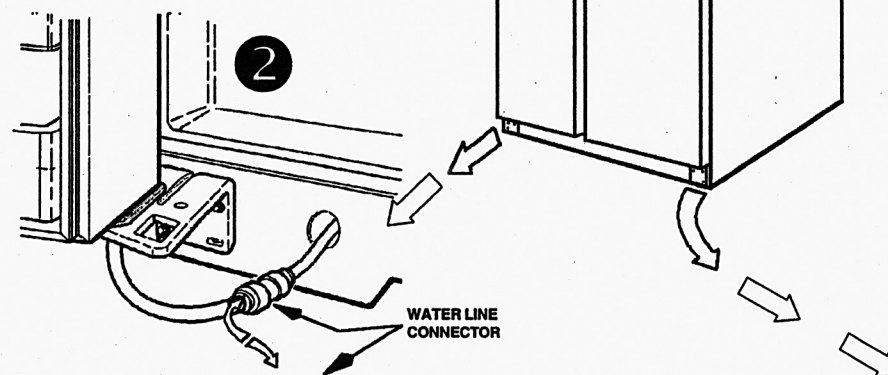

Lift the door up enough to allow another adult to guide the water line through the door hinge pin. Rest door on a non-scratching surface.

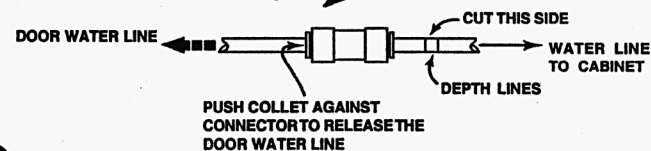

**3**

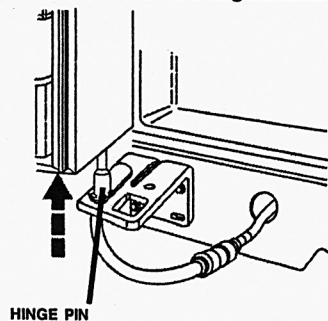


**DOOR CLOSER**

**4**

**HINGE**


**REMOVE 3 SCREWS**

**RECONNECTING THE WATER LINE:**  
If depth lines are present, cut tubing at first line and insert until second line enters connector. If no lines are present, cut 1" off tubing and insert until seated.

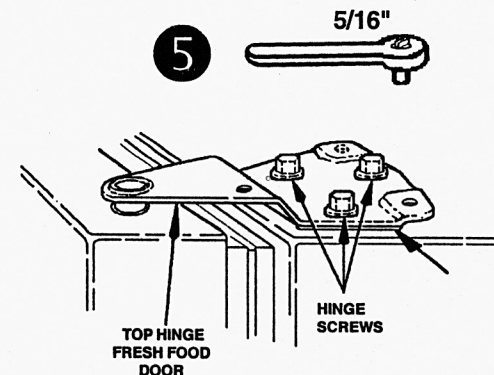


**6**

Lift the door up to remove. Rest door on a non-scratching surface.

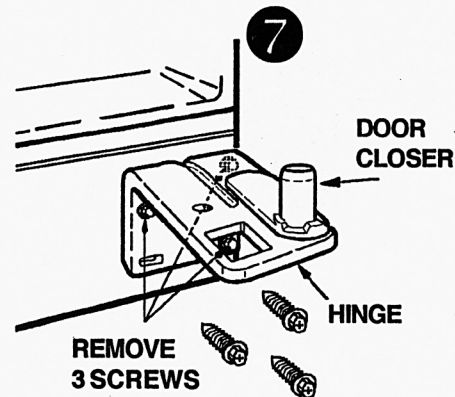


Mark the location of the bottom hinges with a lead pencil. Use a 5/16" socket and ratchet to remove the 3 screws from the bottom hinge.

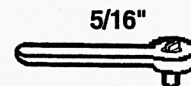


REPLACE DOORS IN REVERSE ORDER OF THEIR REMOVAL. 111475-1

## LEVELERS

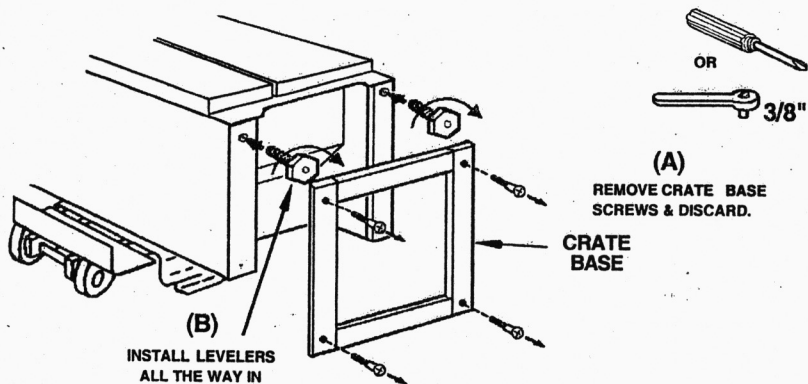


**NOTE: TO REMOVE DOORS, SEE OTHER SIDE.**

## HANDLING

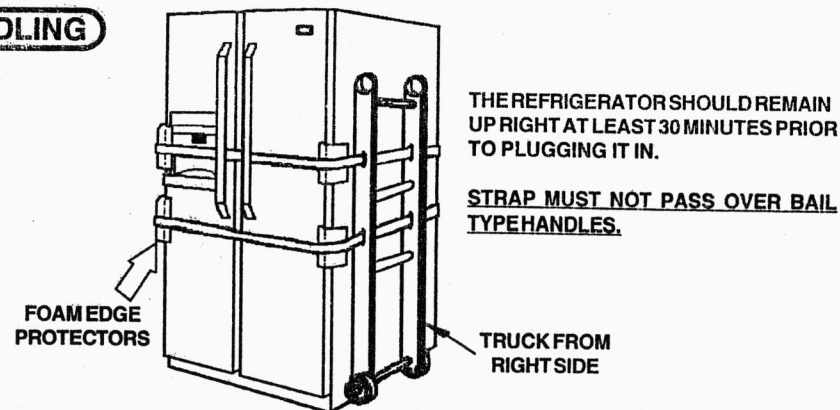

## DOOR ADJUSTMENT (IF NEEDED)



REMOVING THE HINGE COVERS IF EQUIPPED

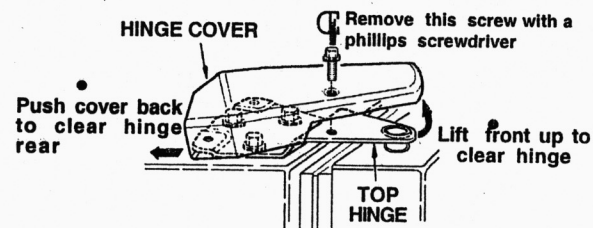

(Reverse procedure when reattaching covers)

Loosen top hinge screws

Loosen top hinge screws

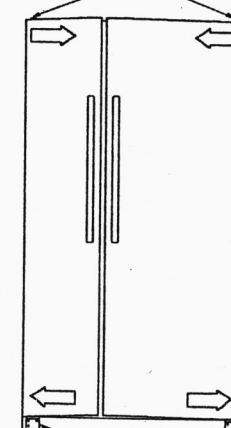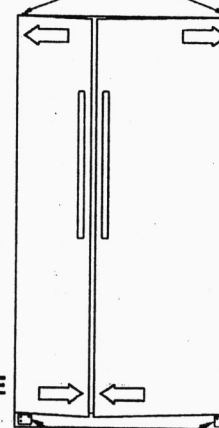


Loosen bottom screws. Slide door(s) **INWARD**.


Loosen bottom screws. Slide door(s) **OUTWARD**.

When hinge screws are installed, tighten them until they are just snug. Then turn another 1/4 turn.

Remove the bottom hinge covers by squeezing bottom and top and pulling them toward you.


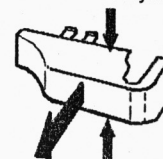


## REFRIGERATOR LEVELING

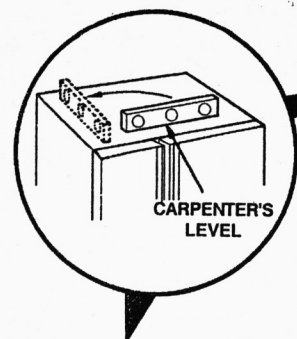

MOVE THE REFRIGERATOR TO ITS INSIDE LOCATION.

- (1) Level the cabinet. Open and close the doors. Re-level the cabinet.
- (2) If the cabinet rolls, extend the levelers.
- (3) If the doors do not close easily, raise the front of the cabinet.
- (4) Plywood shims may be used to provide a level base.

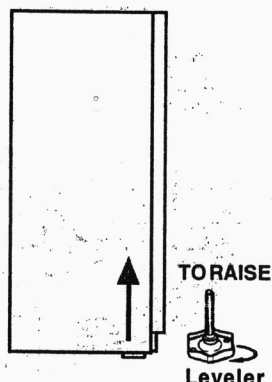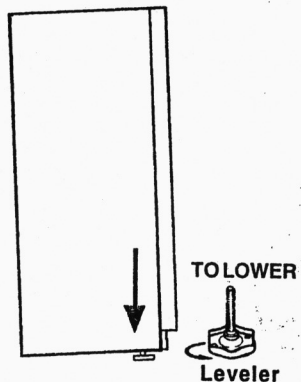

## WHEEL ADJUSTMENTS

