




30" GAS FREESTANDING SELF CLEAN RANGE

MODELS:

WFG525S0JB1 (Black)
WFG525S0JW1 (White)


COOKTOP PARTS

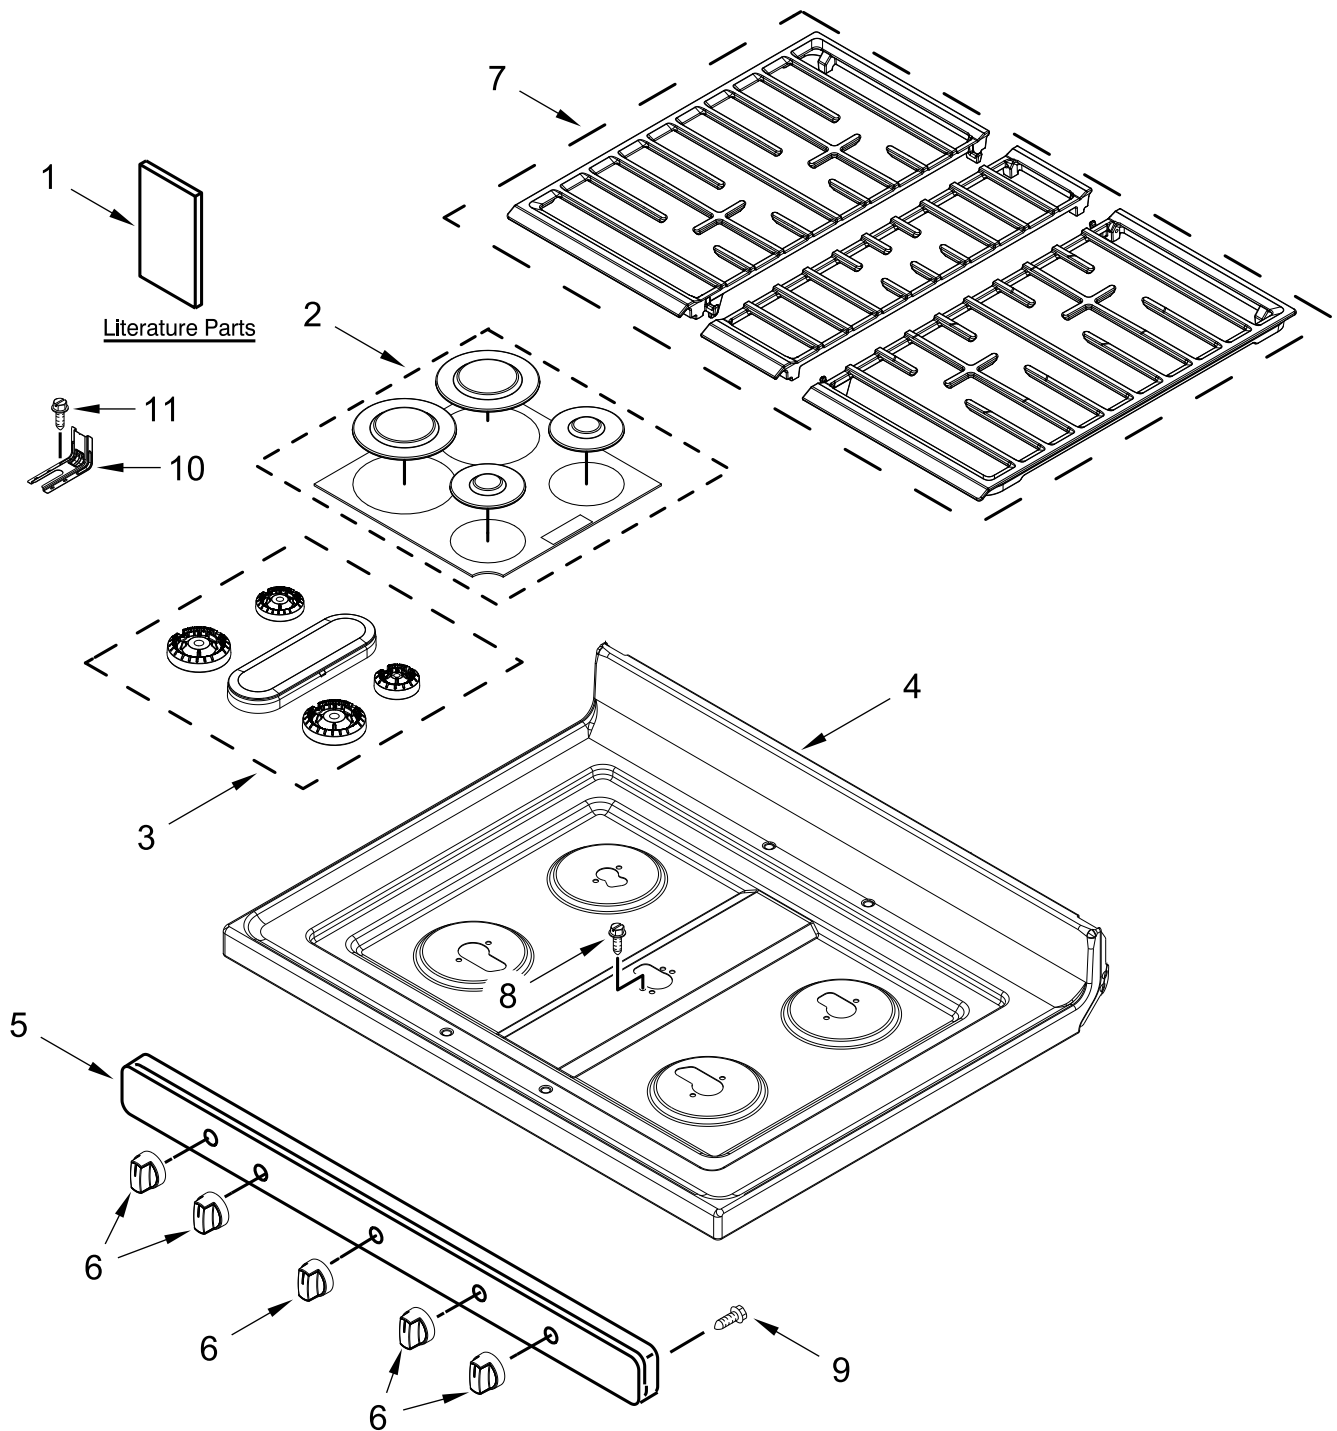

COOKTOP PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	5		Panel, Manifold	11	7101P485-60	Screw, Anti-Tip Kit
	W11404105	Installation Instructions		W11089578	Black			FOLLOWING PARTS NOT ILLUSTRATED
				W11089577	White			
	W11404099	Use and Care Guide	6		Knob, Control		W10842520	Harness, Main
	W11333114	Tech Sheet		W11023140	Black		W10753750	Harness, Bake/Broil
	W11351206	Wiring Diagram		W11023142	White			
2		Burner Cap Kit	7		Grate Kit		3196520	Clip, Wire
	W11395131	Black (Set of 4)		W11090908	Black (Set of 3)		W10334923	Clip, Gas Wiring
3	W11367107	Burner Kit	8	W10673618	Screw		313438	Clip, Harness
4		Cooktop	9	3196557	Screw		3196896	Clip, Wire
	W11418086	Black	10	W11379945	Bracket, Anti-Tip		3196173	Screw
	W11418084	White						(Grounding)


CONTROL PANEL PARTS

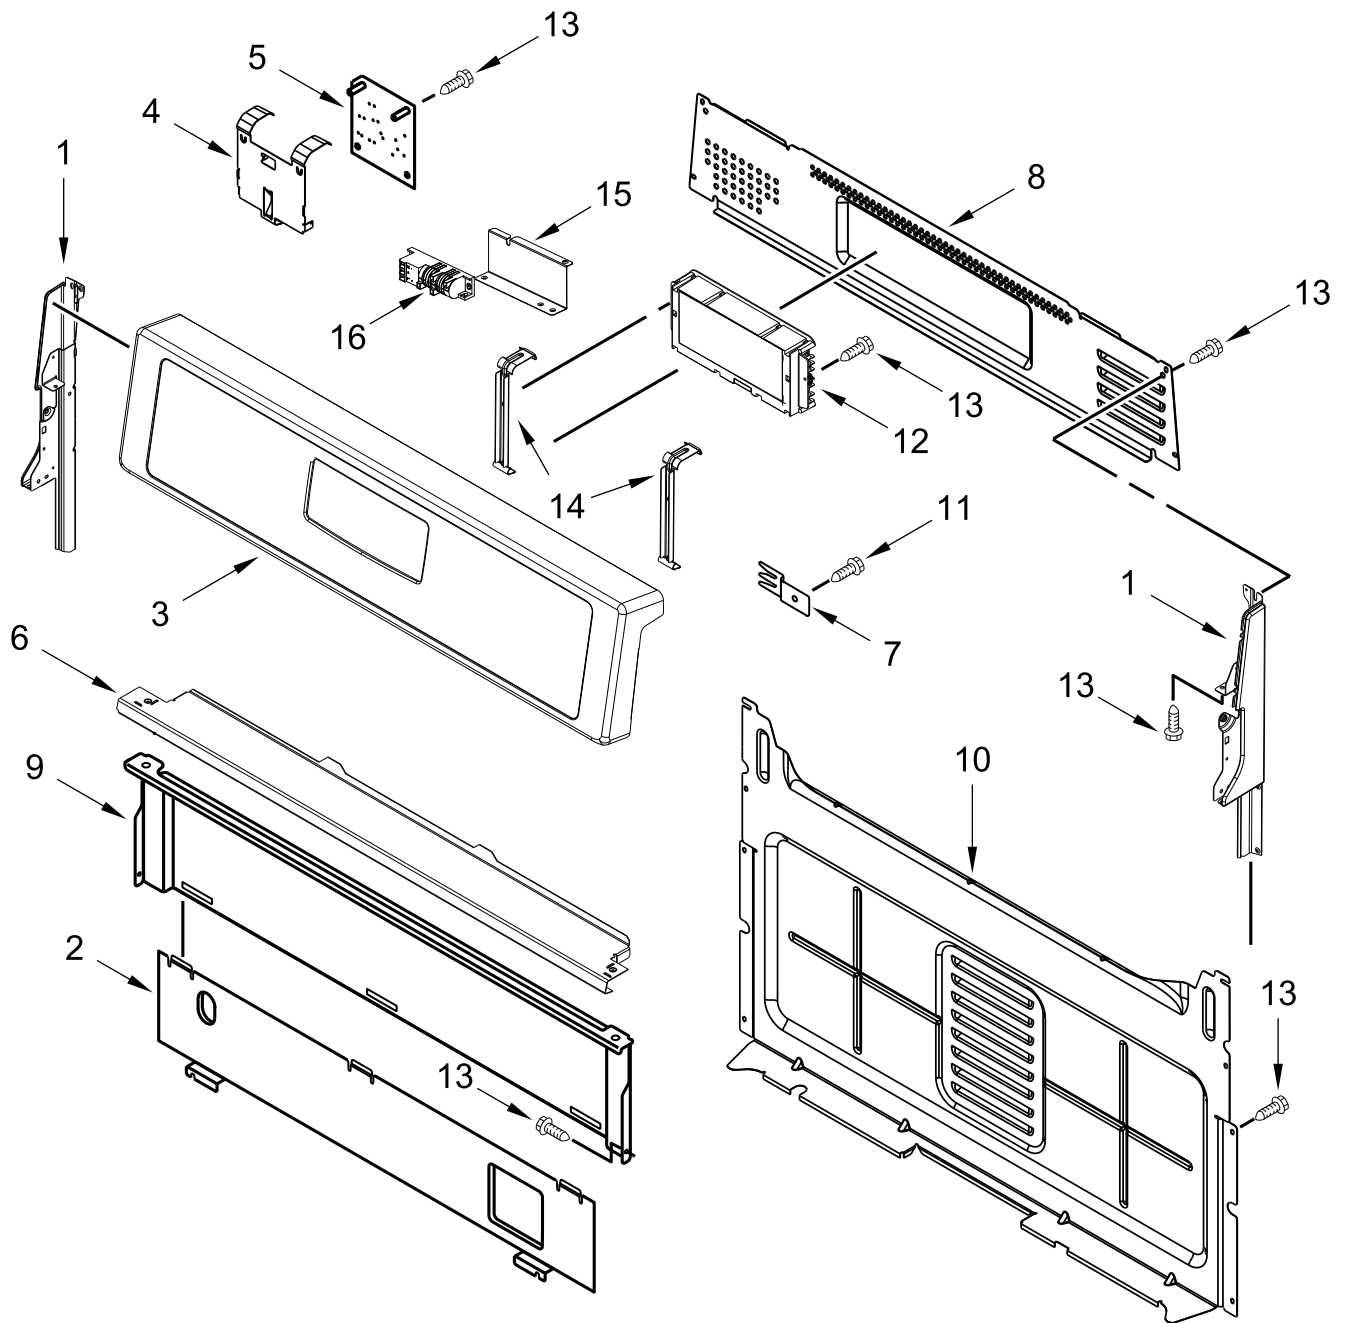

CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Endcap	4	W10762981	Bracket, Mounting	11	3196169	Screw
	W11130372	Black (Left)	5	W10920631	Module, Spark DSI	12		Control, Electronic (LCX)
	W11130379	Black (Right)					W11204525	Black
	W11130371	White (Left)	6	W10516123	Bracket, Console Mounting		W11204522	White
	W11130378	White (Right)	7	8523412	Bracket, Rear Cooktop	13	3196178	Screw
2	8053505	Shield, Heat	8	W10198745	Cover, Upper	14	W10695491	Bracket, Control
3		Panel, Control	9	W10192841	Shield, Heat	15	W10797001	Bracket, Ignitor
	W10885611	Black	10	W10184370	Cover, Back	16	W10475149	Module, Spark (5+0)
	W10885610	White						


MANIFOLD PARTS

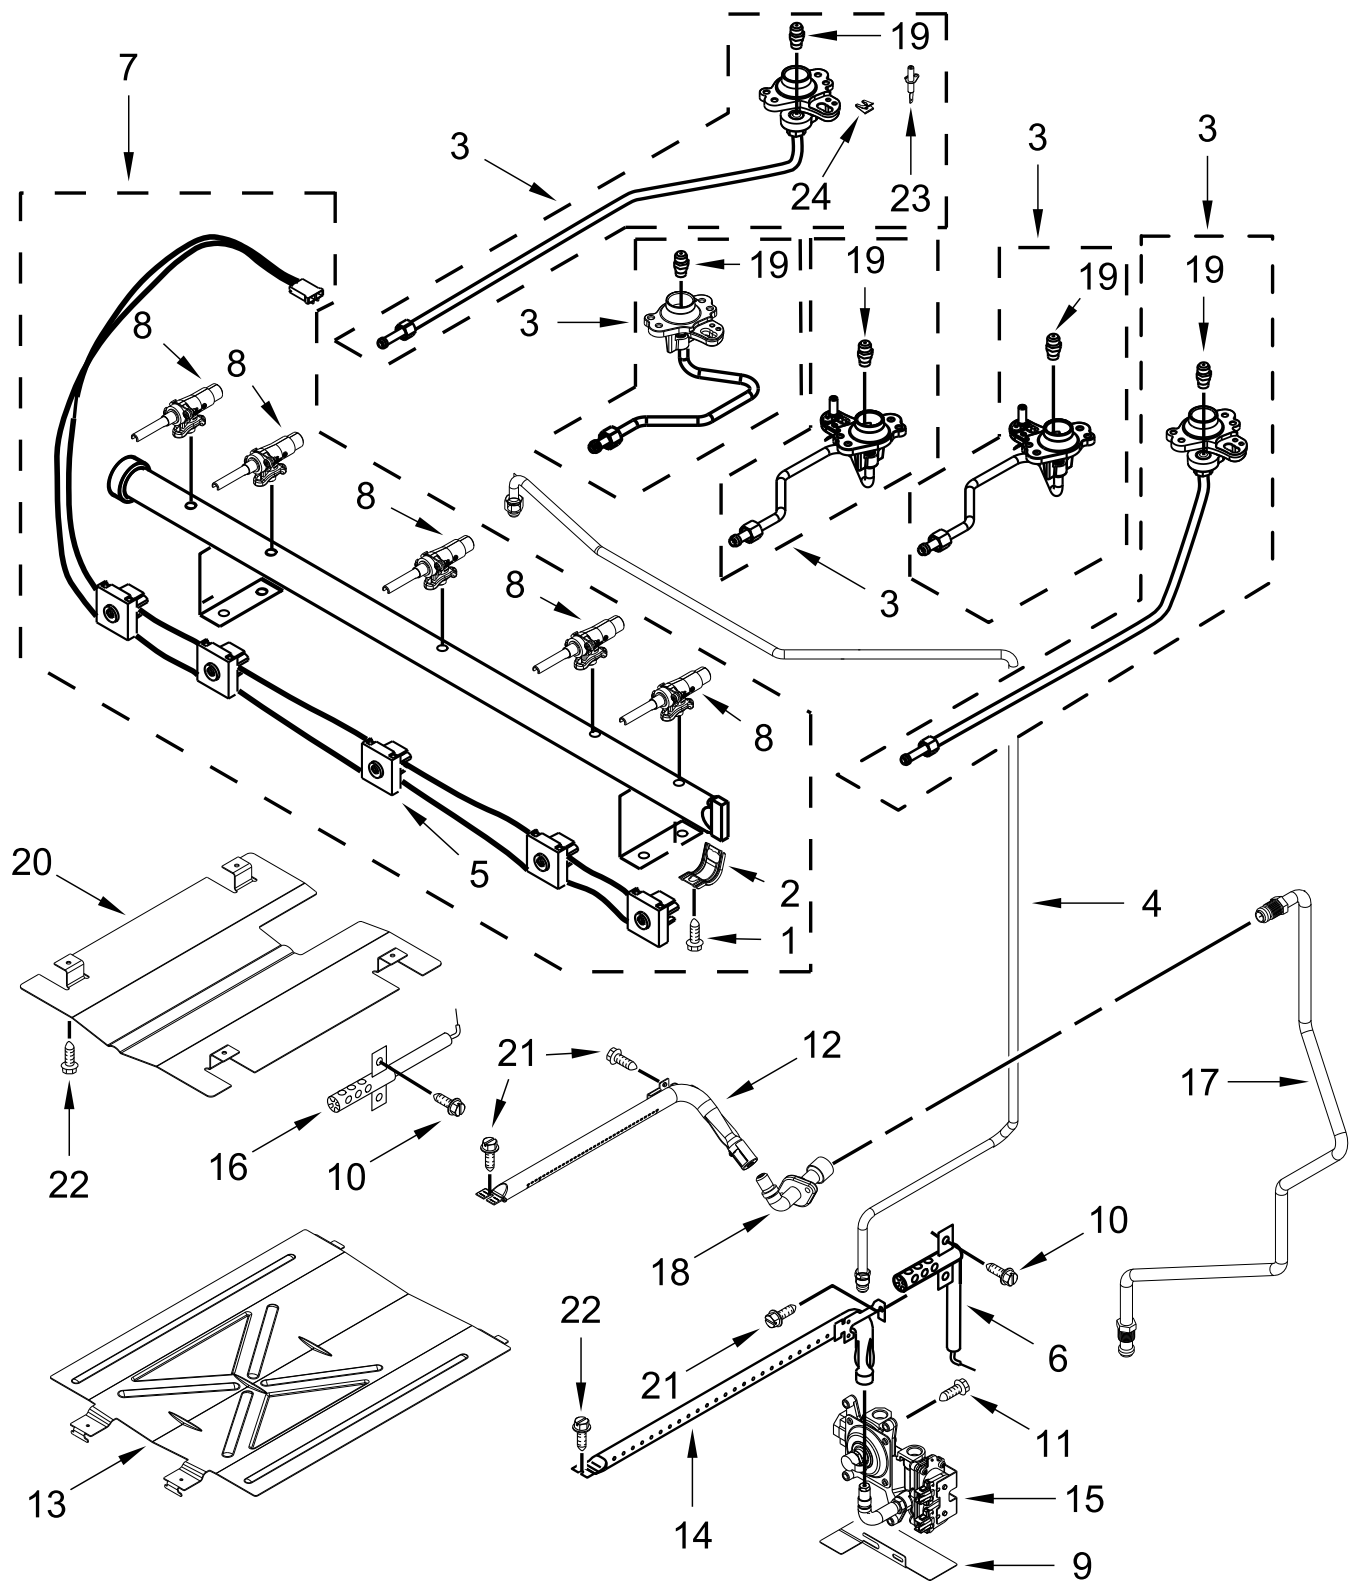

MANIFOLD PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10295997	Screw, Valve	9	W10224921	Bracket, Aegis	24	W10827923	Spring, Electrode
2	W10295996	Bracket, Saddle Valve	10	3196385	Screw	FOLLOWING PARTS NOT ILLUSTRATED		
3	W11345008	Orifice Holder Assembly (15K)	11	3400016	Screw			
		(Left Front)	12	8054078	Burner, Broiler	W11415424	LP 5 Orifice Conversion Kit	
	W11345009	Orifice Holder Assembly (9.5K)	13	W10184491	Spreader, Flame (Oven)	W10566537	LP Bake and Broil Kit	
		(Left Rear)	14	9758078	Burner, Bake	W10400495	Orifice, LP Bake	
	W11345011	Orifice Holder Assembly (15K)	15	W11370883	Regulator	W10465080	Orifice, LP Broil	
		(Right Front)	16	W10333842	Electrode, Broil			
	W11345010	Orifice Holder Assembly (5K)	17	W10420040	Tube, Broiler Supply			
		(Right Rear)	18	W11435700	Fitting, Broiler			
	W11345012	Orifice Holder Assembly (8K)	19	W11428753	Orifice (15K) (Left Front & Right Front)			
		(Center)		W10849720	Orifice (10K) (Left Rear)			
4	W10215439	Tubing (Manifold to Regulator)		W10849719	Orifice (5K) (Right Rear)			
5	W10811691	Harness, Igniter (Includes Switches)		W11429345	Orifice (8K) (Center)			
6	9758079	Electrode, Bake	20	W10137062	Spreader, Flame (Broiler)			
7	W11347745	Manifold Assembly	21	3196265	Screw			
8	W11352012	Valve, Gas (Left Front & Right Front)	22	W10362924	Screw			
	W11352013	Valve, Gas	23	W11428831	Electrode (Left Front, Left Rear)			
	W11352015	Valve, Gas (Right Rear)		W11428858	Electrode (Right Front, Right Rear, Center)			


CHASSIS PARTS

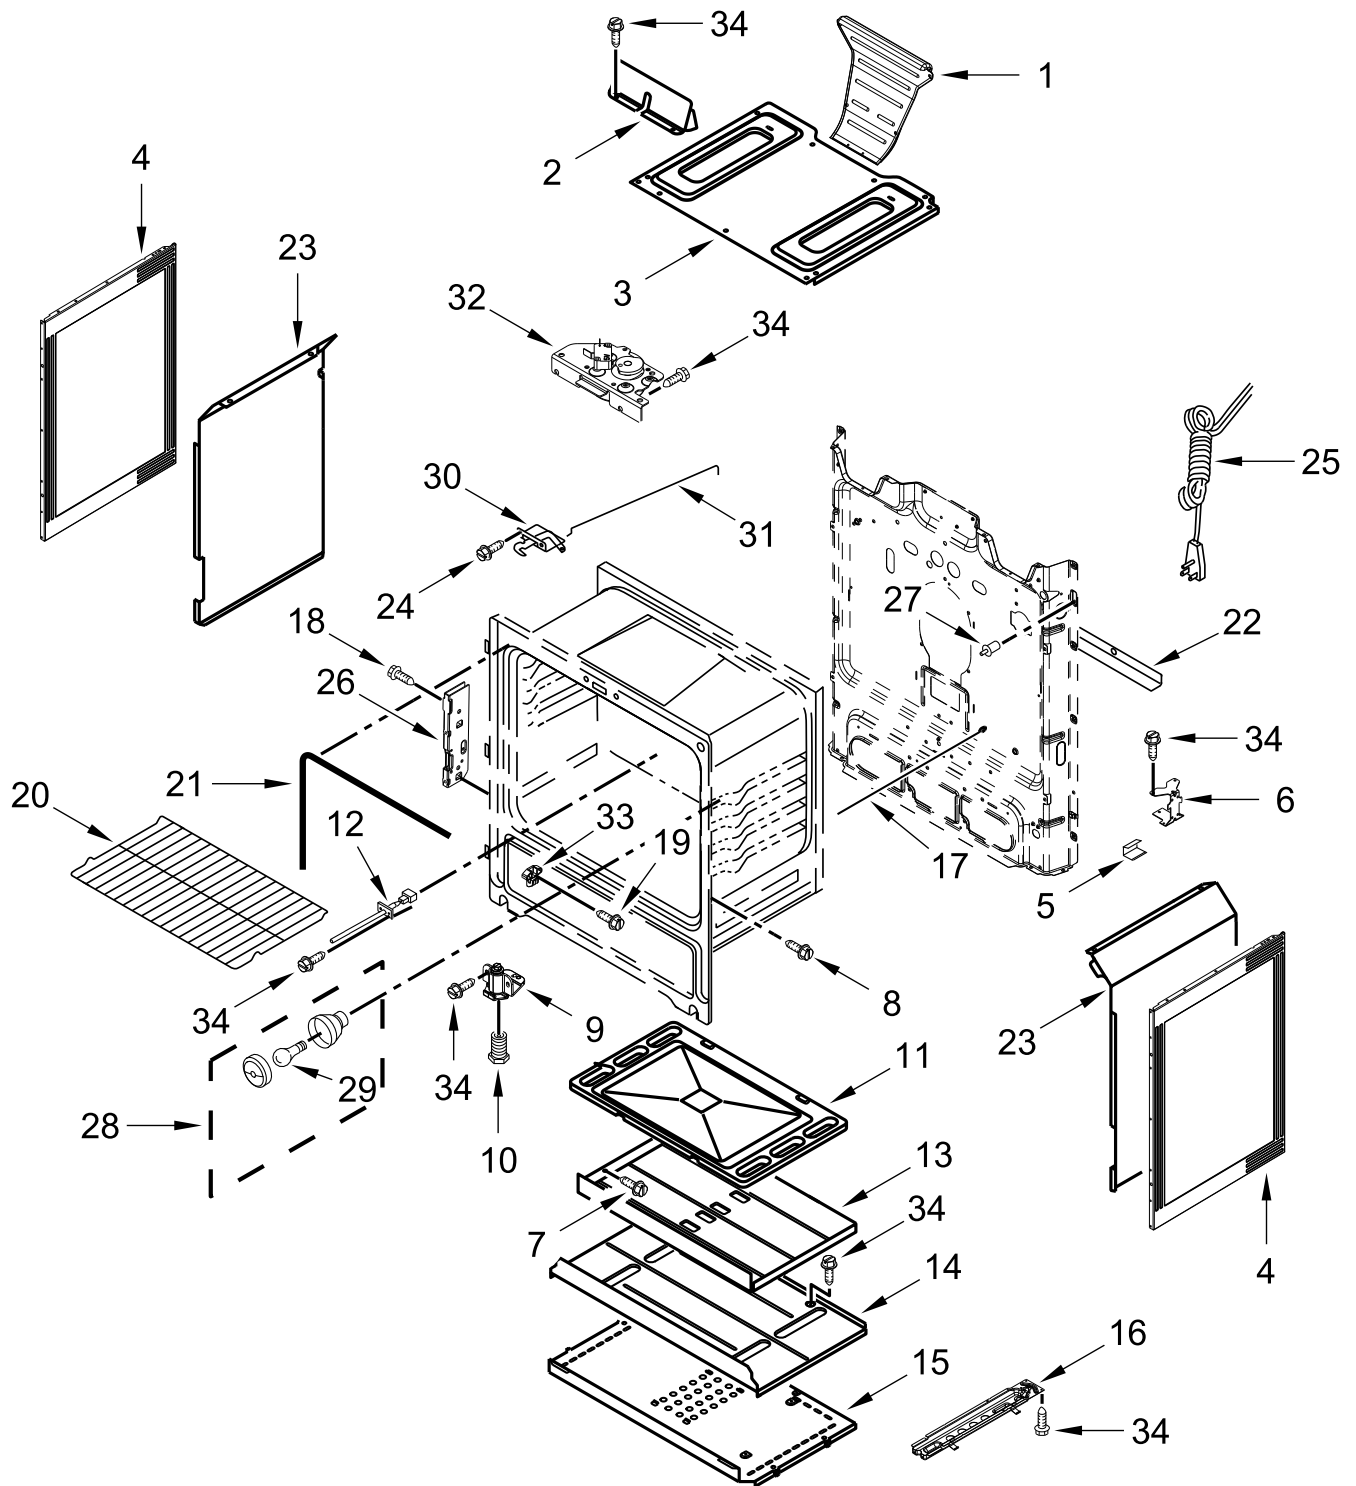

CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10153186	Box, Flue	14	8053969	Shield, Heat	25	W10624590	Cord, Power
2	8272747	Shield, Flue	15	8053968	Shield, Lower	26	W10289077	Receiver, Hinge
3	W11379351	Box-Burner, Gas Sealed	16	W10390008	Base Rail Assembly (Left)	27	W10627802	Switch, Door
4		Panel, Side		W10390007	Base Rail Assembly (Right)	28	W11175594	Light Assembly
	W10162245	Black				29	W10571723	Bulb, Halogen 40 Watts
	W10575396	White	17	W11370462	Rod, Door Switch	30	9761013	Front Door Latch Assembly
5	W10137382	Clip, Panel	18	W10031780	Screw	31	W10078370	Rod, Push Latch
6	8523249	Bracket, Manifold	19	3400080	Screw	32	W10107820	Rear Door Latch Assembly
7	W10362924	Screw	20	W10268578	Rack, Oven	33	W10674705	Glide, Drawer Front
8	3196560	Screw	21	W10658354	Seal, Door	34	3196178	Screw
9	W10341186	Front Foot Assembly	22	W10435470	Brace, Main Back			FOLLOWING PARTS NOT ILLUSTRATED
10	W10058460	Foot, Leveling	23	W11379353	Retainer, Insulation (Left)			
11	3195097	Bottom, Oven		W11379943	Retainer, Insulation (Right)		8524099	Insulation, Wrap
12	W10586204	Sensor					W10180437	Insulation, Back
13	8053967	Baffle, Burner Oven	24	3196560	Screw			

DOOR PARTS

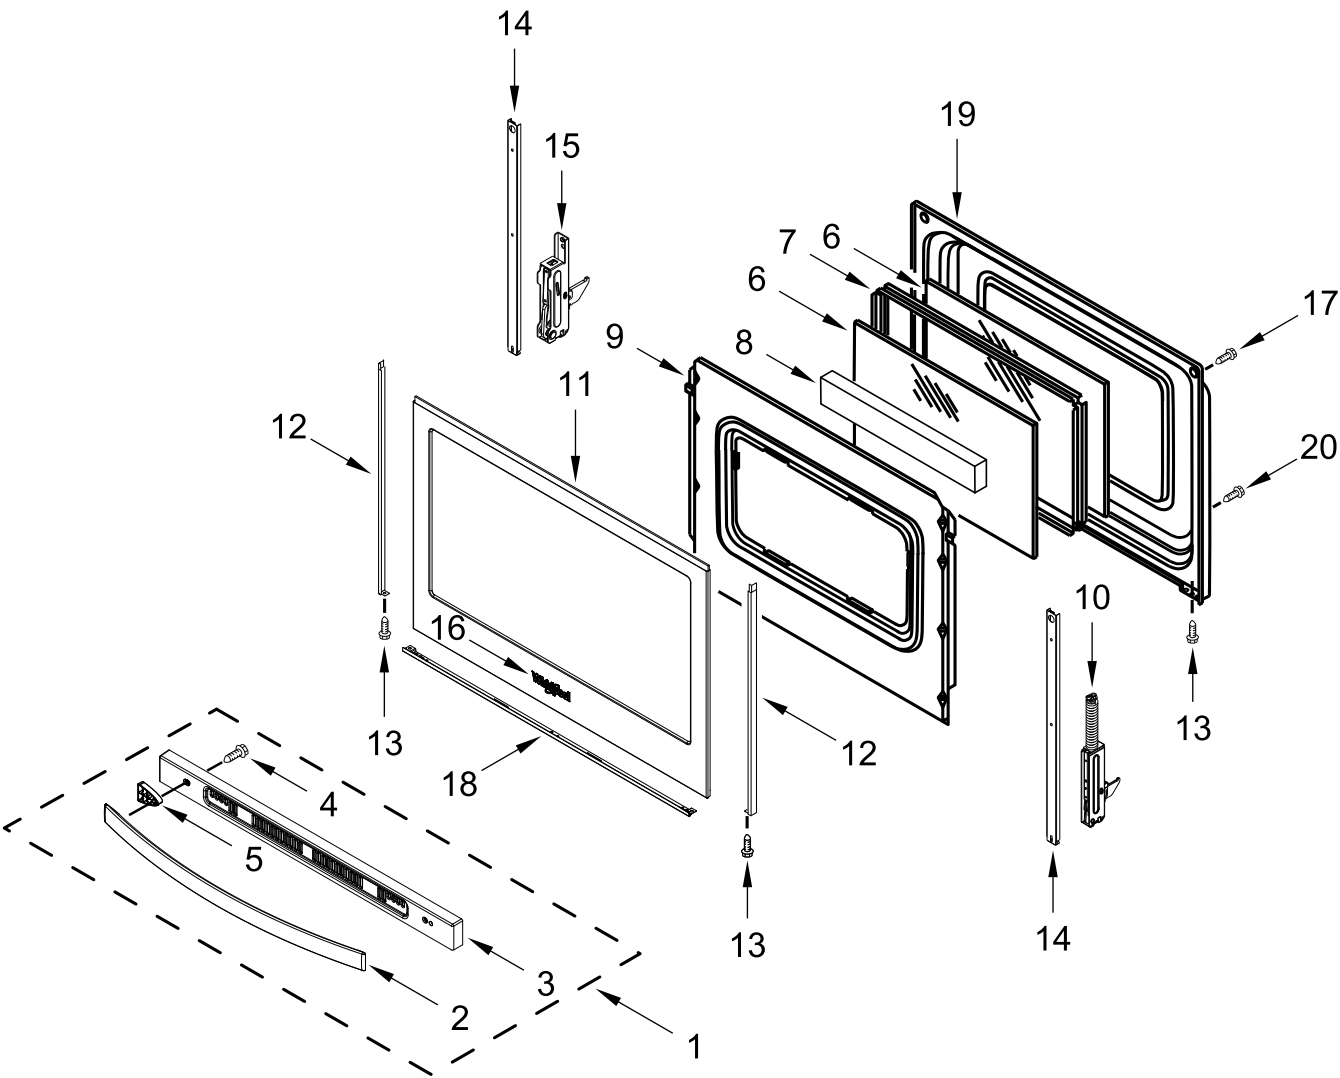


DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Handle and Vent Assembly
	W11039085	Black
	W11039084	White
2		Door Handle
	W11022643	Black
	W11022644	White
3		Trim, Vent
	W10310922	Black
	W10310920	White
4	W10480830	Screw
5		Standoff (Not Serviced, Order Handle and Vent Assembly)
6	W11044424	Glass, Inner
7	W10316950	Frame, Glass

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
8	W10278991	Insulation, Door Strip
9	9761357	Retainer, Insulation
10	W10299226	Hinge, Active
11		Glass, Outer Door
	W10884159	Black
	W10409945	White
12		Trim, Door
	W10746436	Black (Left)
	W10746435	Black (Right)
	8523172	White (Left)
	8523166	White (Right)
13	W10327235	Screw
14	W11379944	Strap, Door
15	W10299227	Hinge, Door (Passive)
16	W10884775	Badge

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
17	W10200660	Screw
18		Trim, Lower Door
	8523177	Black
	8523175	White
19	9761344	Liner, Door
20	W10031790	Screw

DRAWER PARTS

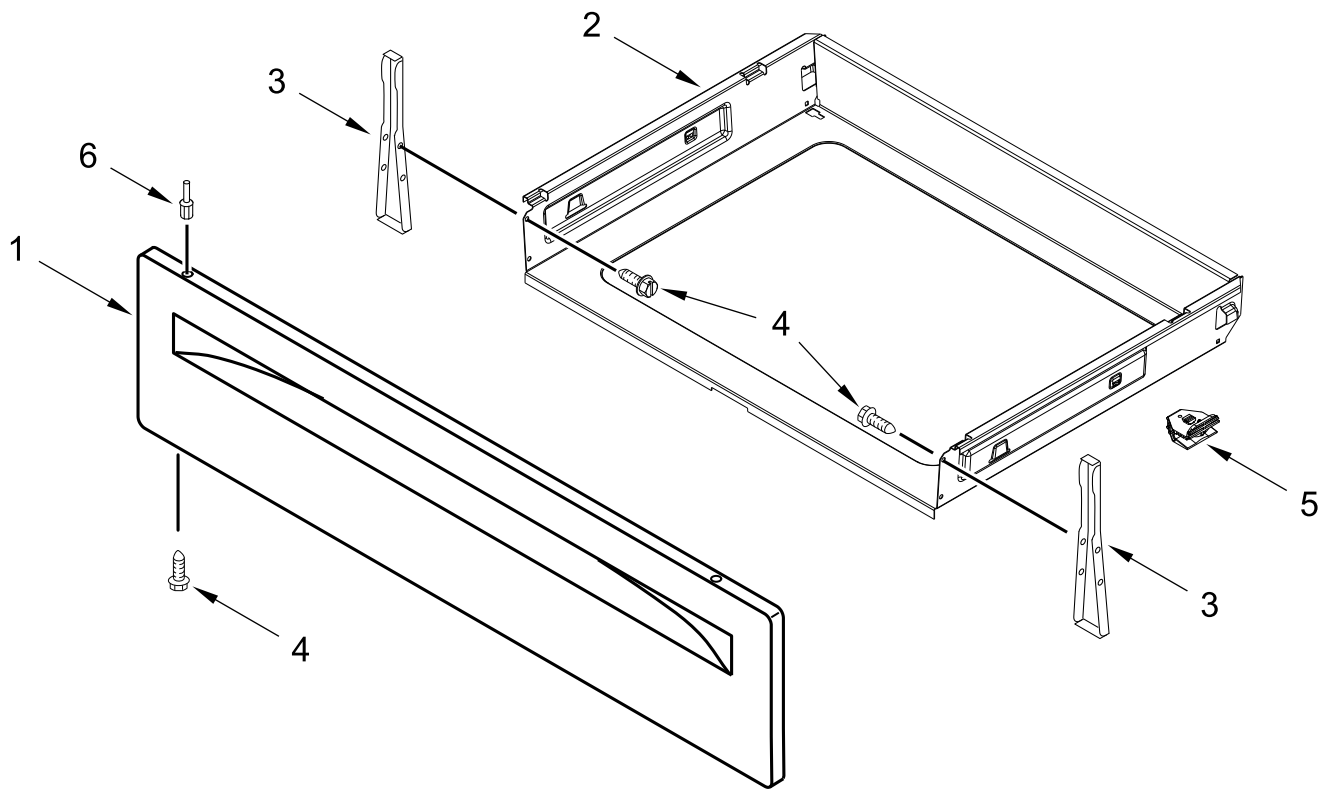

DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Panel, Drawer Front	3	W10462911	Bracket, Mounting	6		Rivet, Push
	W11123976	Black	4	3196169	Screw		3196813	Black
	W11123977	White	5	W10674708	Glide, Drawer Rear		3196814	White
2	W10688022	Drawer, Storage						

OPTIONAL PARTS (NOT INCLUDED)

REFINISHING MATERIAL

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

INSULATION

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	261514	Insulation (1-1/2" x 24" x 120")
	240132	Insulation (2-1/2" x 22" x 120")

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	4392899	Biscuit/Bisque
	511873	White Porcelain (2 oz.)

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	285006	Black

PAINT, BULK (1 QT.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

ACCESSORY PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	W10355016	Cleaner, Stainless Steel
	W10355049	Wipes, Stainless Steel Cleaning
	W10275756	Cleaner, Granite
	31617A	Cleaner, Grate & Drip Pan
	4396096RB	Griddle
	4396923	Grid, Broiler Pan and
	W10123240	Rack, Broiler Pan & Roasting
	4396927	Rack, Oven (Split)