




REFRIGERATOR

MODELS:

WRS315SDHT11 (Biscuit)


CABINET PARTS

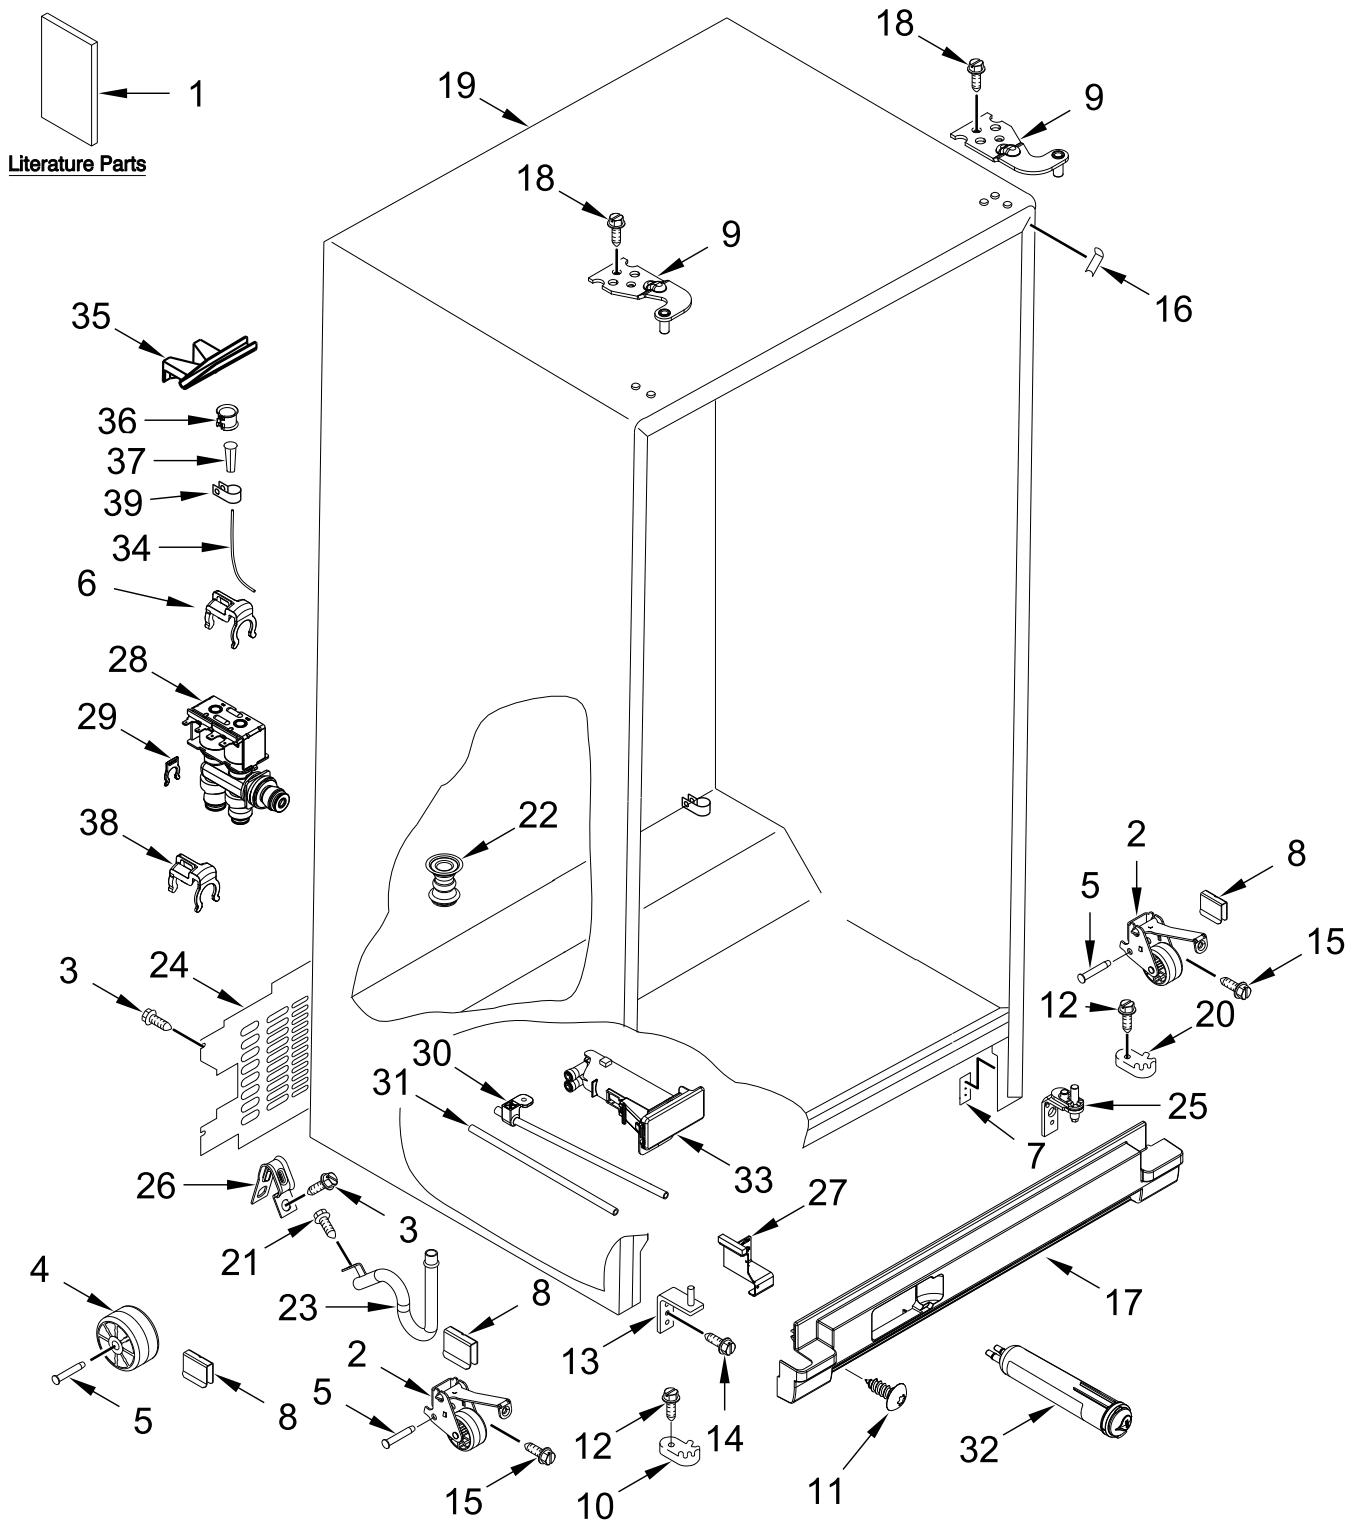

CABINET PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	13	W11093938	Assembly, Bottom Hinge (Freezer)	26	W11234470	Clamp, Plastic
	W11484052	Use & Care Guide	14	3400113	Screw	27	W10897565	Assembly, Bracket
	W11647255	Energy Guide	15	2152958	Screw	28	W11563296	Assembly, Filter Valve
2		Assembly, Roller	16		Filler, Wrapper	29	W11175632	Locking Ring (1/4)
	W10304660	Left Hand		W11219640	Biscuit		W11175631	Locking Ring (5/16)
	W10304659	Right Hand	17		Grille	30	W10900449	Tube, Filter Inlet
3	W10141645	Screw		W11226336	Biscuit	31	W10900447	Tube, Filter Outlet
4	2150304	Roller	18	W10290781	Screw, Hinge	32	W10735398	Filter, Water
5	2262072	Axle, Roller	19		Cabinet (Not A Servicable Part)	33		Housing, Water Filter
6	W11252188	Double Lock Ring	20	W10905504	Closer, Lower Cam Door (Refrigerator)		W11036339	Biscuit
7	W11036715	Plate, Screw (Refrigerator)	21	489464A	Screw	34	W10357076	Tube, Water
	W10904380	Plate, Screw (Freezer)	22	W11424515	Fitting, Drain	35	W11605929	Chute, Water
8	W11087168	Clip, Roller	23	W11404685	Extension, Drain Fitting	36	W10329003	Clamp, Tube
9		Hinge, Top	24	W11613261	Assembly, Cover	37	2181939	Insert, Tube
	W11167022	Left Hand	25	W11097327	Assembly, Bottom Hinge (Refrigerator - Also includes Door Cam)	38	W11091654	Connector, Double Lock
	W11167023	Right Hand				39	M0108107	Clamp, Tube
10	W11095731	Closer, Door (Freezer)						
11	W10308489	Screw (Grey)						
12	W10142234	Screw						


REFRIGERATOR LINER PARTS

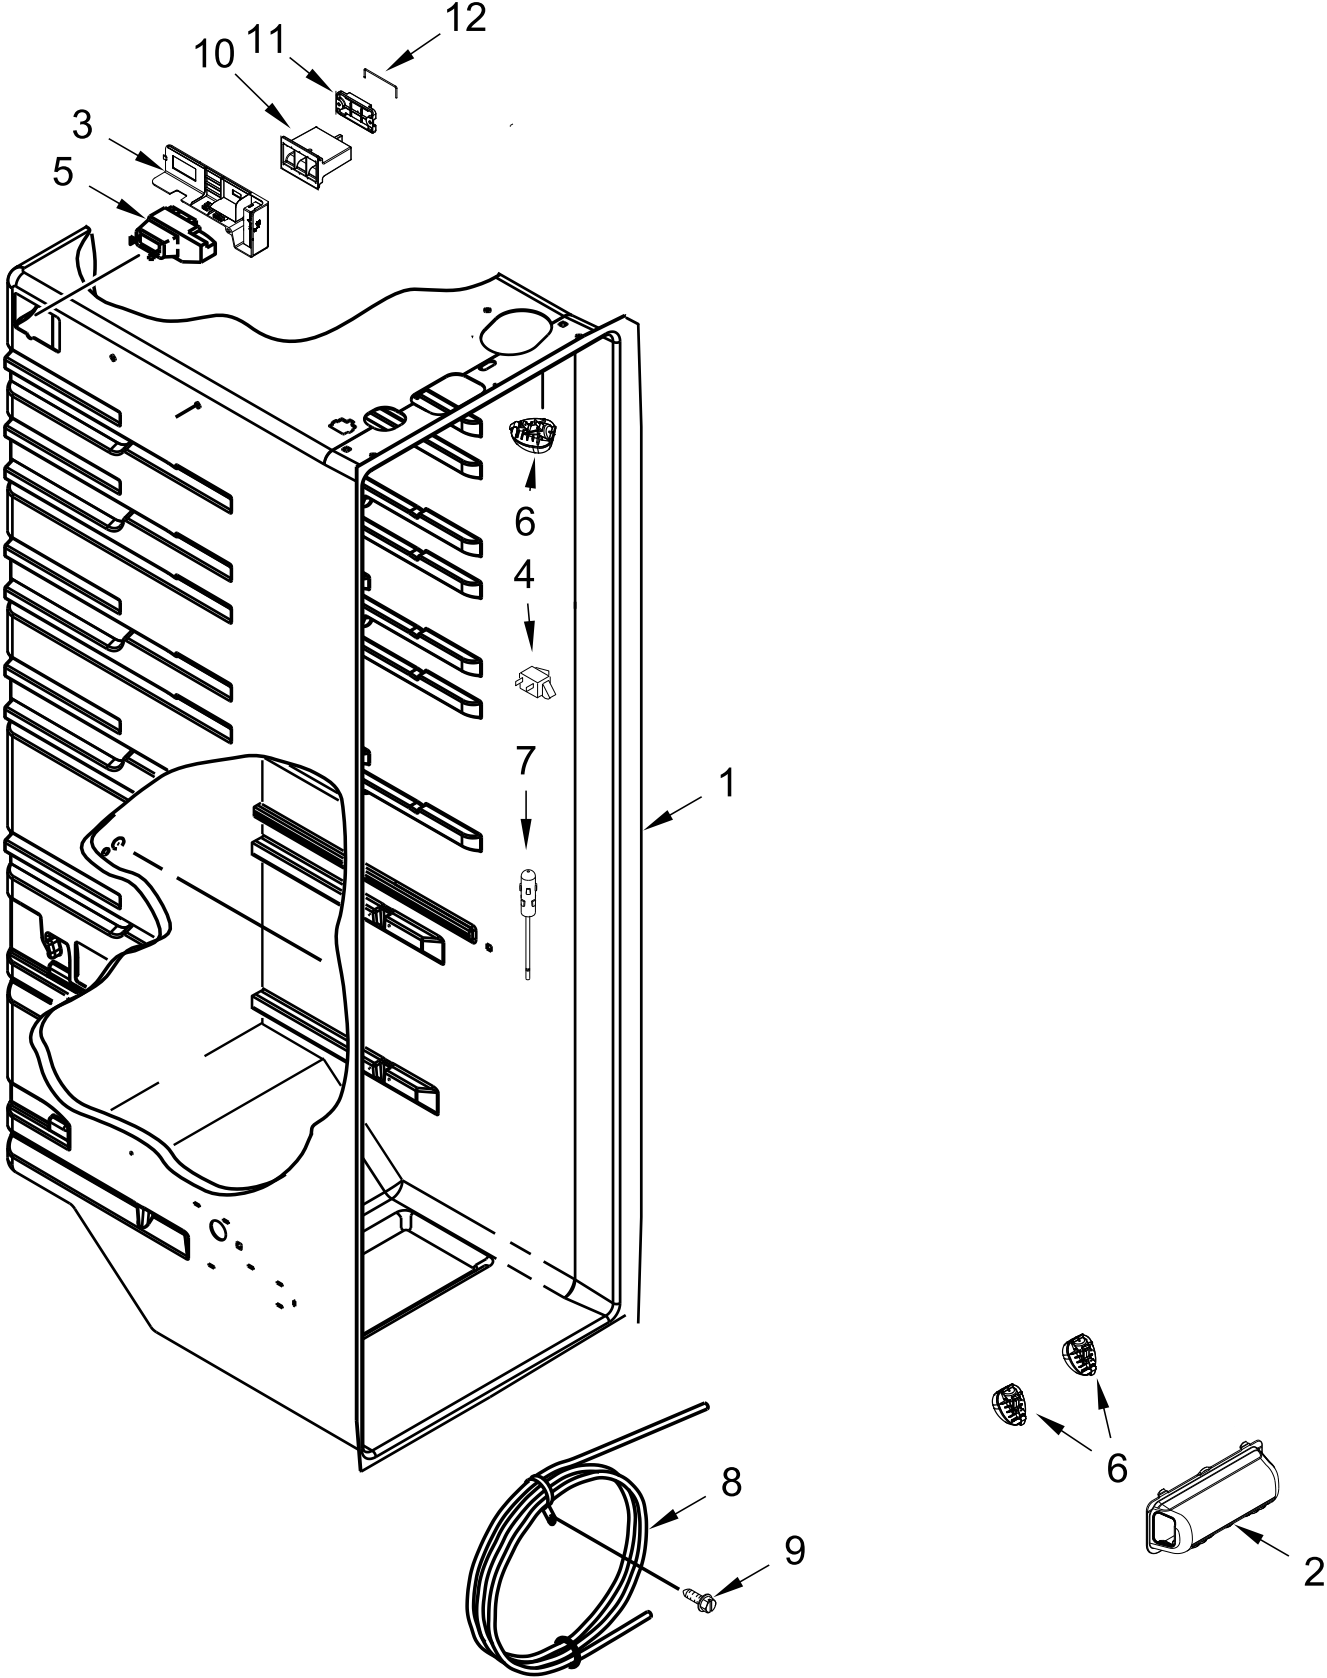

REFRIGERATOR LINER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Liner (Not A Serviceable Part)	4	W10847853	Switch, Rocker	9	W10141518	Screw
2	W10166130	Lens, Light (Includes Gasket)	5	W11264792	Diffuser, Air	10	W10901825	Slider, Housing
3	W11478200	Assembly, Control Box (Includes Electronic Control)	6	W11549780	Light Module, LED	11	W10901827	Slider
			7	W10384183	Thermistor	12	W10901826	Connecting Rod
			8	W11531179	Tubing, Water Reservoir			


REFRIGERATOR SHELF PARTS

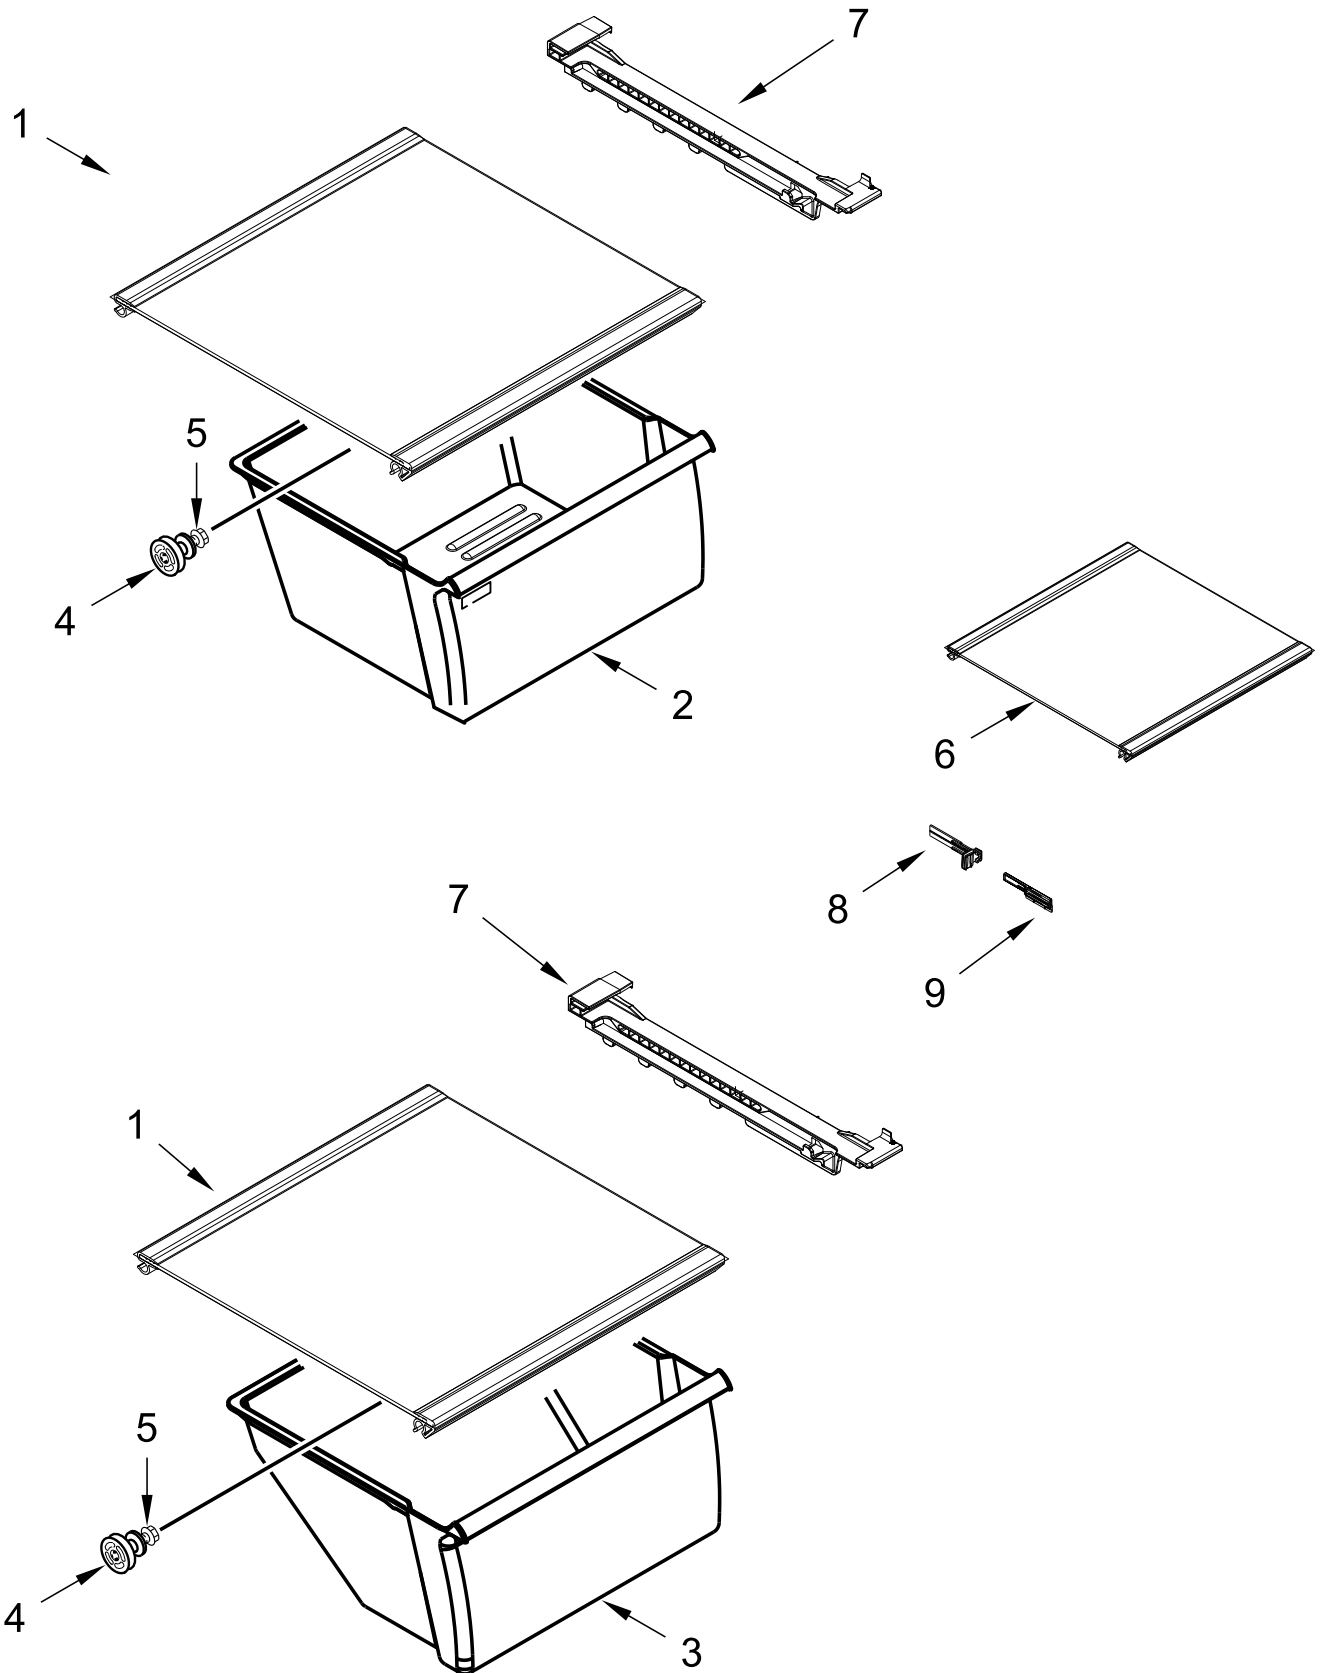

REFRIGERATOR SHELF PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11495083	Assembly, Cover	7	W11495059	Track, Holder (Left Hand)
2	W11046494	Pan, Crisper			
3	W11046495	Pan, Meat		W11495062	Track, Holder (Right Hand)
4	W10173126	Assembly, Shelf Stud			
5	W10191954	Screw	8	W10282883	Slide, Humidity
6	W11135529	Assembly, Shelf	9	W10282880	Housing, Humidity


FREEZER LINER PARTS

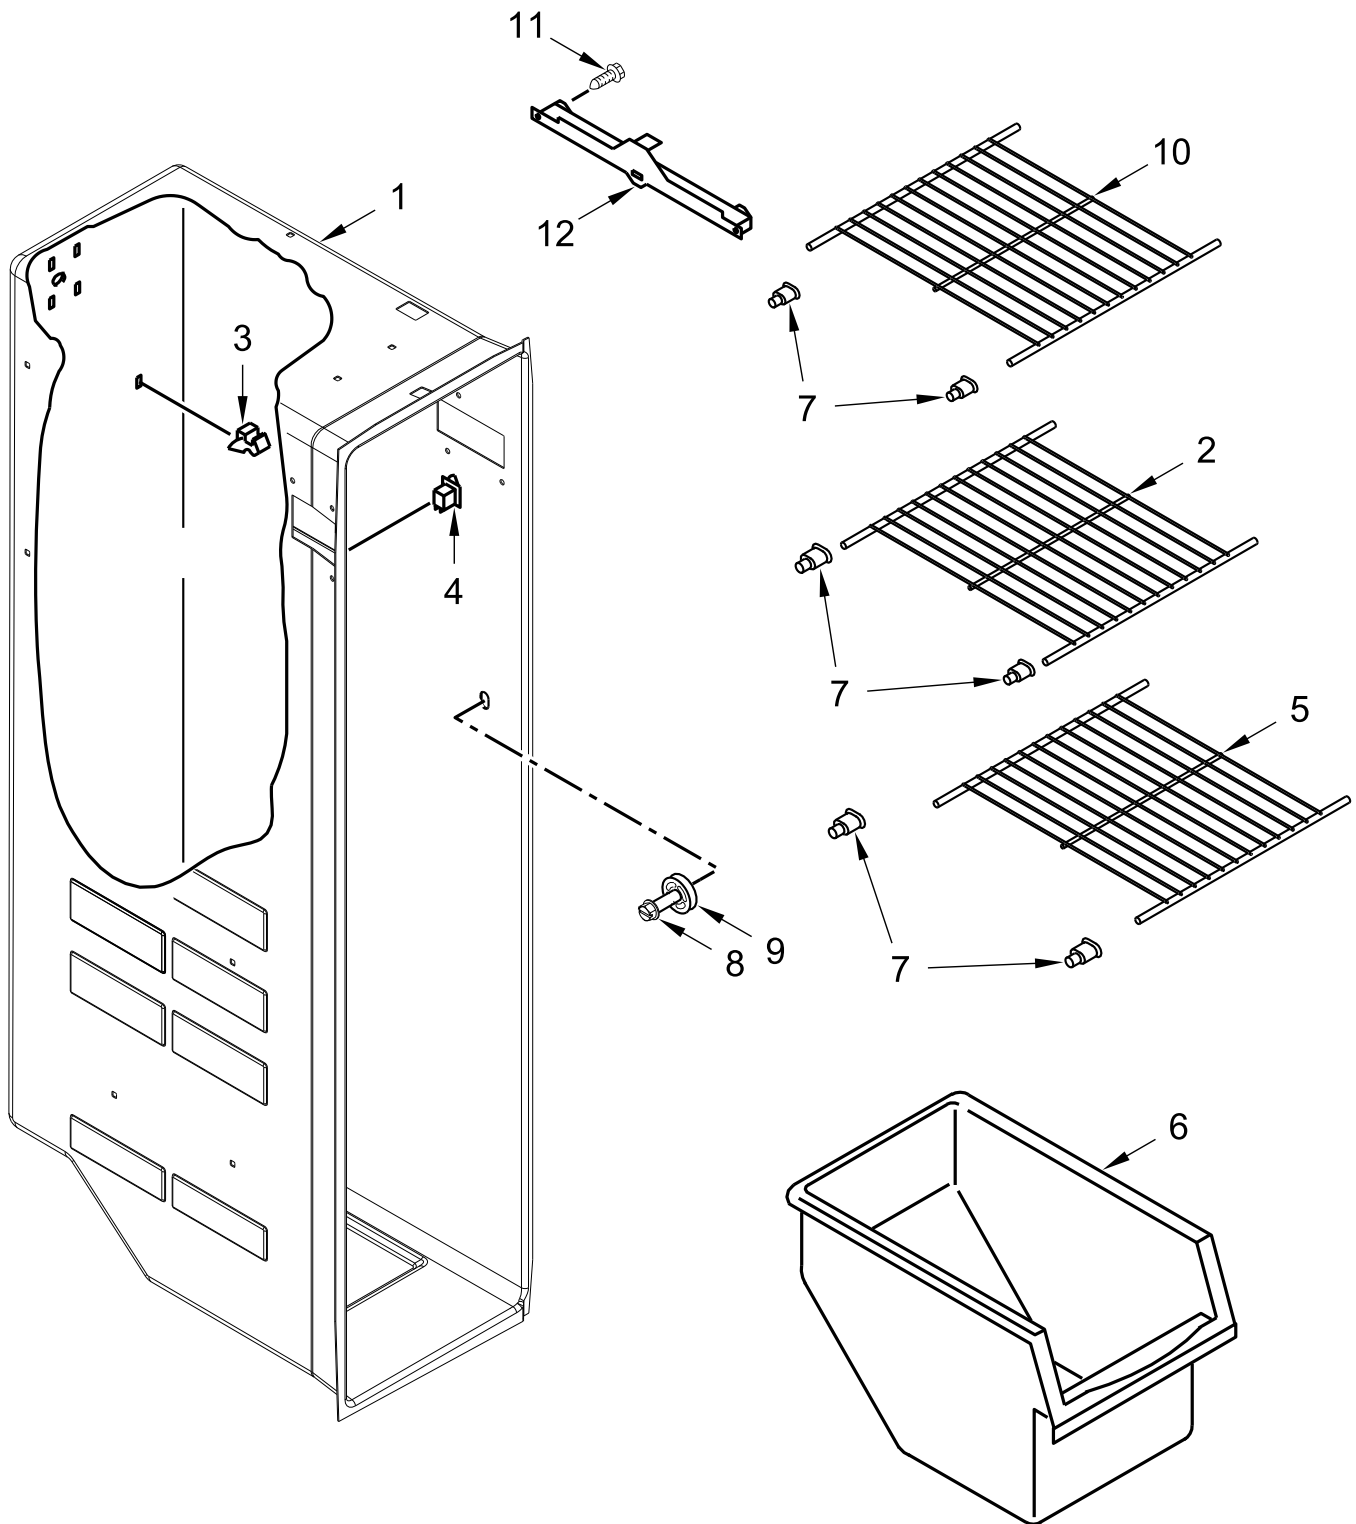

FREEZER LINER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Liner (Not A Serviceable Part)	6	W11427432	Bin, Freezer	12	W10845583	Slide, Ice Container (Right)
2	W10318948	Shelf, Wire	7	W10130299	Cup, Shelf			
3	2315163	Clip, Air Duct	8	W10191954	Screw		W10845585	Slide, Ice Container (Left)
4	W10847849	Switch, Light	9	2196206	Stud, Support			
5	W10318947	Shelf, Wire	10	W10318961	Shelf, Wire			
			11	489100	Screw			


MOTOR AND ICE CONTAINER PARTS

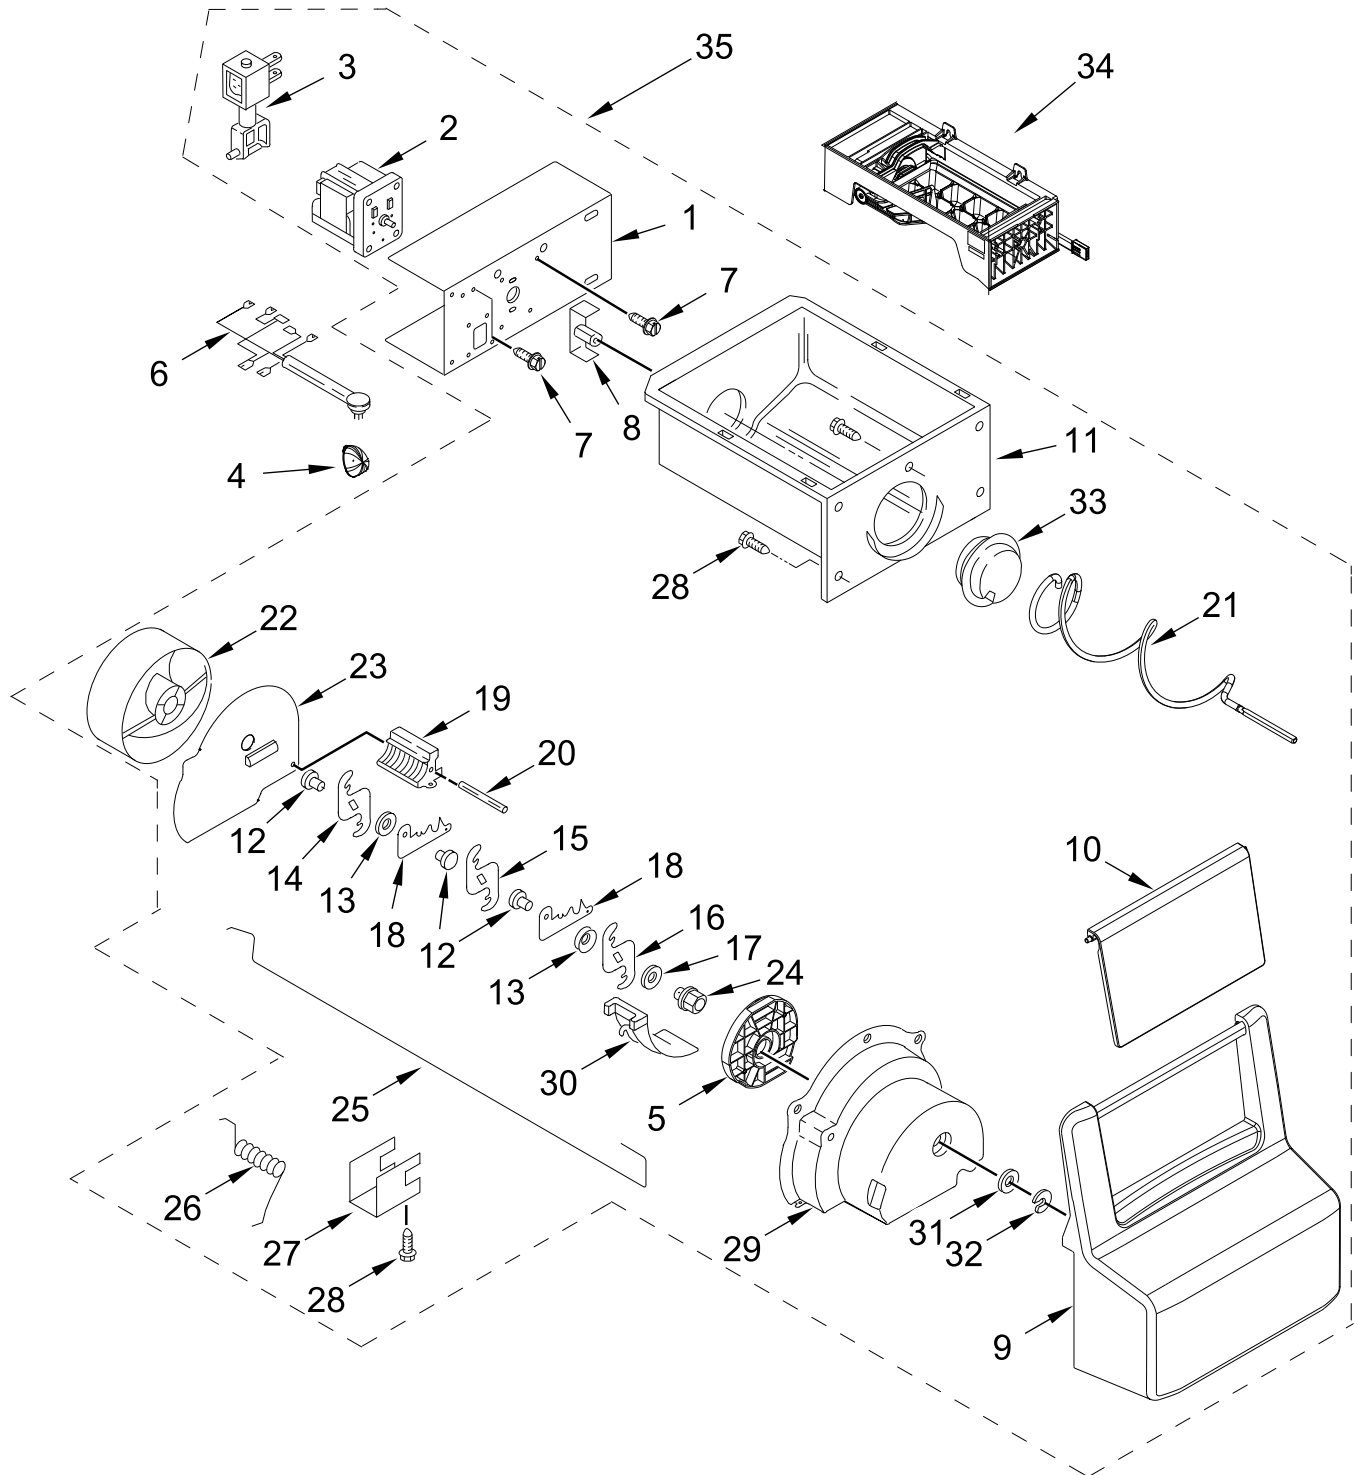

MOTOR AND ICE CONTAINER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11307589	Bracket, Motor	12	W11032812	Spacer, Step	26	1119020	Spring, Return
2	W10884561	Motor, Dispenser	13	W11032808	Spacer, Flat	27	1119021	Clip, Retainer (Dispenser Rod)
3	2152713	Assembly, Solenoid	14	W10278731	Blade, Rotary A	28	488886	Screw
4	W11549780	Light Module, LED	15	W10278732	Blade, Rotary B	29	W10185018	Housing, Crusher
5	W10138206	Spacer - Crusher Housing	16	W10278733	Blade, Rotary C	30	1119017	Deflector, Ice
6	W11218402	Assembly, Ice Dispenser Wiring	17	489234	Washer, Plain Upper Cam	31	489234	Washer, Plain Upper Cam
7	489399	Screw	18	W10181990	Blade, Fixed	32	489236	Ring, Retainer
8	W10169511	Coupling, Motor	19	W10189708	Block, Blade	33	W10698668	Coupling, Ice Conveyor
9	W11427433	Cover, Ice Container Front	20	489229	Pin, Roll	34	W11633658	Complete Icemaker Assembly
10	W11351746	Ice Door	21	W10295082	Auger	35	W10558423	Ice Container, Complete
11	W10670845	Container, Ice	22	W10698642	Drum			
			23	W10403781	Baffle, Floating			
			24	1119018	Nut, Bearing			
			25	W10838981	Arm, Control			


REFRIGERATOR DOOR PARTS

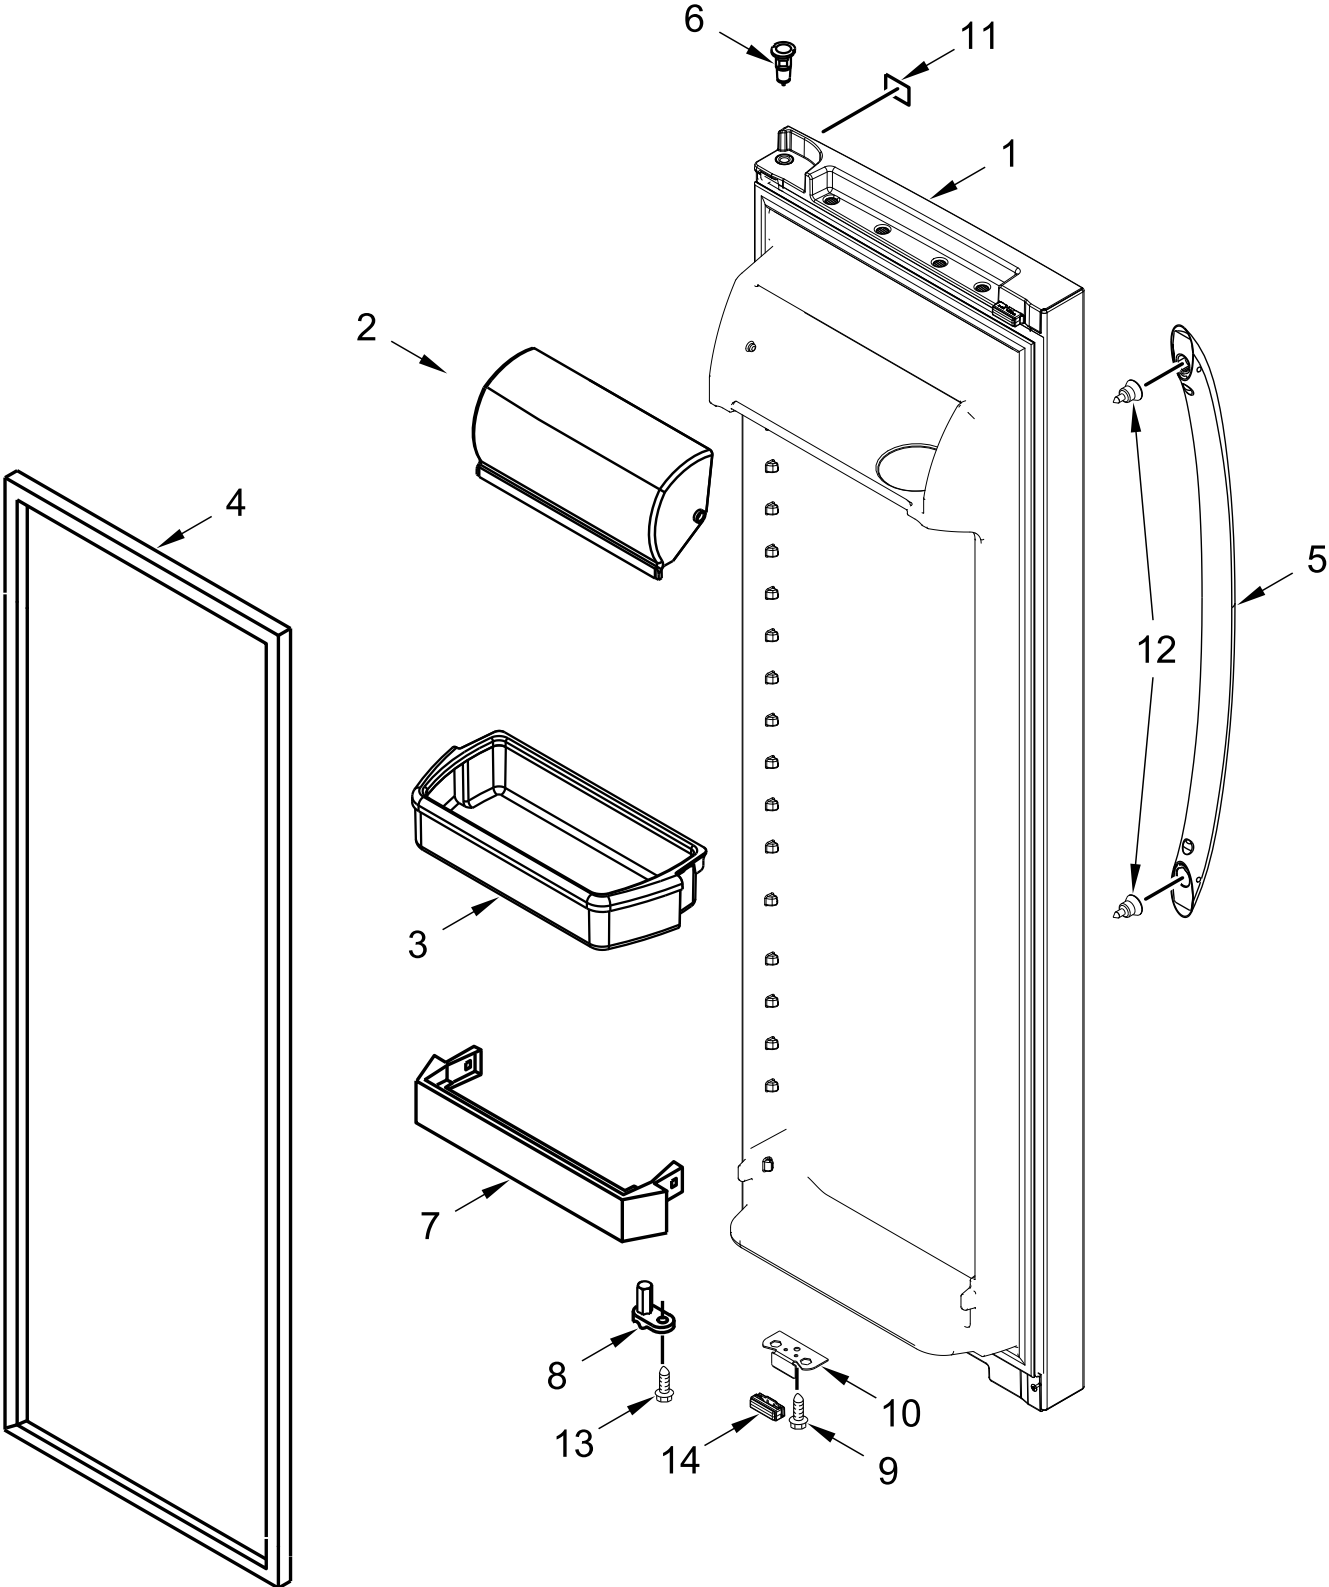

REFRIGERATOR DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Door, Refrigerator (Includes Door Gasket)	5		Handle	11	W10884773	Badge
	W10912135	Biscuit		W11289636	Biscuit	12	W10460893	Screw
2	2256101	Door, Compartment	6	2200087	Thimble	13	W10296804	Screw
3	W10900538	Bin, Door	7	2309941	Trivet	14		Bumper, Door
4		Gasket, Door	8	W10900464	Thimble, Cam		W10407203	Biscuit
	W10911412	Beige	9	W10296816	Screw			
			10		Bracket, Door Stop			
				W10900463	Black			


FREEZER DOOR PARTS

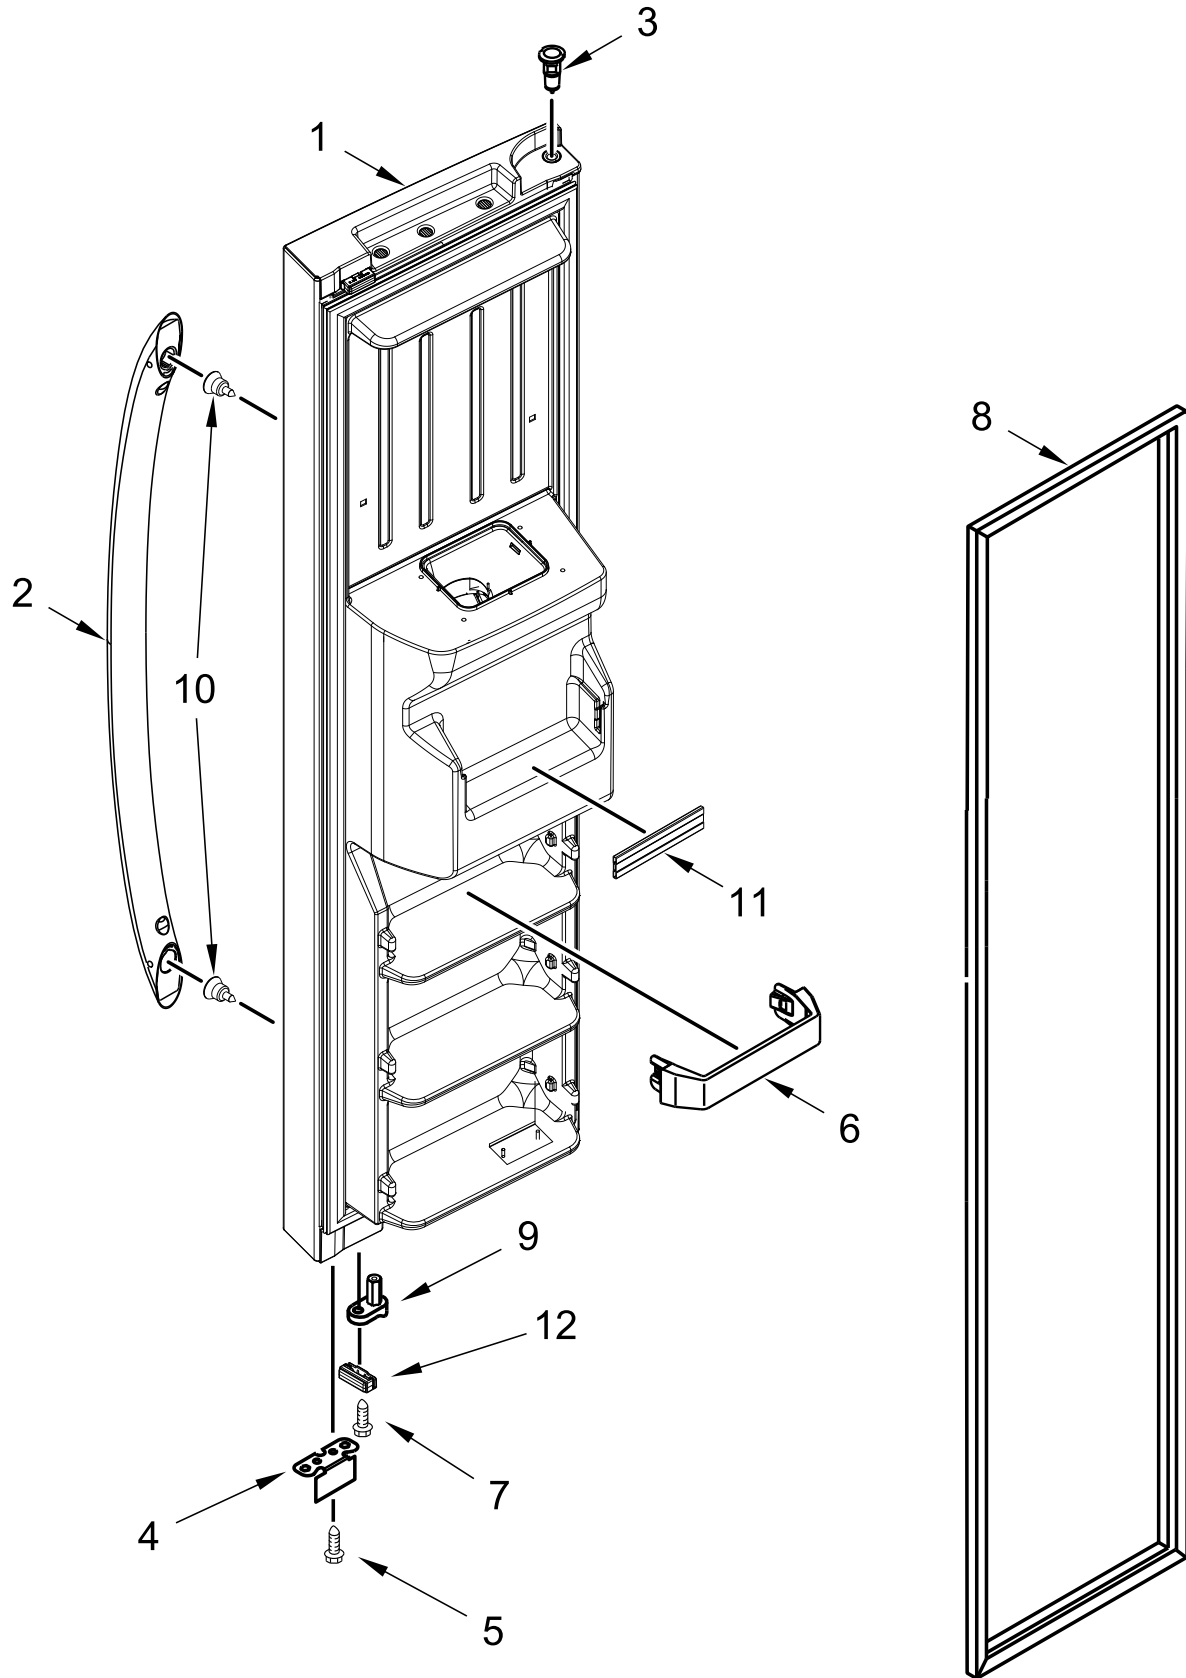

FREEZER DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Door, Freezer (Includes Door Gasket and Dispenser Parts)	5	W10296816	Screw	11	W10307494	Trim, Door Shelf
	W11025562	Biscuit	6	2309718	Trivet	12		Bumper, Door
2		Handle	7	W10296804	Screw		W10407203	Biscuit
	W11289636	Biscuit	8		Gasket, Door			
3	2200087	Thimble		W10912123	Beige			
4	W11481757	Bracket, Door Stop	9	W10900532	Thimble, Cam			
			10	W10460893	Screw			


DISPENSER PARTS

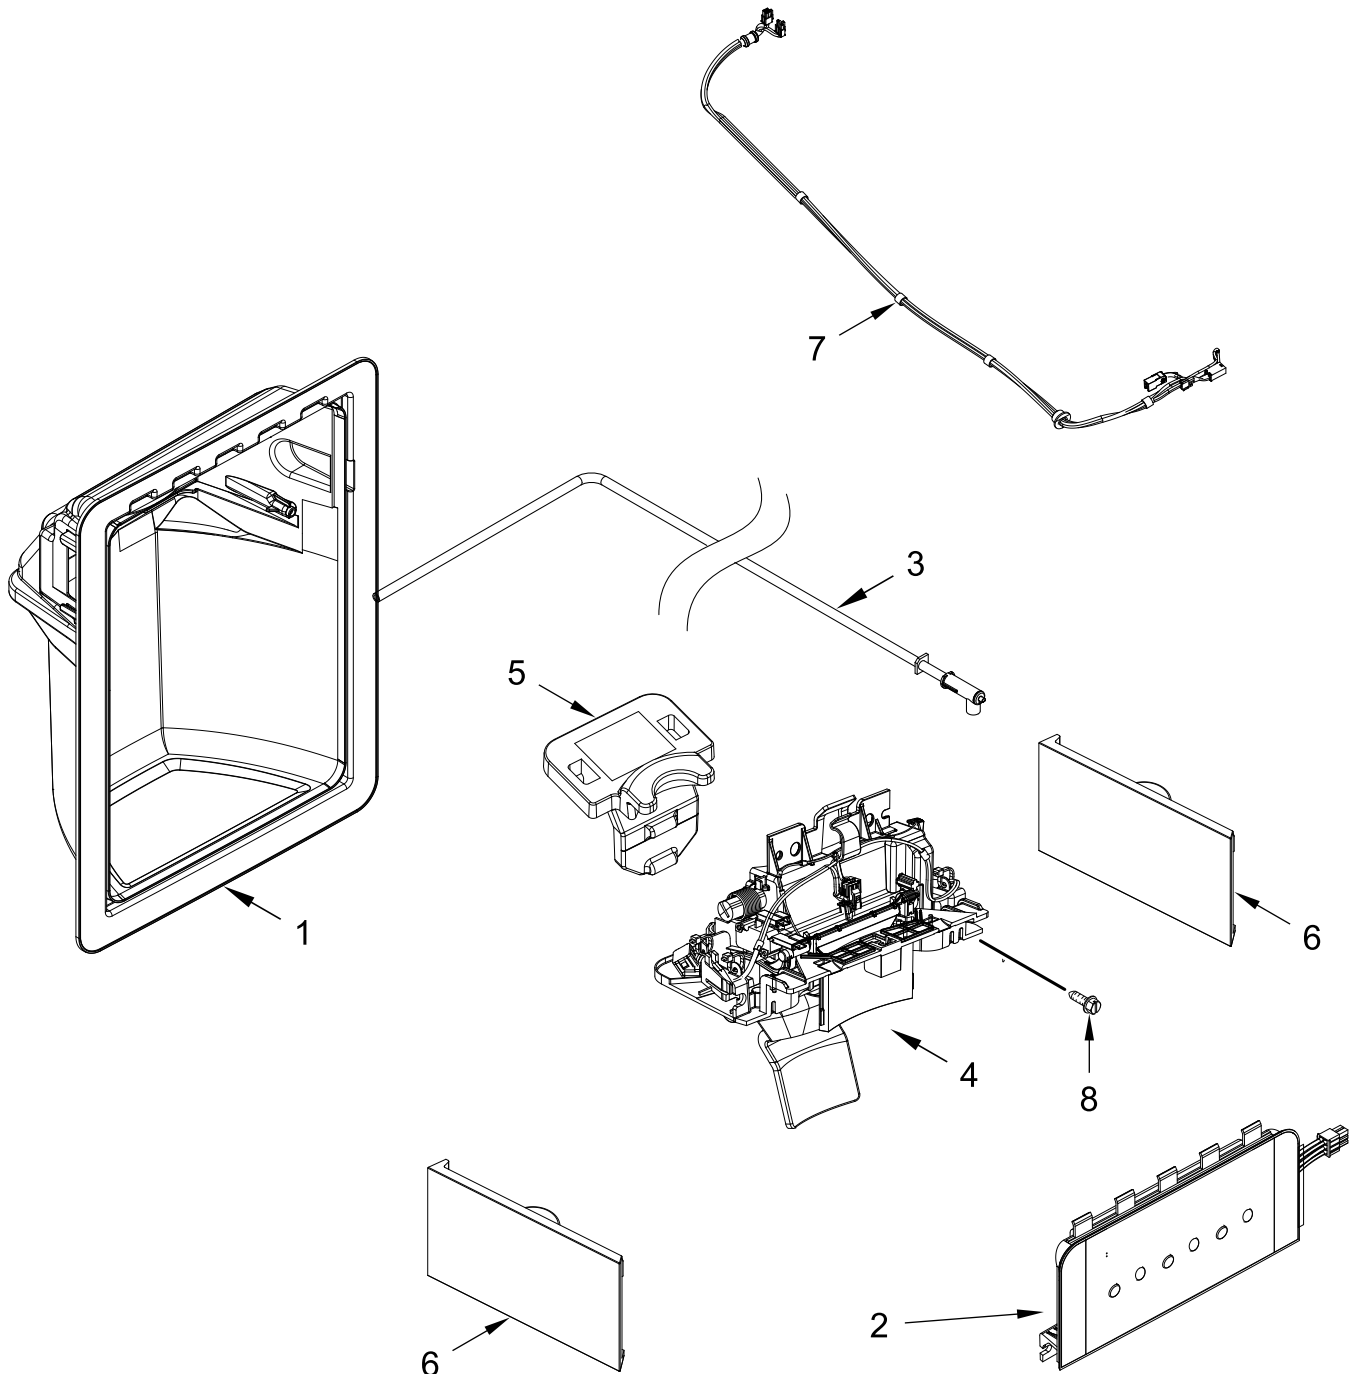

DISPENSER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Housing, Dispenser (Not Serviced)	3	W10898317	Assembly, Water Fitting	6		Cover, Dispenser Front
2		Assembly, User Interface (Includes Light Feature)	4		Assembly, Separator		W11183316	Biscuit (Left Hand)
				W11604217	Biscuit		W11183312	Biscuit (Right Hand)
	W10922070	Desert Sparkle	5	W11039857	Retainer, Separator Hose	7	W10898319	Harness, Wire
						8	8281163	Screw (Stainless)


AIR FLOW PARTS

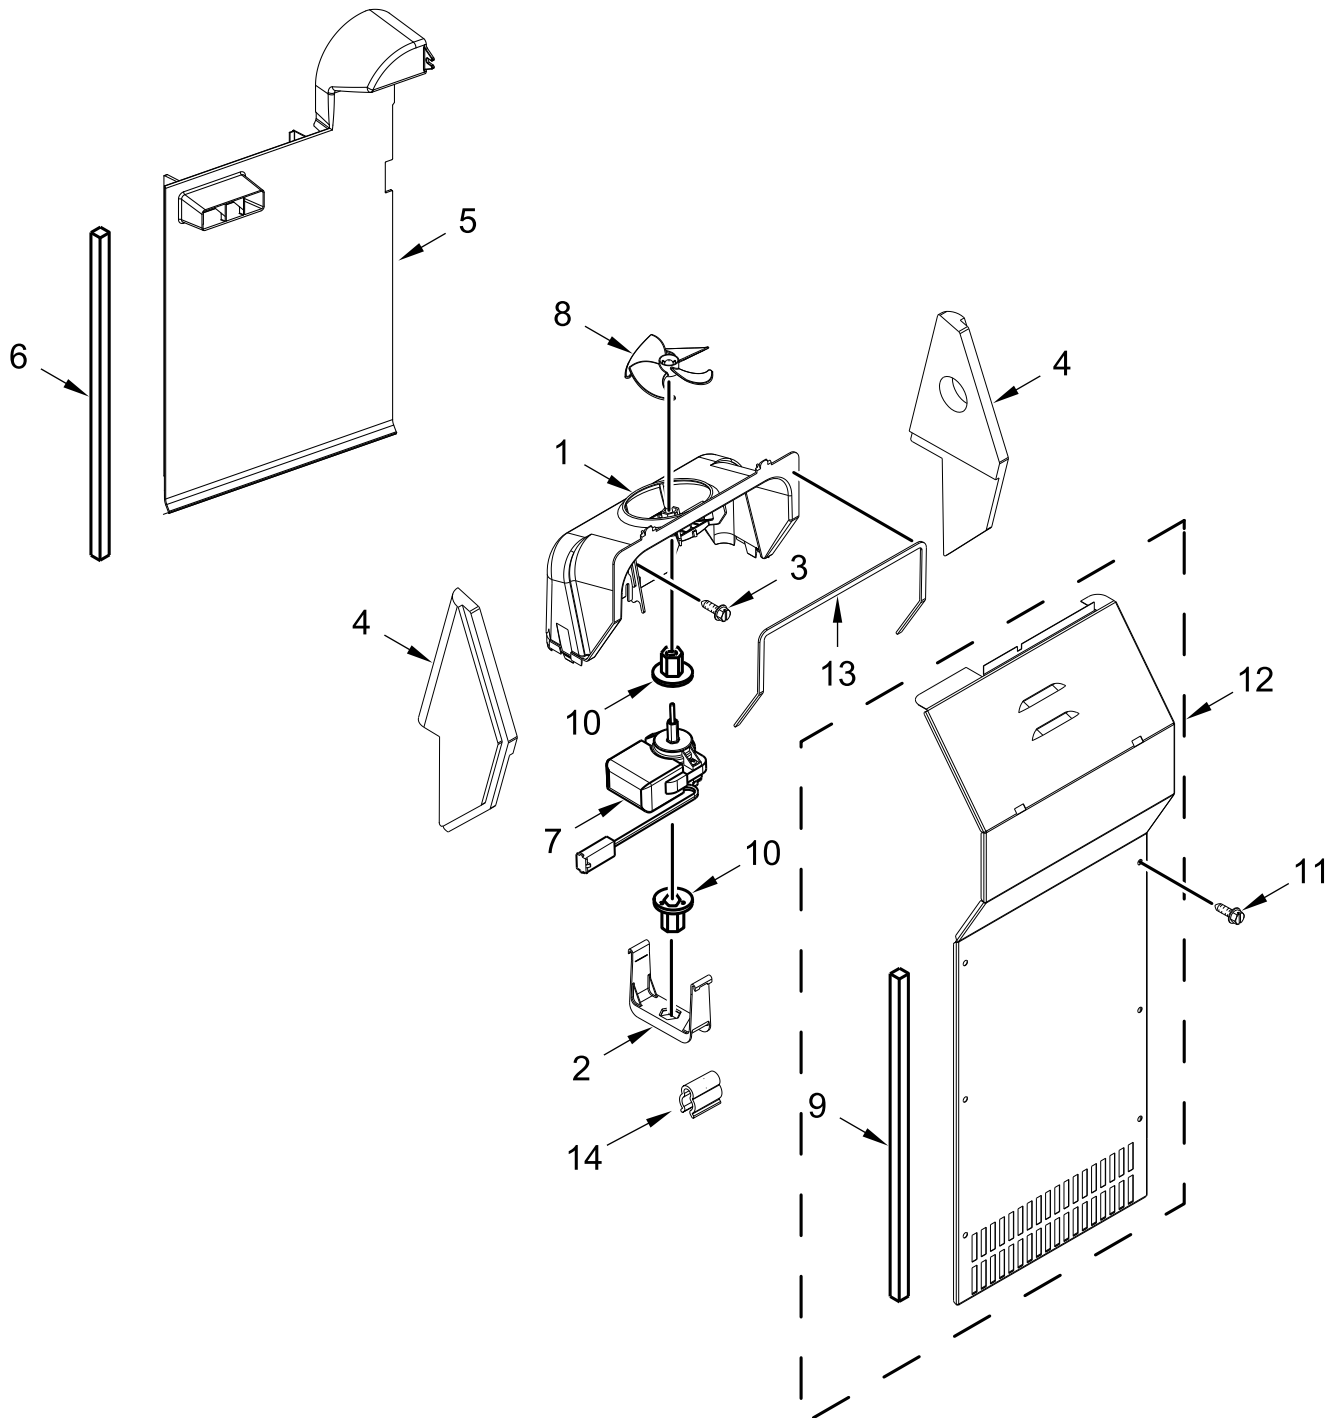

AIR FLOW PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11228713	Scroll, Fan	6	W10252477	Gasket, Air Duct	13	2155789	Gasket
2	W10188846	Retainer, Fan Motor	7	2315549	Motor, Fan	14	W11437914	Clip, Evaporator Thermistor
3	489478	Screw	8	2169142	Blade, Fan			
4		Support, Fan Scroll	9	2304241	Gasket			
	W11414496	Left Hand	10	2176759	Grommet, Motor			
	W11414497	Right Hand	11	W10142292	Screw			
5	W11110658	Duct, Freezer Air	12	W10463013	Cover, Evaporator			

UNIT PARTS

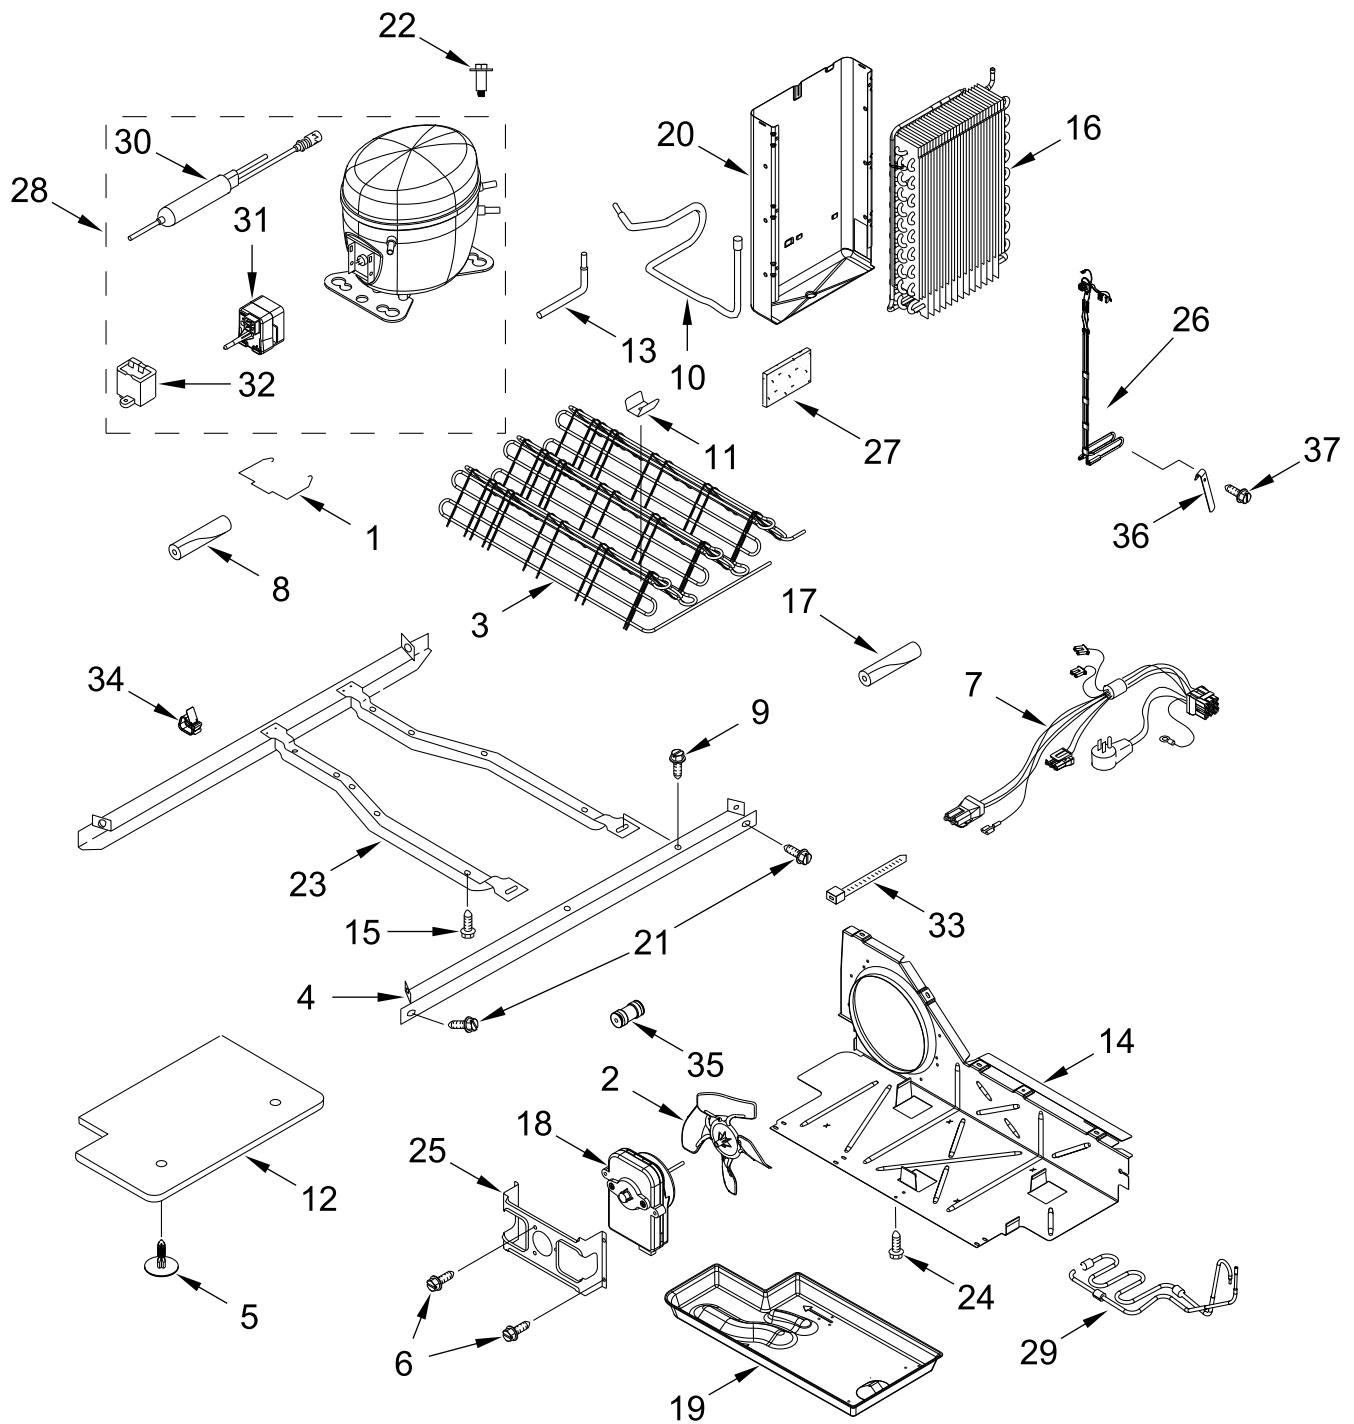

UNIT PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11495051	Strap, Bale	17	2161302	Sleeve	30	W10805035	Drier (Service Drier Without Dye)
2	2225834	Blade, Fan	18	W11546724	Motor, Condenser Fan			(Also Order the Following Lokring™ Parts)
3	W11553540	Assembly, Condenser (Also Order the Following Lokring™ Parts)	19	W11562498	Tray, Evaporator			
			20	W11400740	Assembly, Heat Shield and Drain Pan			
	W11506623	5 NK MS 00 (High Side to Condenser)	21	489340	Bolt		W11504433	6/4 NR MS 00 (Heat Loop to Drier)
			22	W10476309	Screw			
	W11504445	5/4 NR MS 00 (Suction Line to Condenser)	23	W10900446	Frame, Unit Mounting (Includes Unit Mounting Rail)		W11504447	5/1.8 NR MS 00 (Capillary Tube to Drier)
4	W10900442	Rail, Unit Mounting	24	489464A	Screw	31	W11359381	Device, Combination Start (Start Relay and Overload)
5	489396	Clip	25	2181929	Bracket, Fan Mounting			
6	8533993	Screw	26	W11573117	Assembly, Defrost Heater and Evaporator Fan Harness (Includes Thermal Fuse)	32	W10590083	Capacitor
7	W11383260	Assembly, Unit Wire (Includes Power Cord)				33	2263990	Tie, Wire
8	W10303521	Sleeve	27	2169104	Insulation, Sound Deadening	34	2326941	Clip, Wire
9	489427	Screw	28	W11369198	Compressor (Also Order the Following Lokring™ Parts)	35	W10271541	Connector, Union
10	W11386791	Tube, Suction				36	W11399989	Heat Probe
11	2311725	Clip, Condenser				37	489478	Screw
12	W10897560	Assembly, Unit Cover (Bottom)		W11504415	8.5/8 NR MS 00 (Suction Tube to Compressor)			REFRIGERANT CHARGE 68 grams (R600a)
13	2325479	Tube, Process						
14	W10896764	Baffle, Air		W11504431	7/5 NR MS 00 (High Pressure Side to Compressor)			
15	8281232	Screw						
16	W11357918	Evaporator (Also Order the Following Lokring™ Parts)		W11506619	8 NK MS 00 (Process Tube to Compressor)			
	W11504449	4/2 NR AL 00 (Capillary Tube to Evaporator)	29	W11442858	Assembly, Precooler Formed			
	W11506619	8 NK MS 00 (Suction Line to Evaporator)						

OPTIONAL PARTS

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	350942	White Primer
	350939	Enamel, Black
	350930	White
	4392901	Biscuit and Bisque

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	72032	Black
	4392899	Biscuit and Bisque
	W10134625	Apollo Grey

PAINT, BULK (1 QT.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)
	4392900	Biscuit/Bisque

TORX SCREW WRENCH

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	1117510	Torx Key